



座椅


Pilot Seat

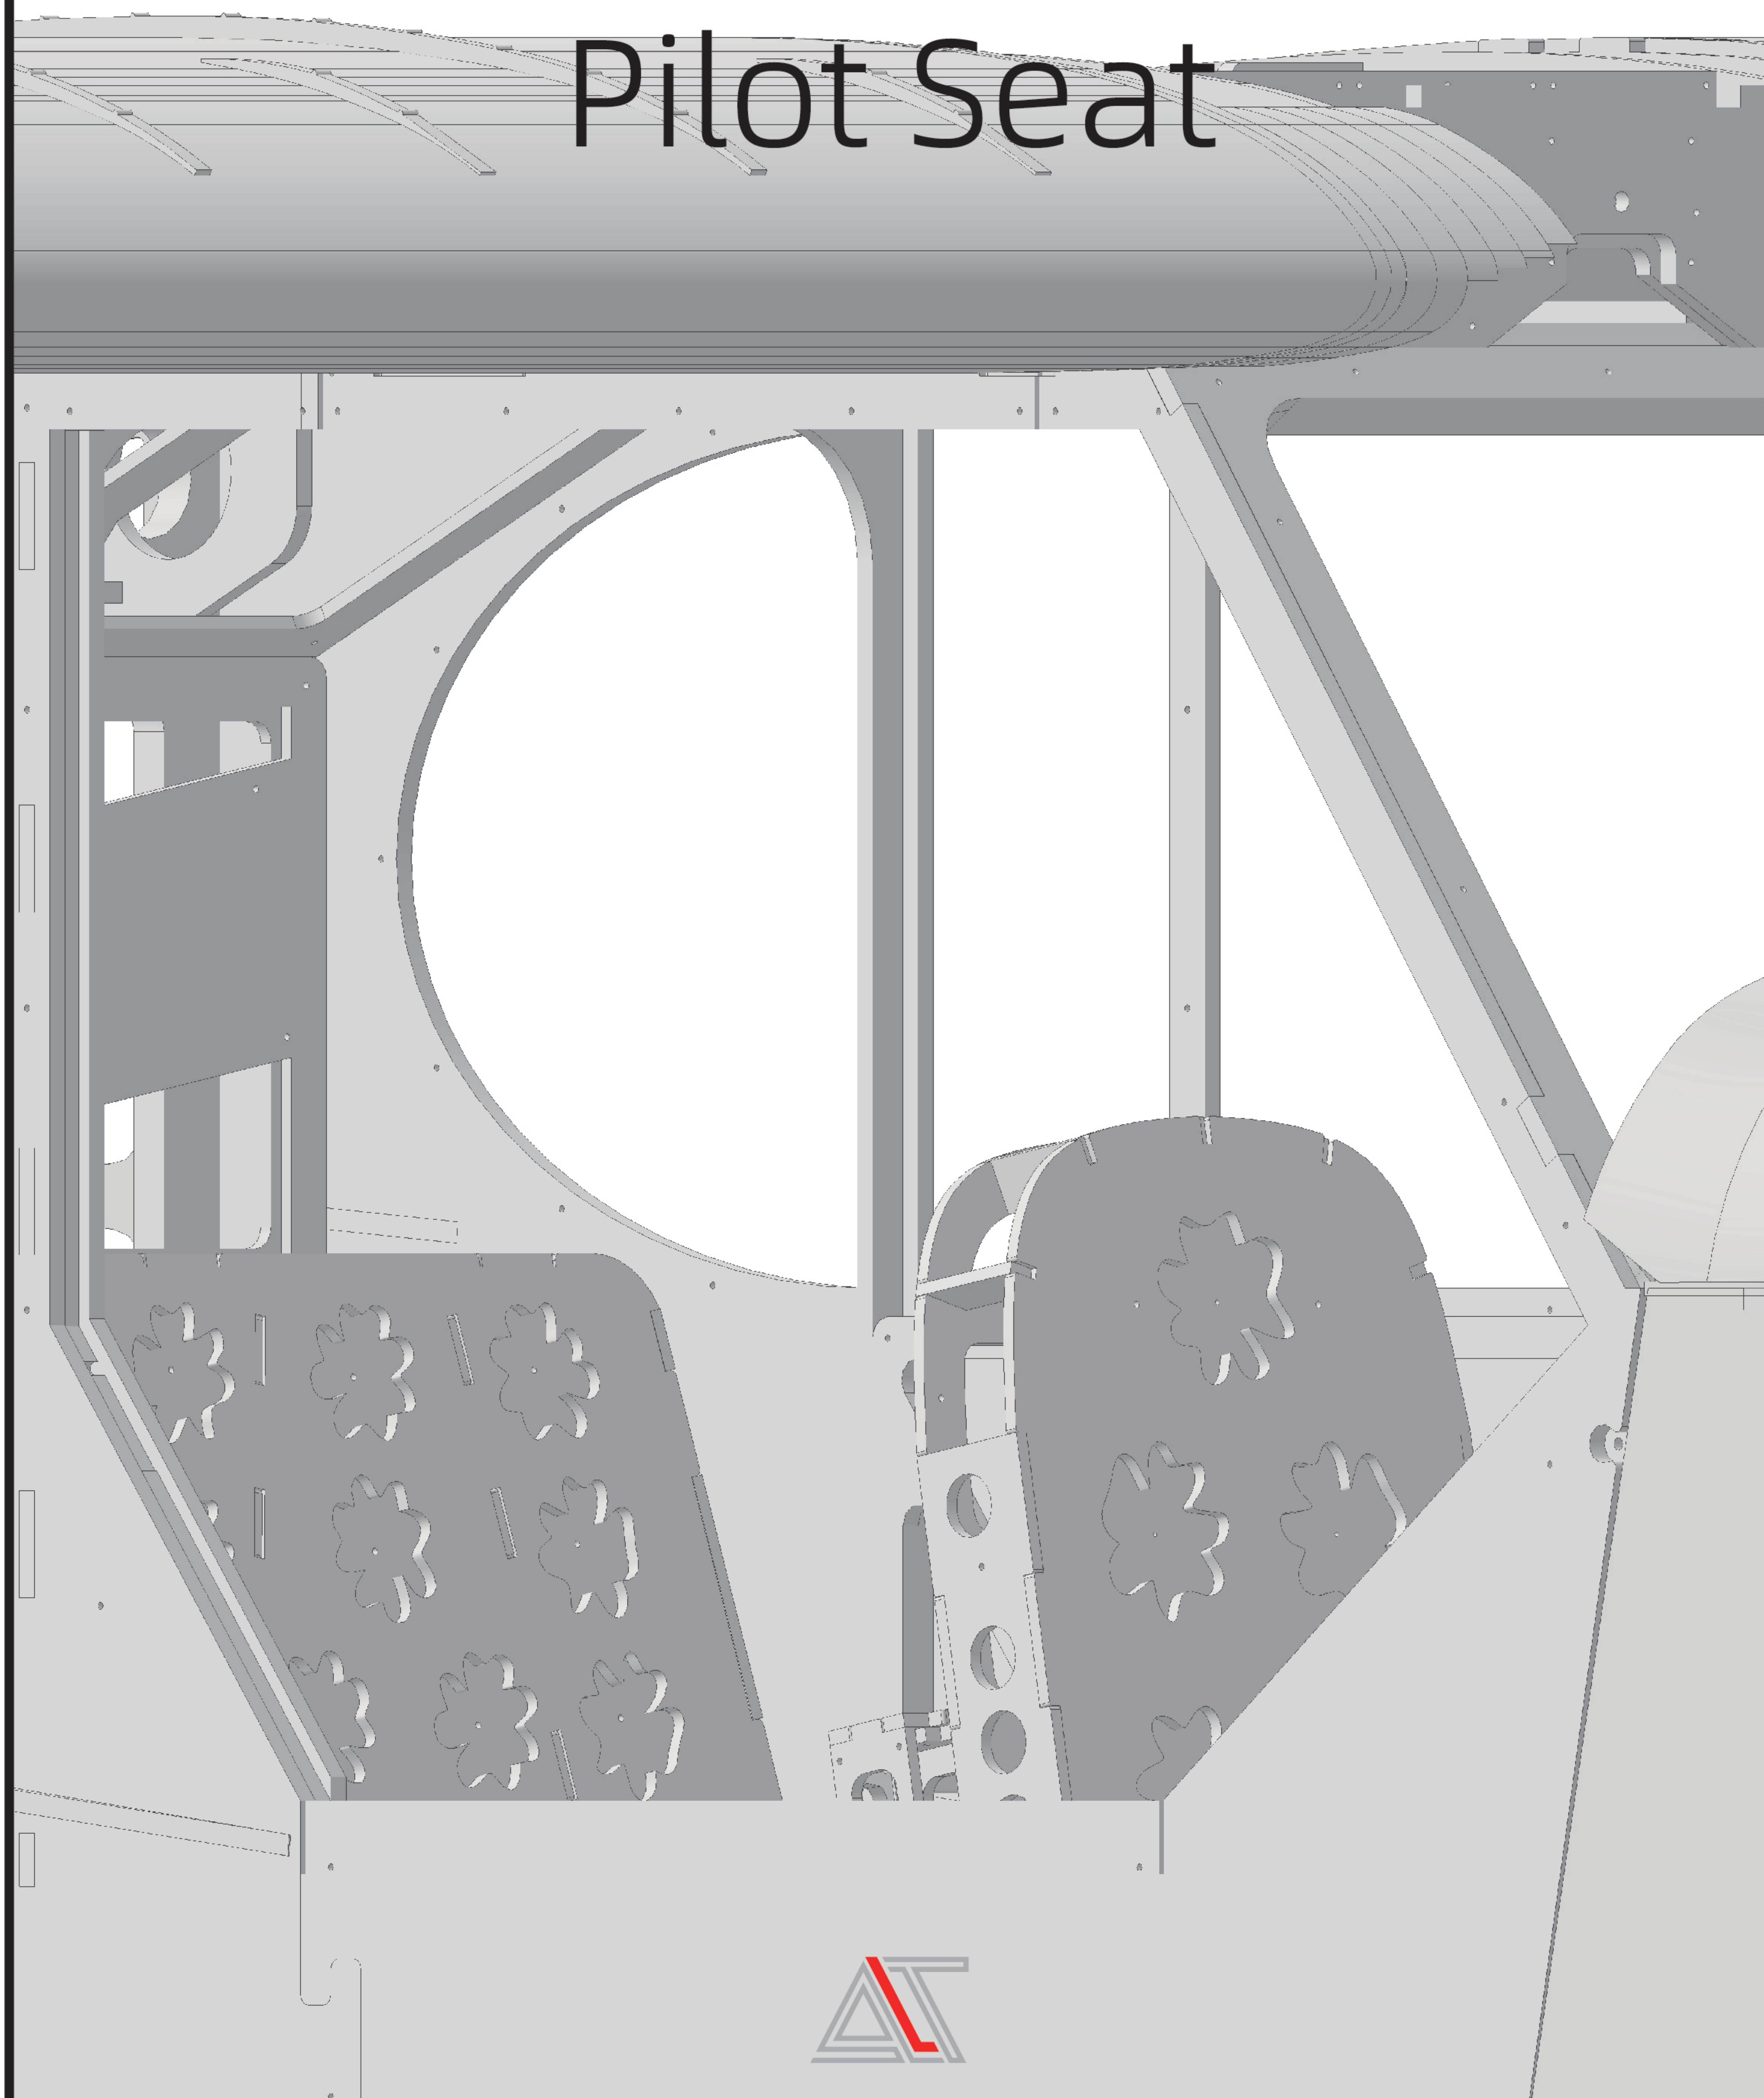


座椅F Pilot Seat F

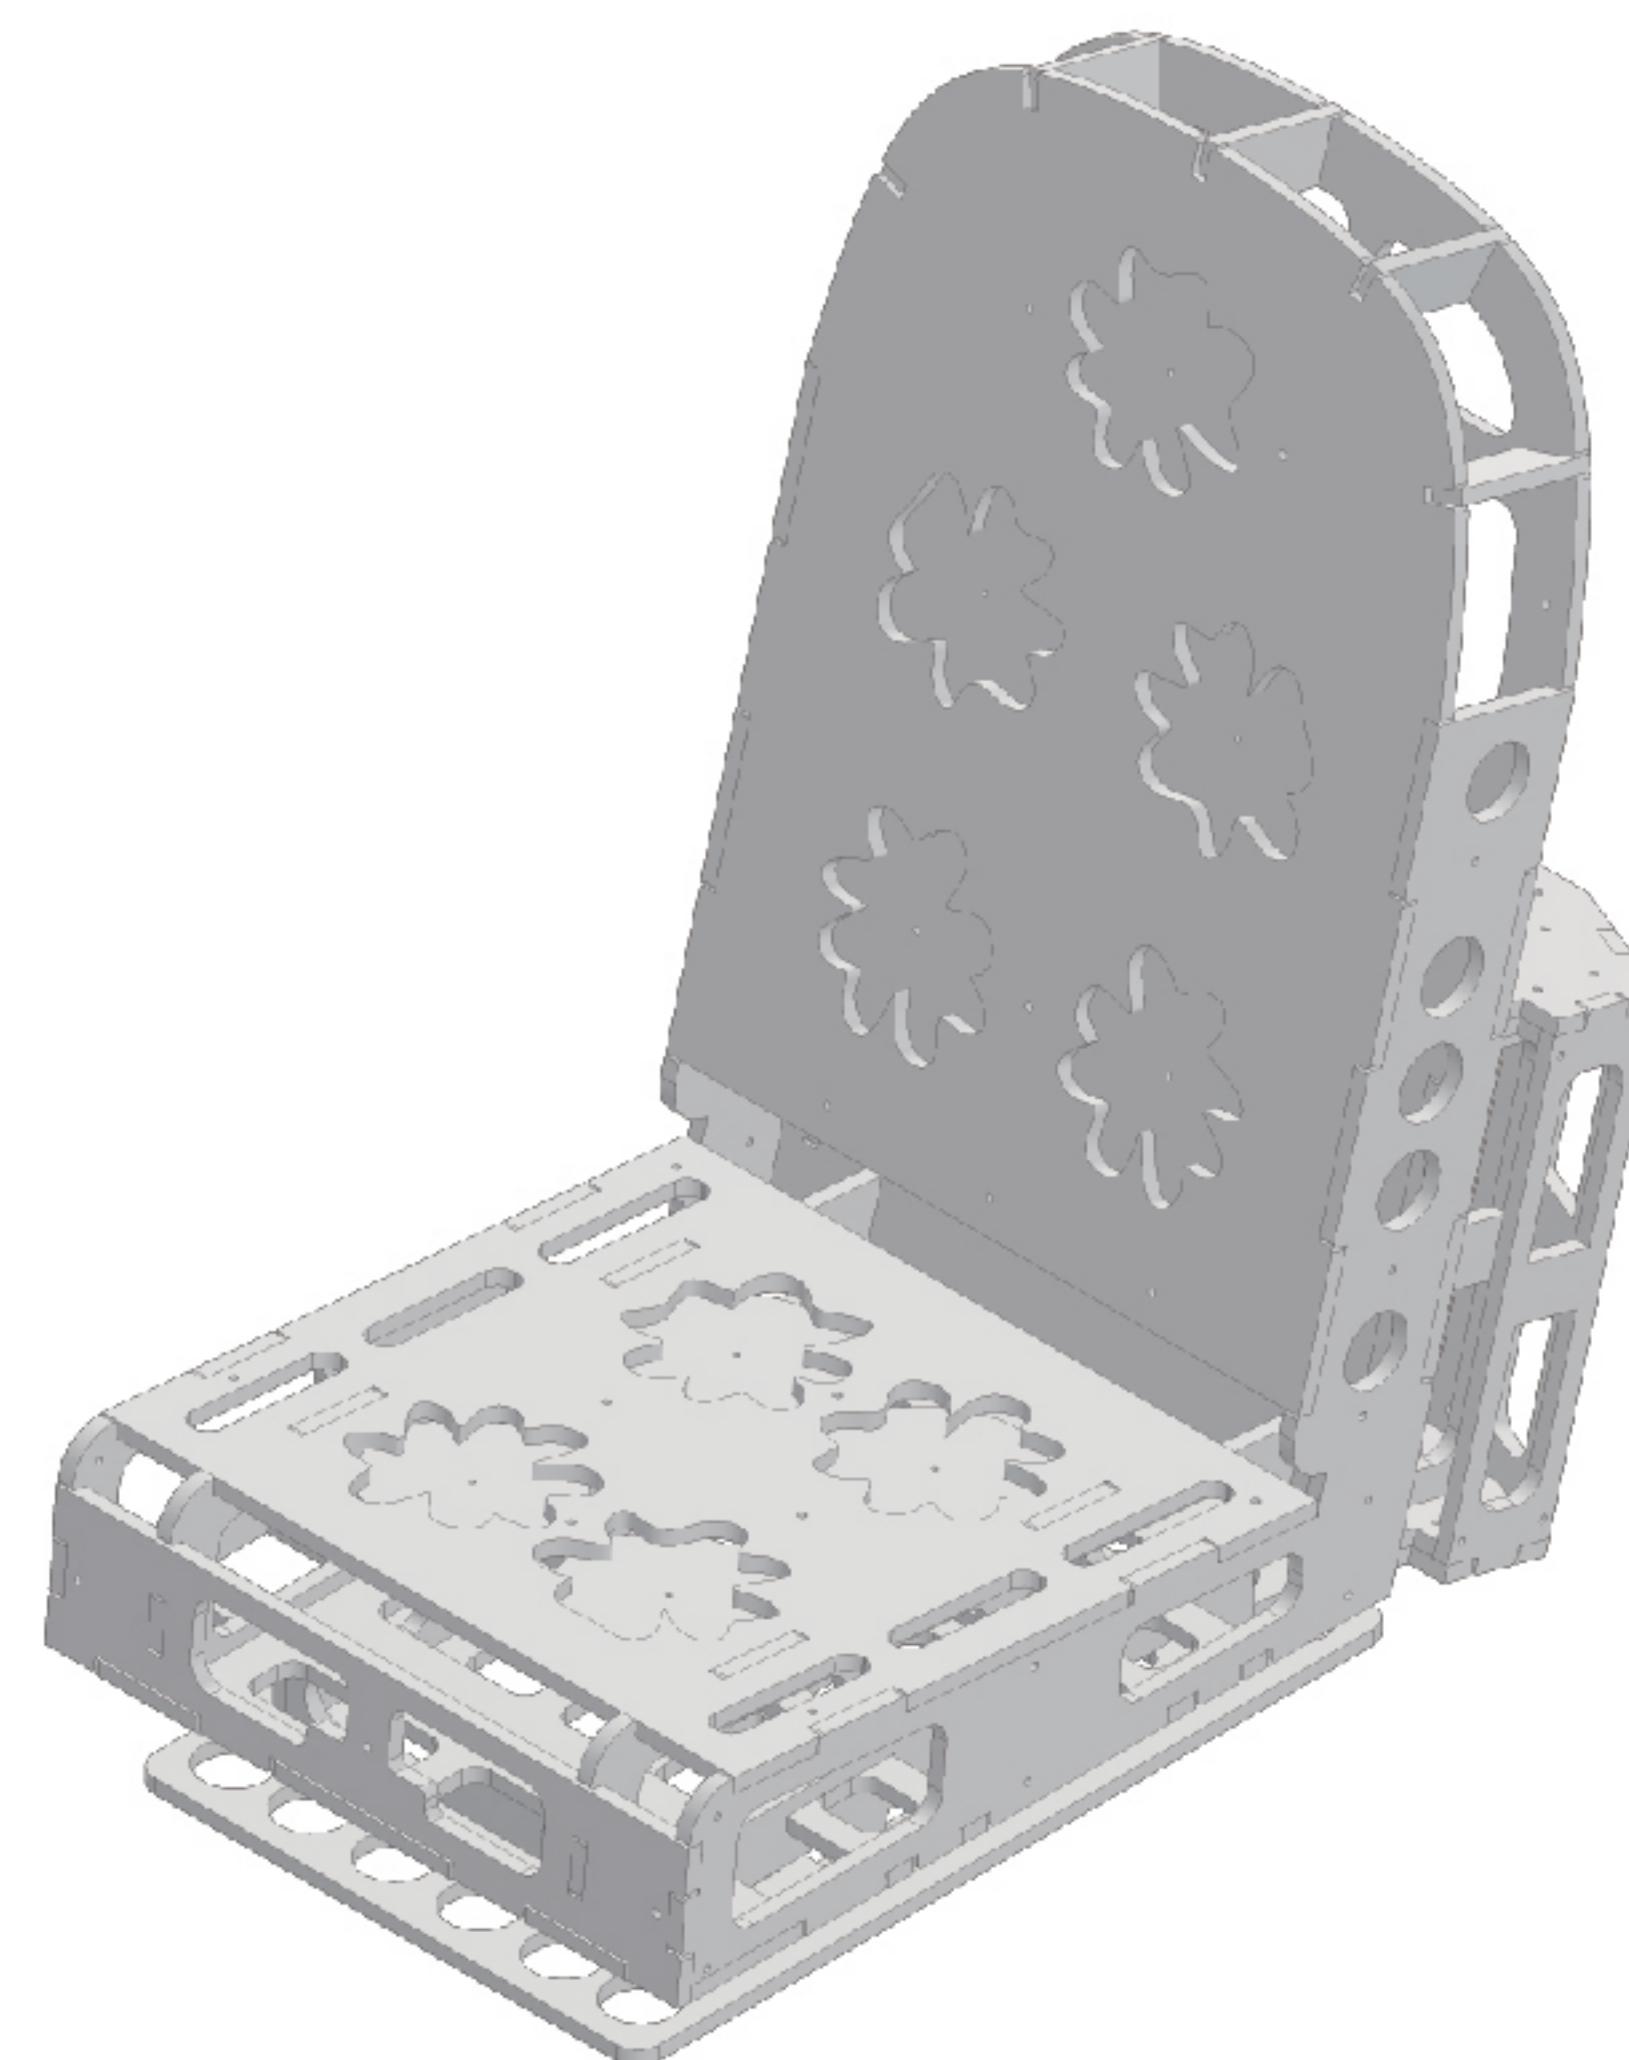


ST-2-01

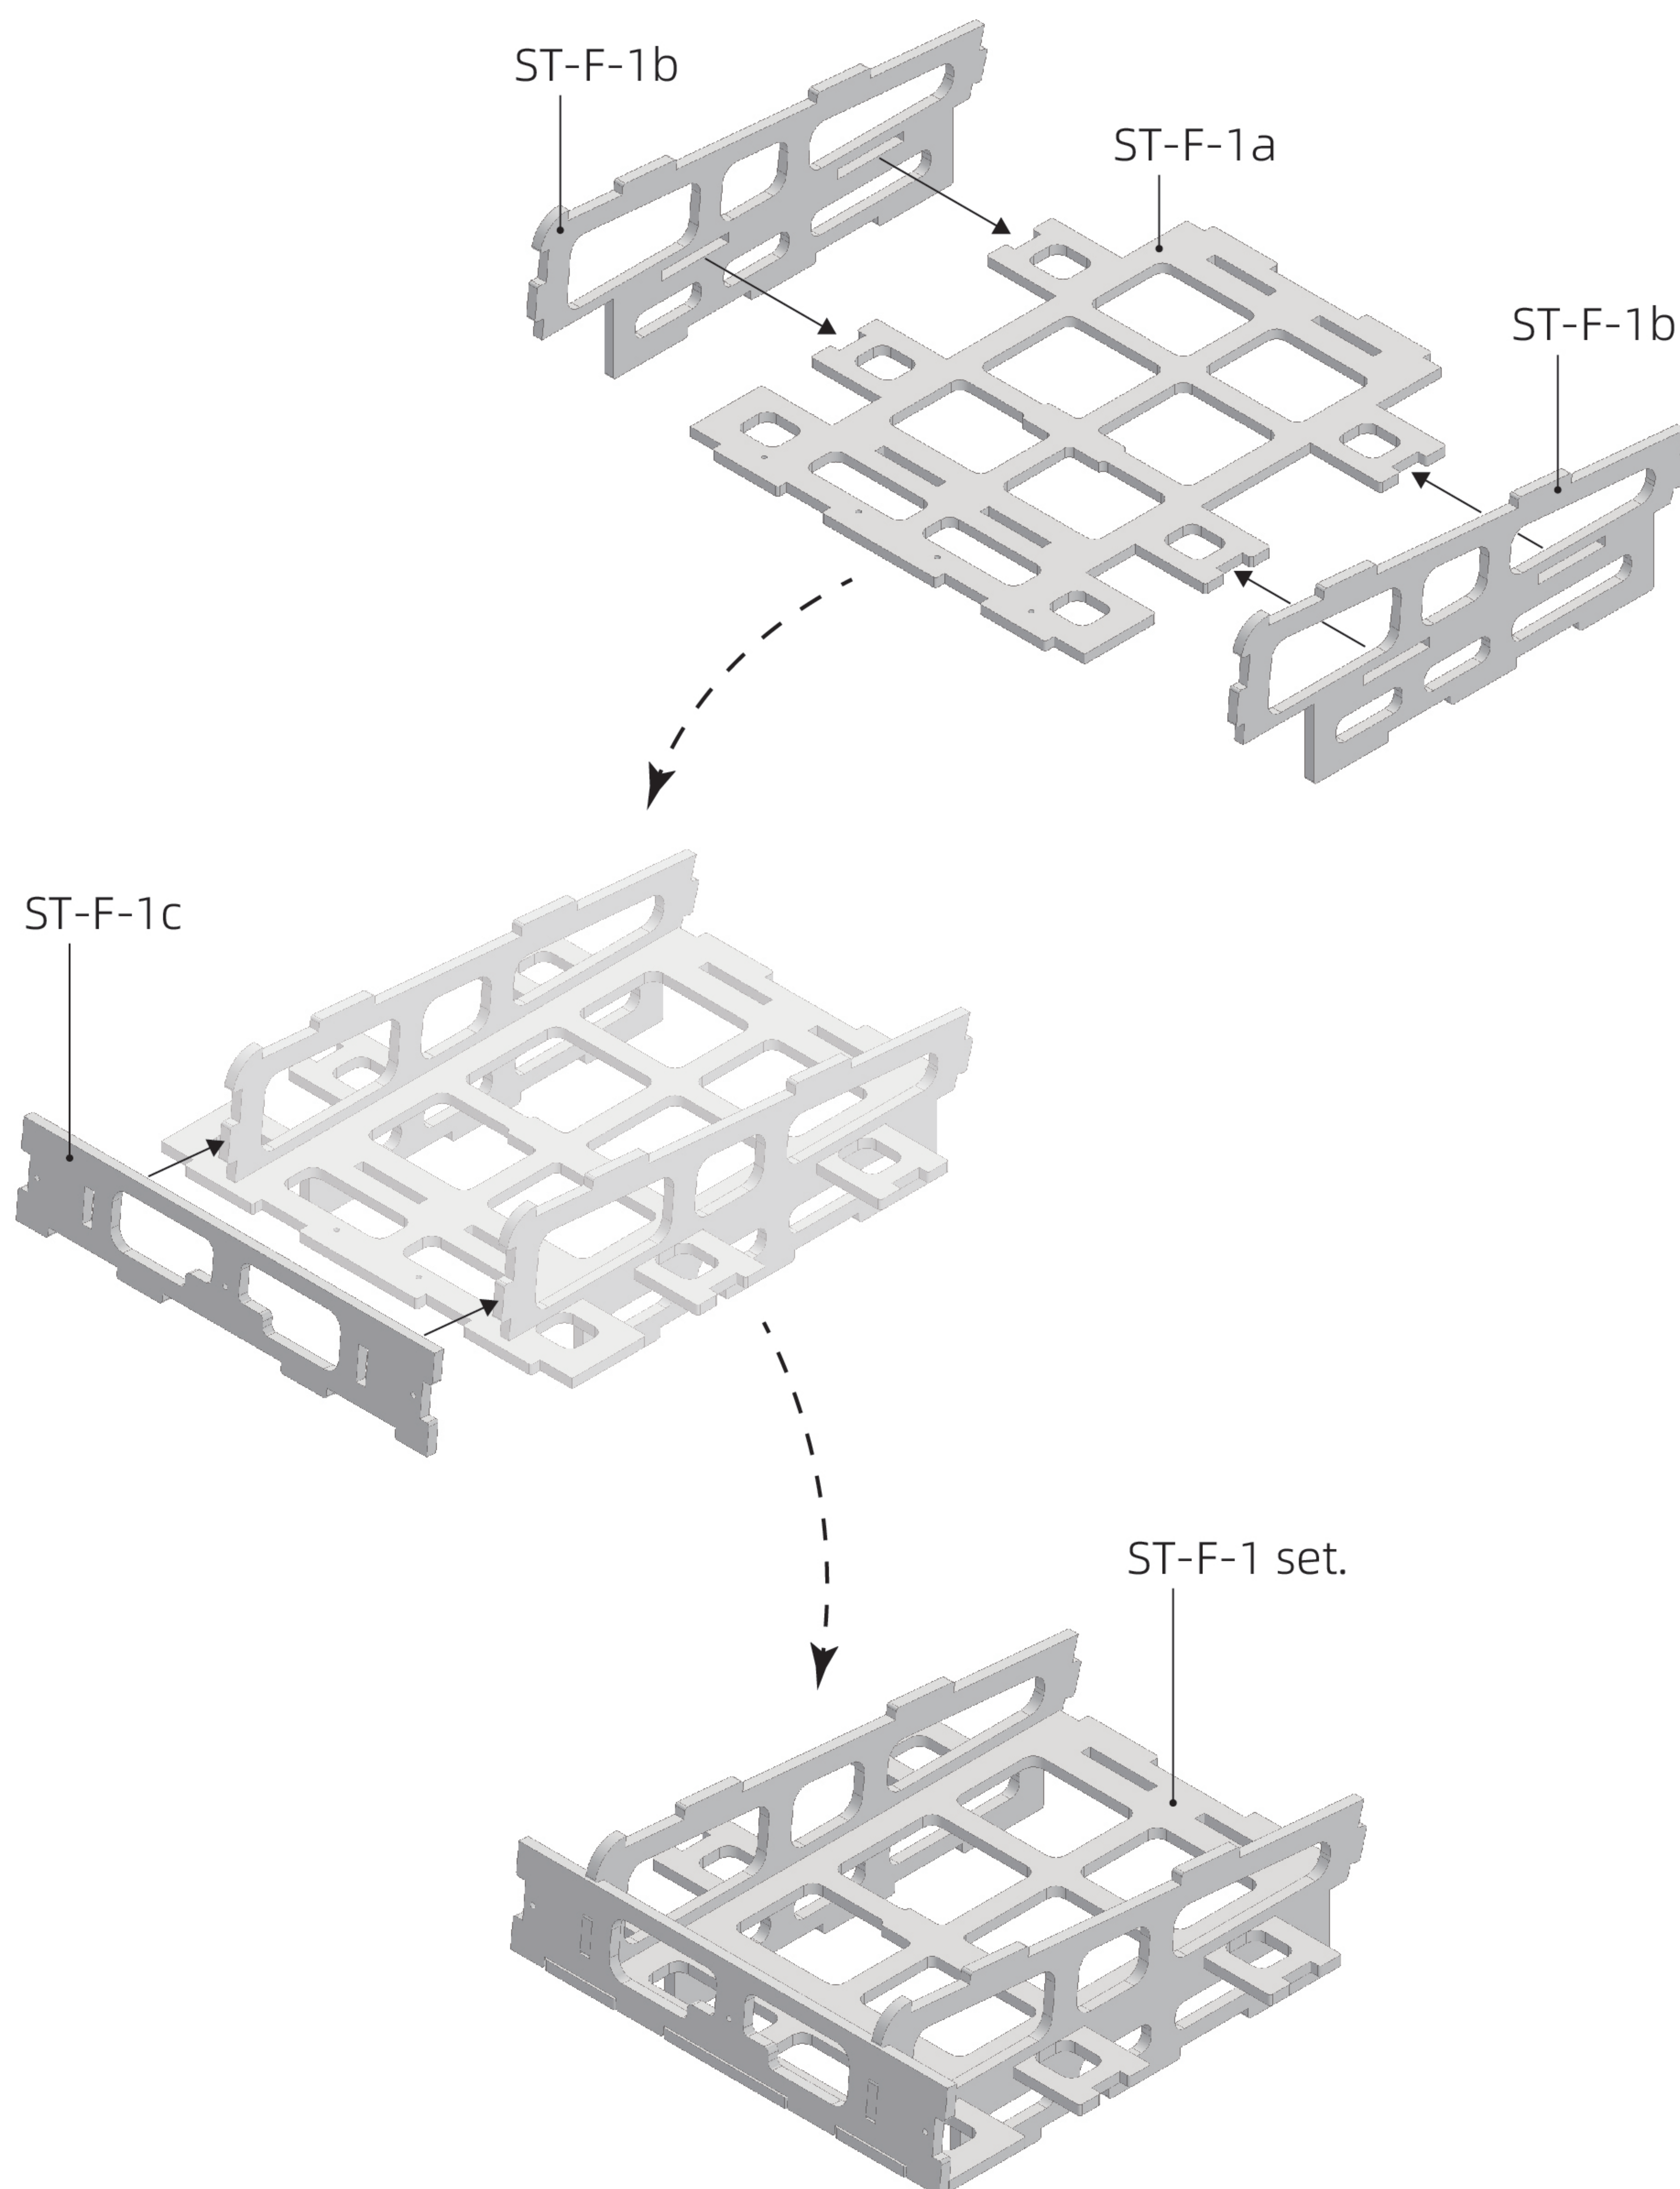


ST-2-01

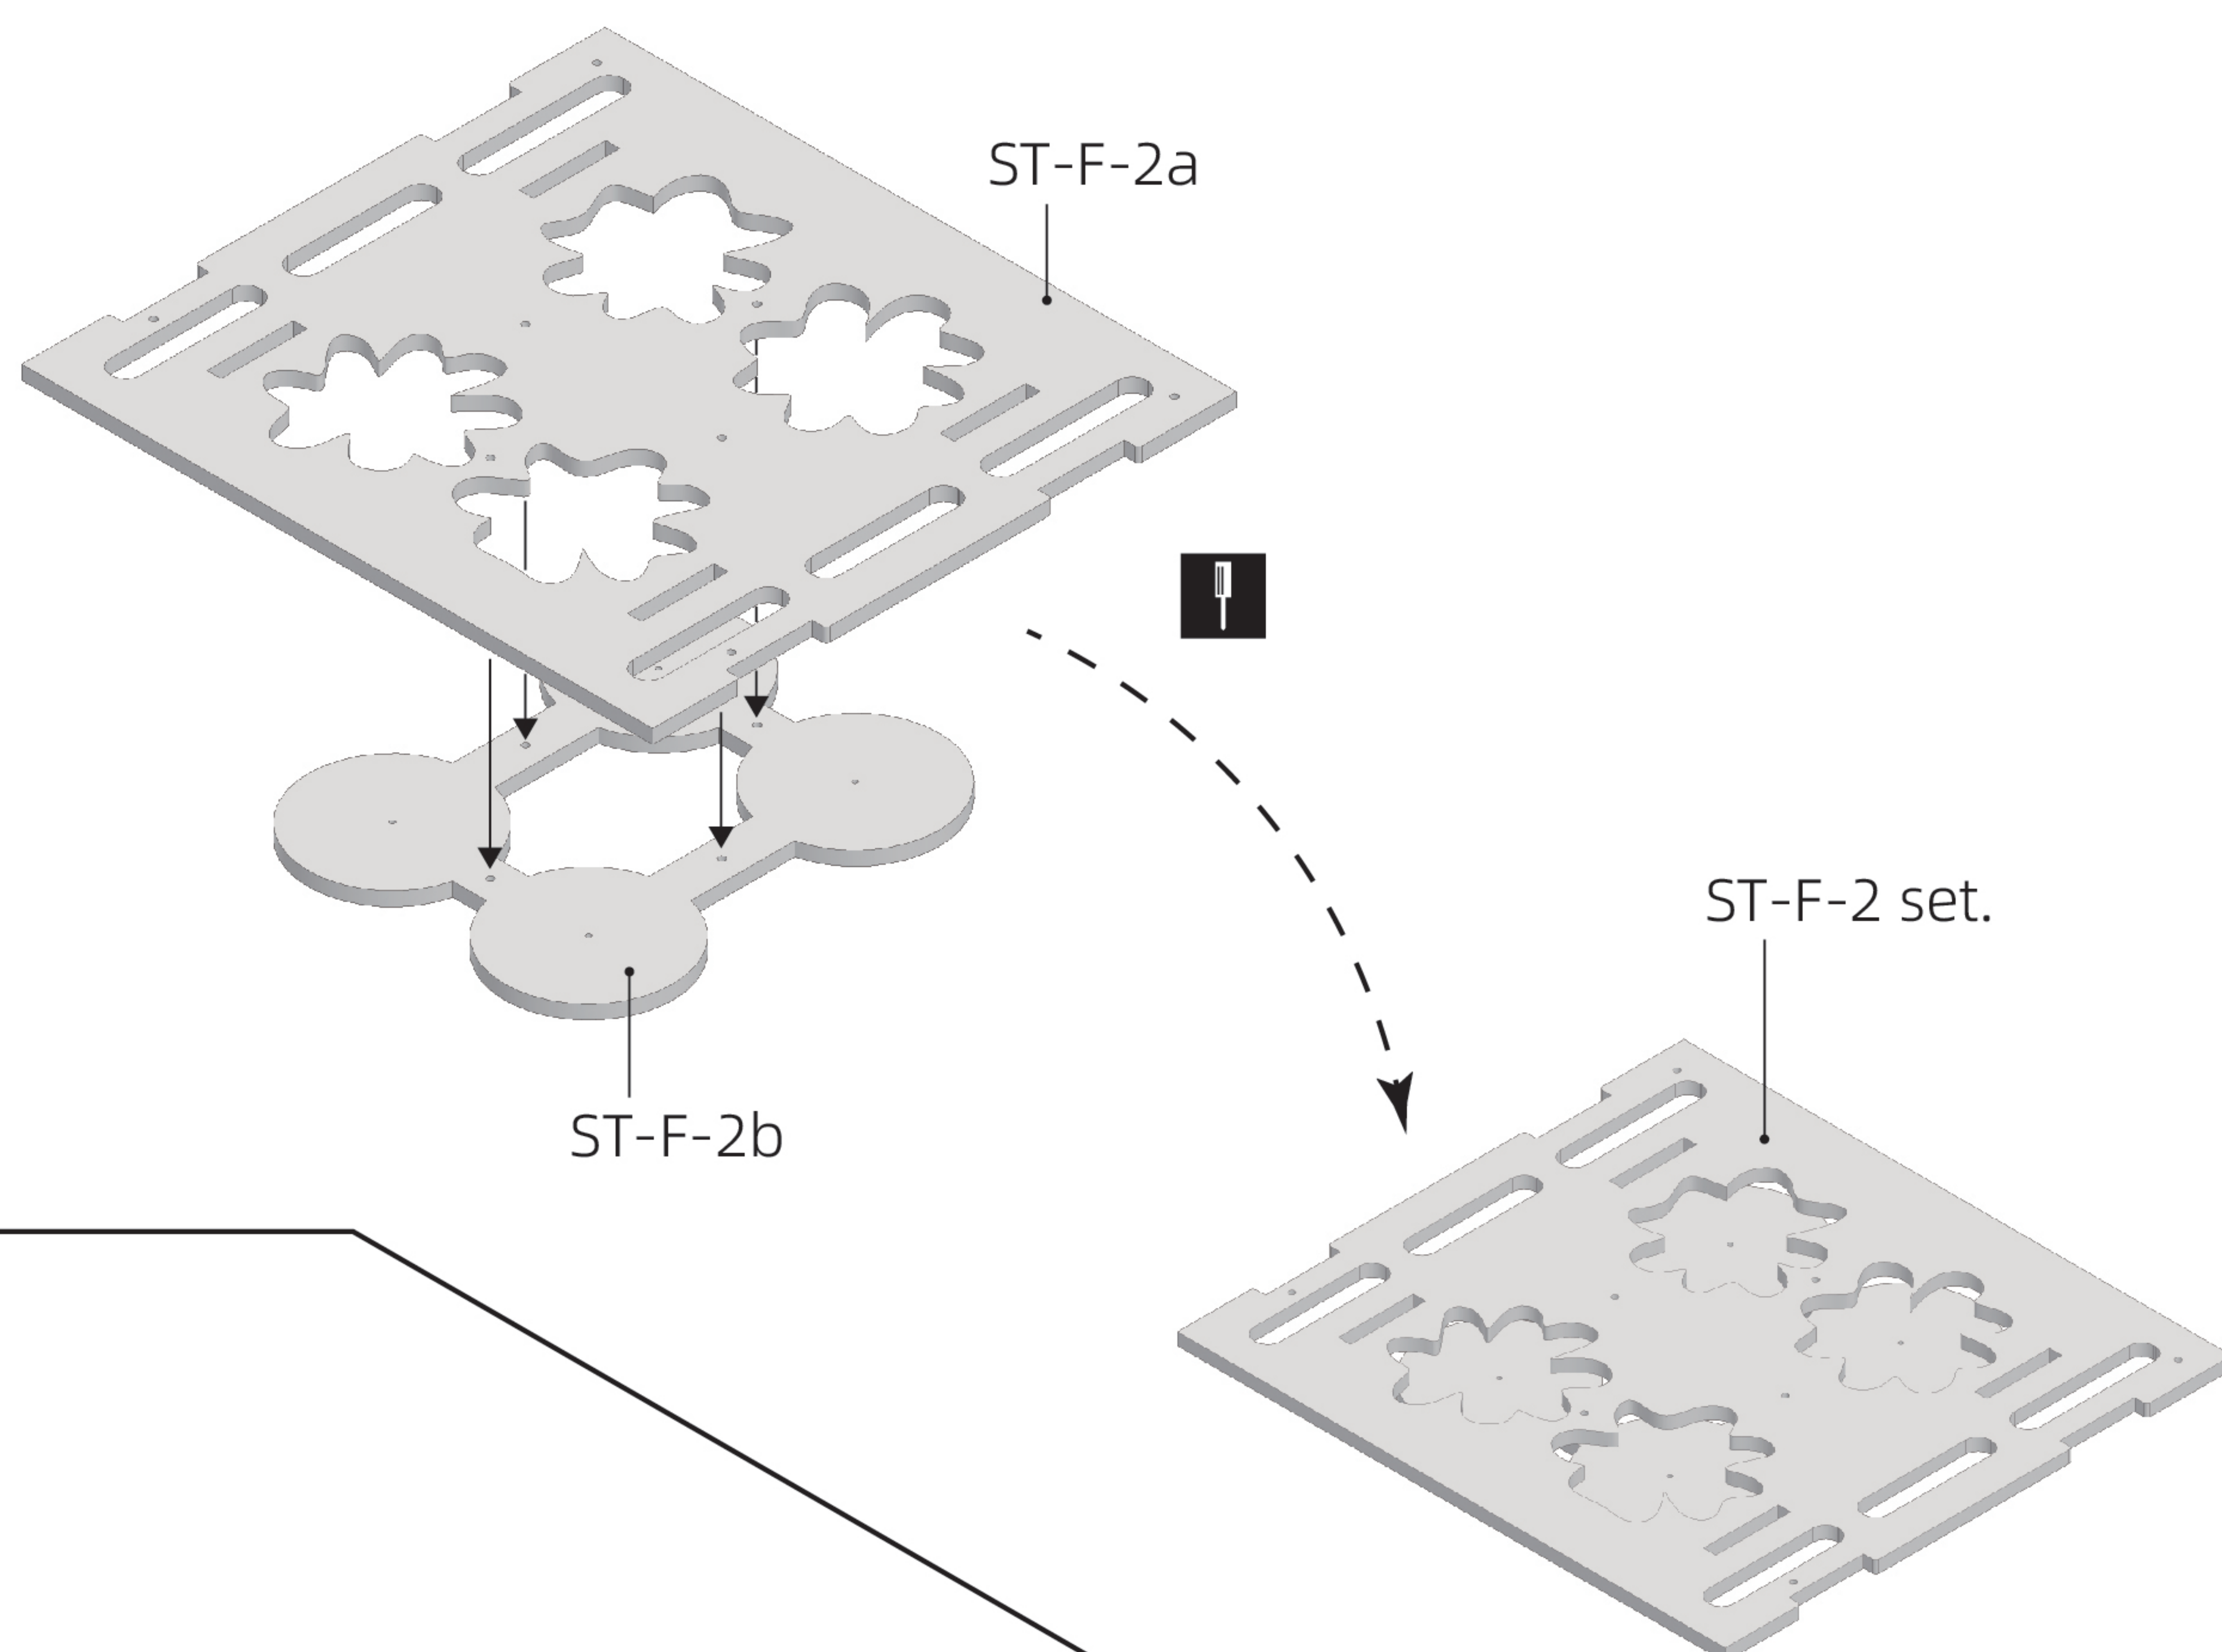


ST-2-01

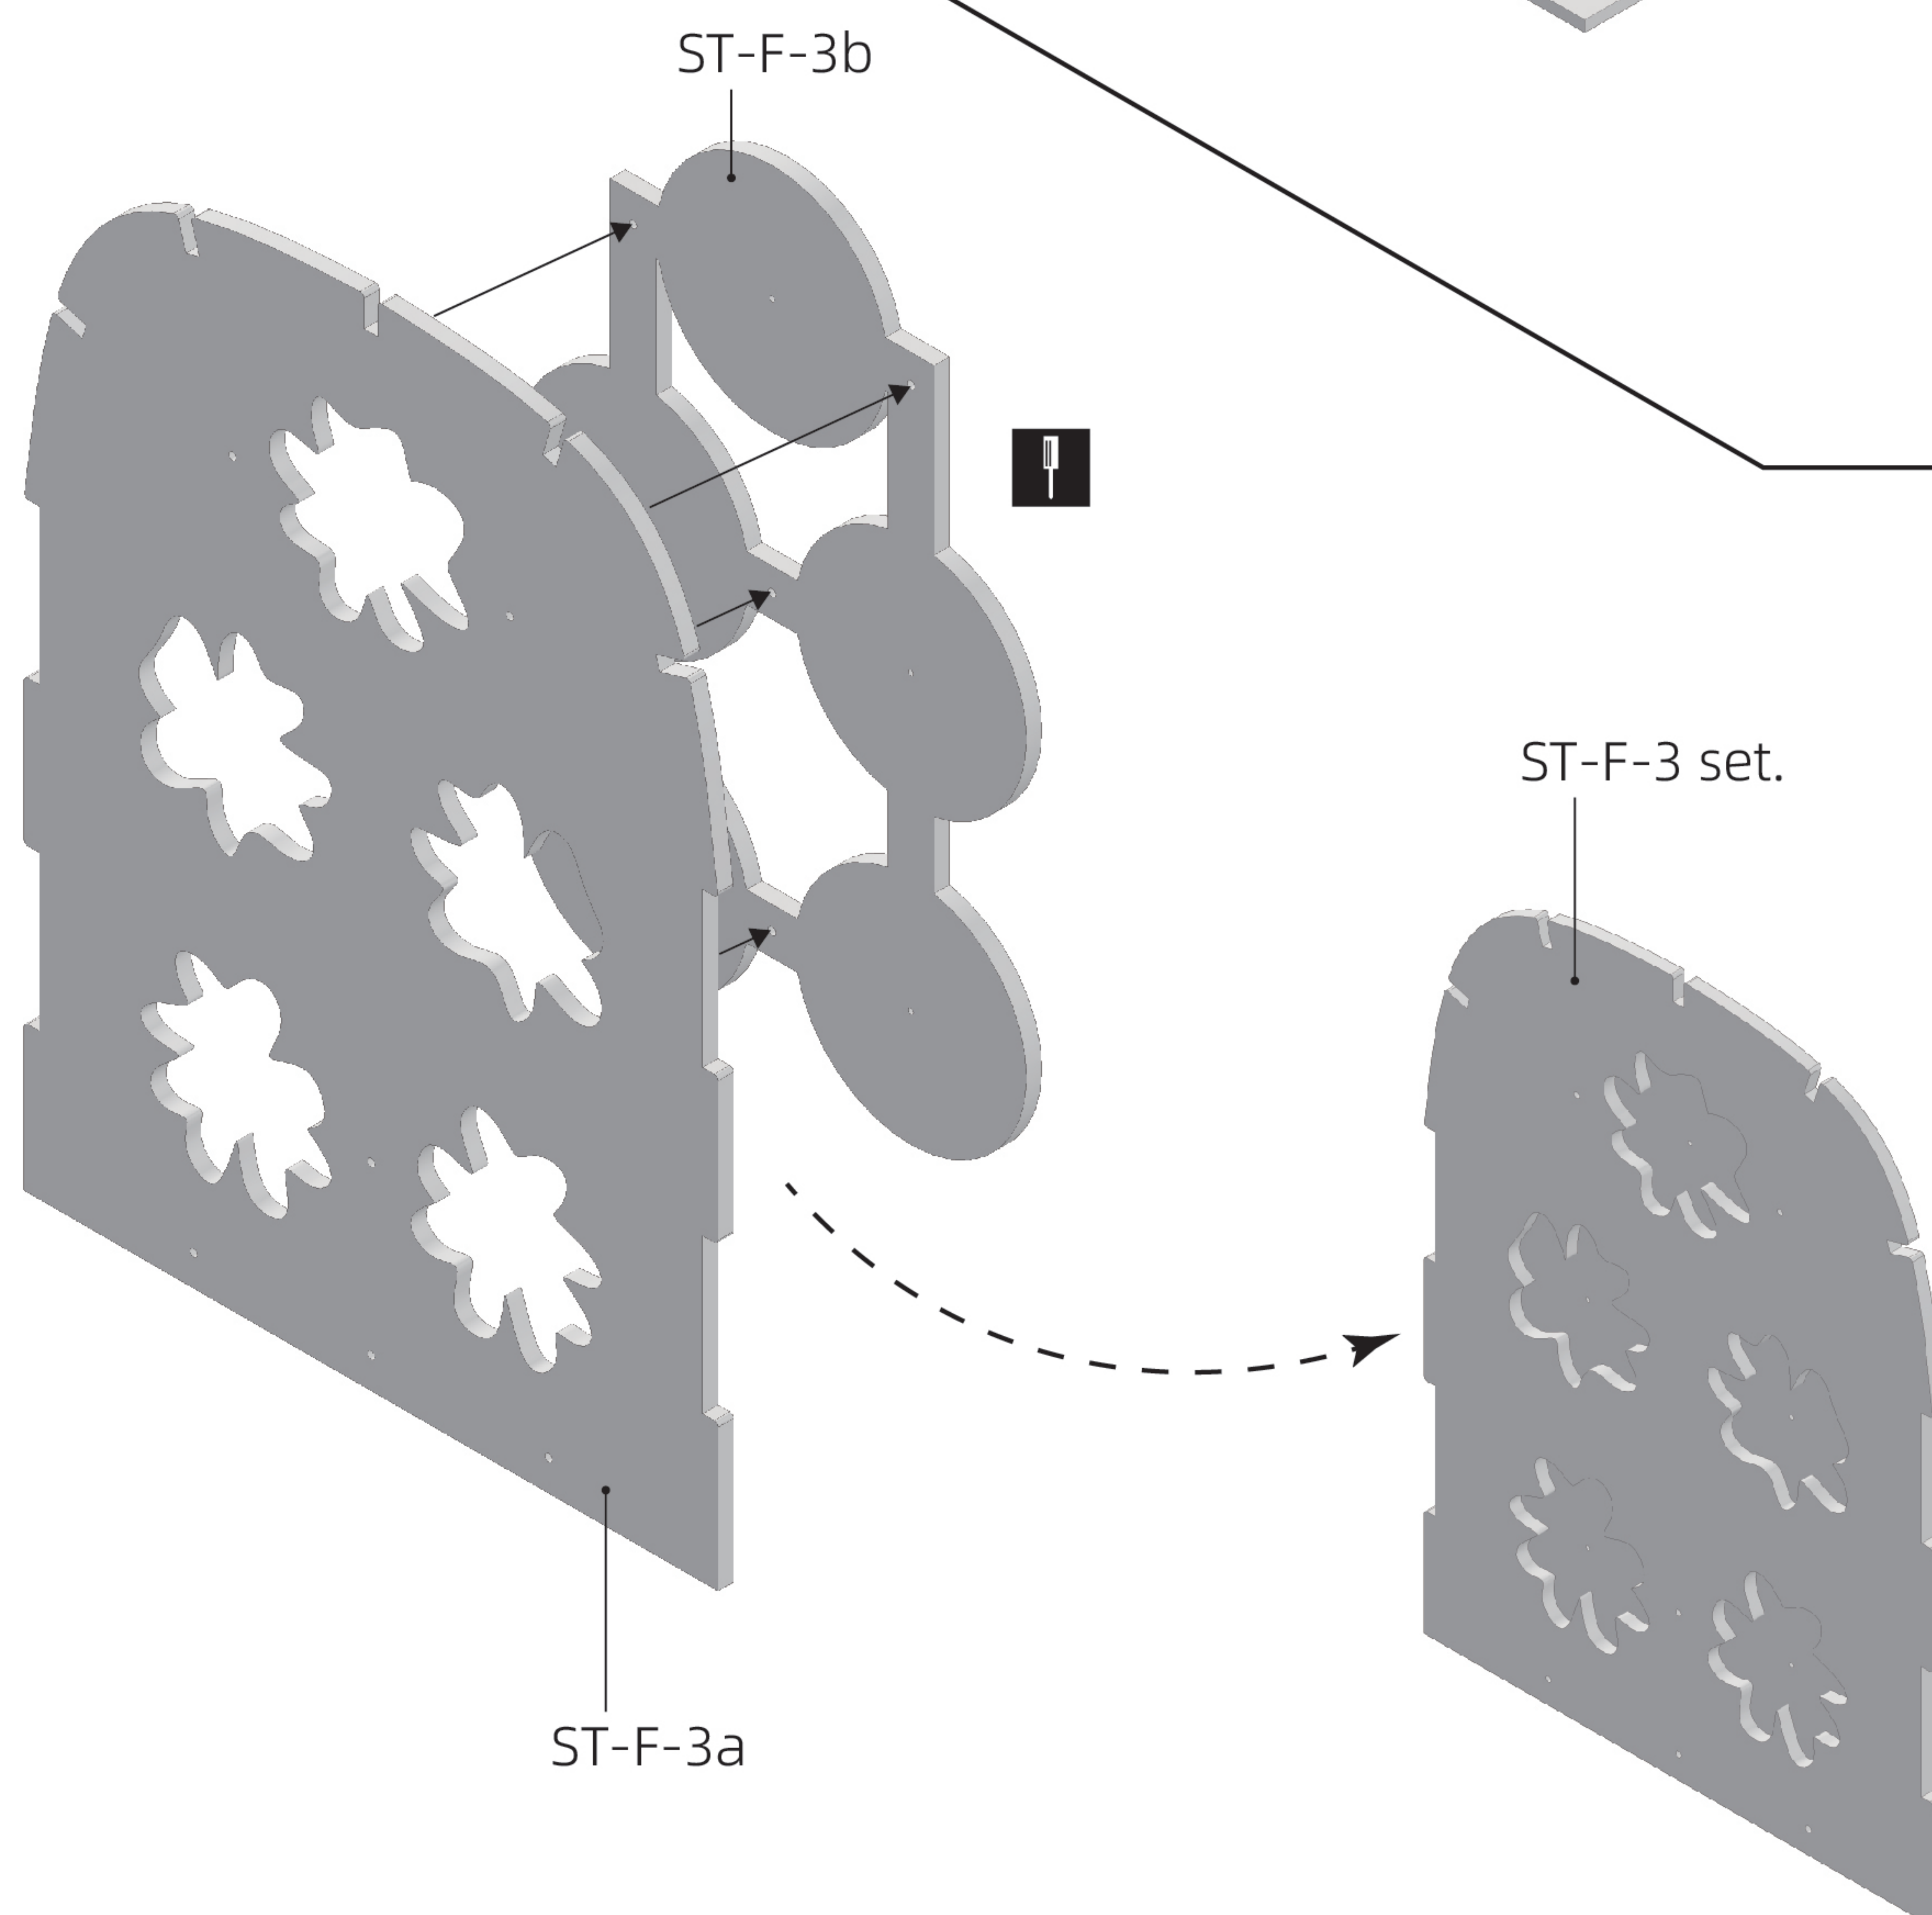


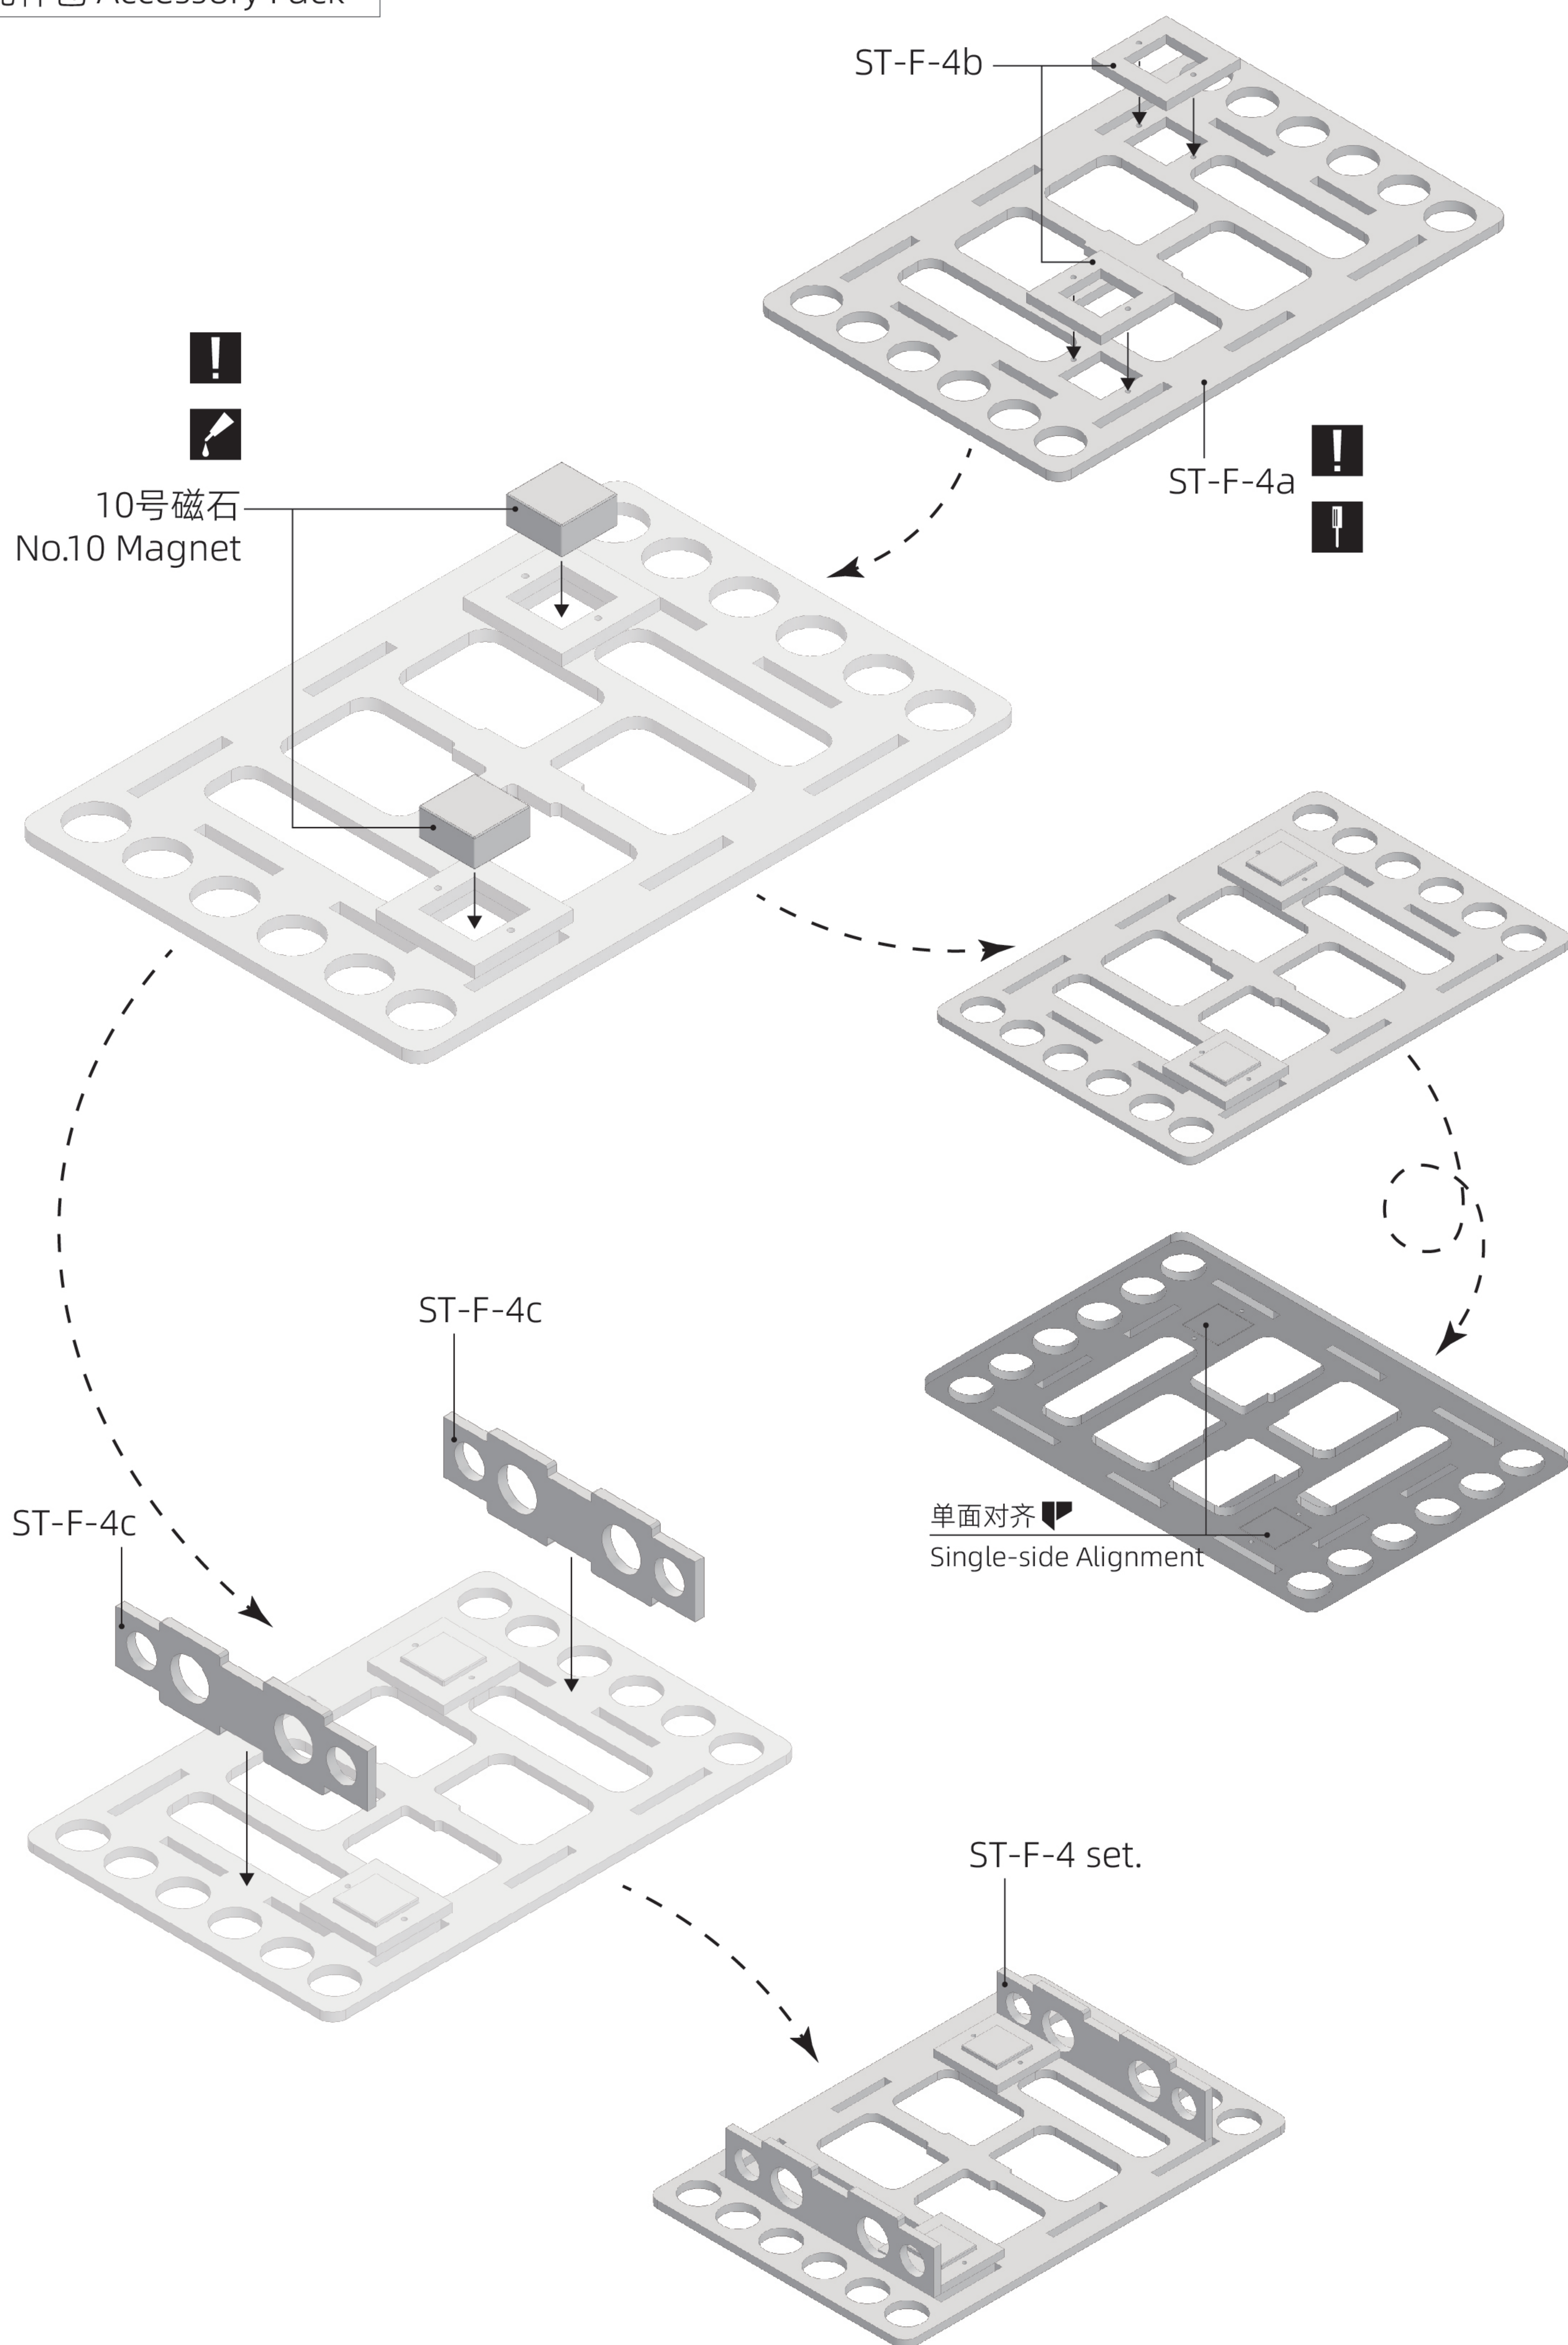



ST-2-01


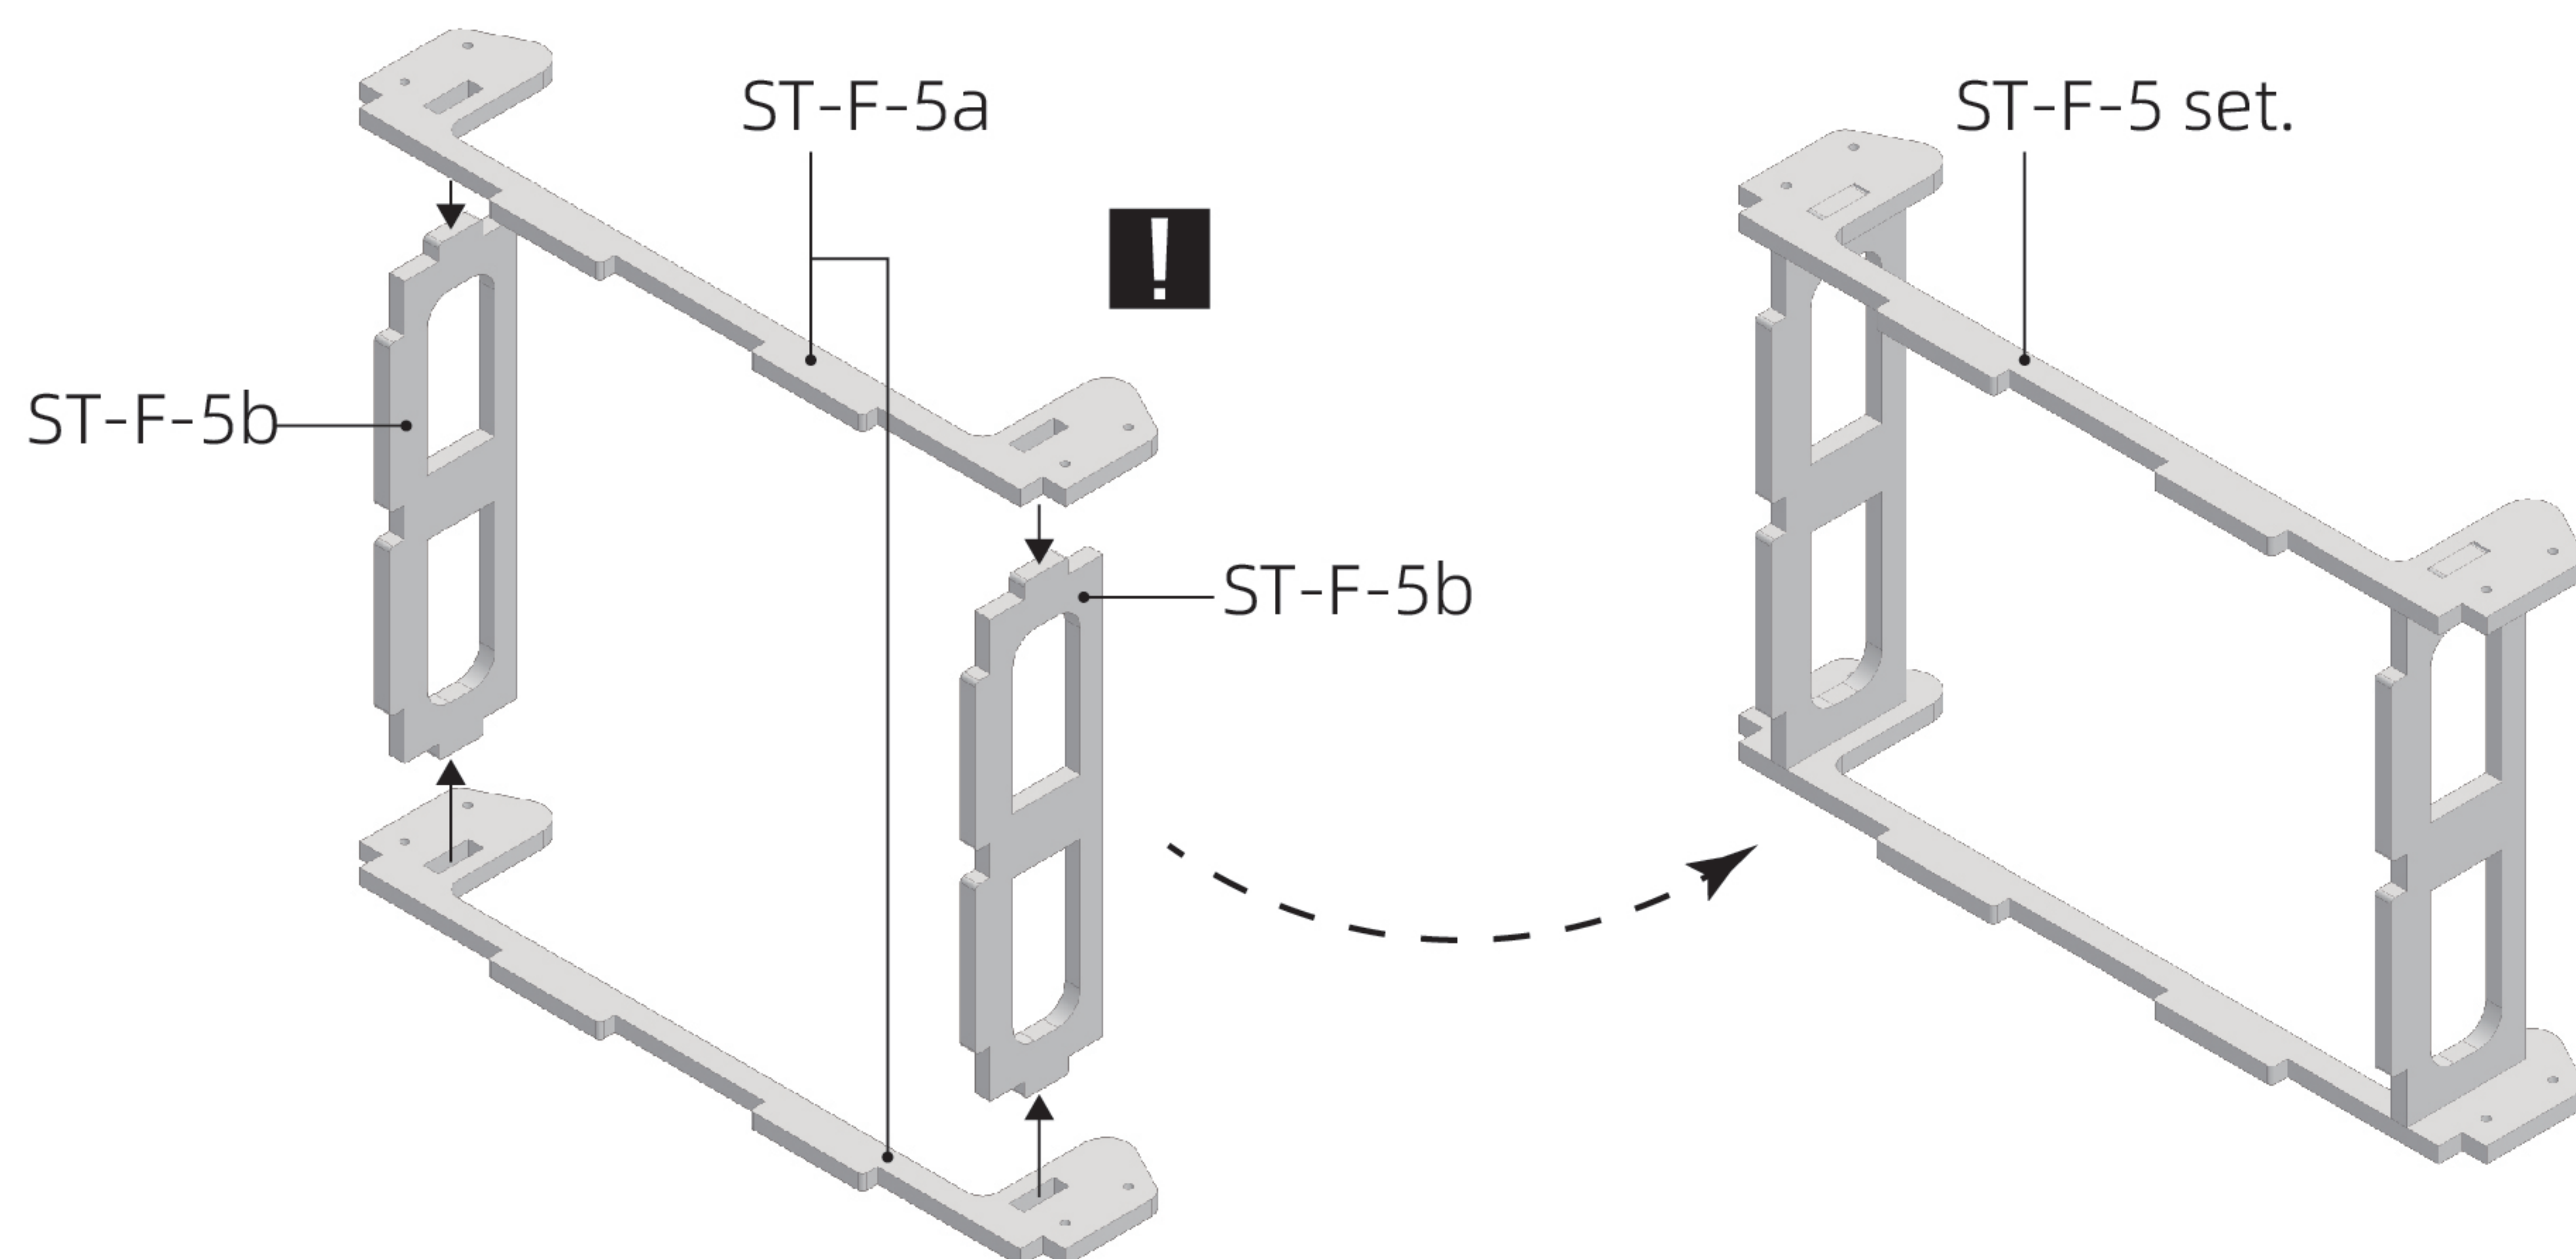



ST-2-01

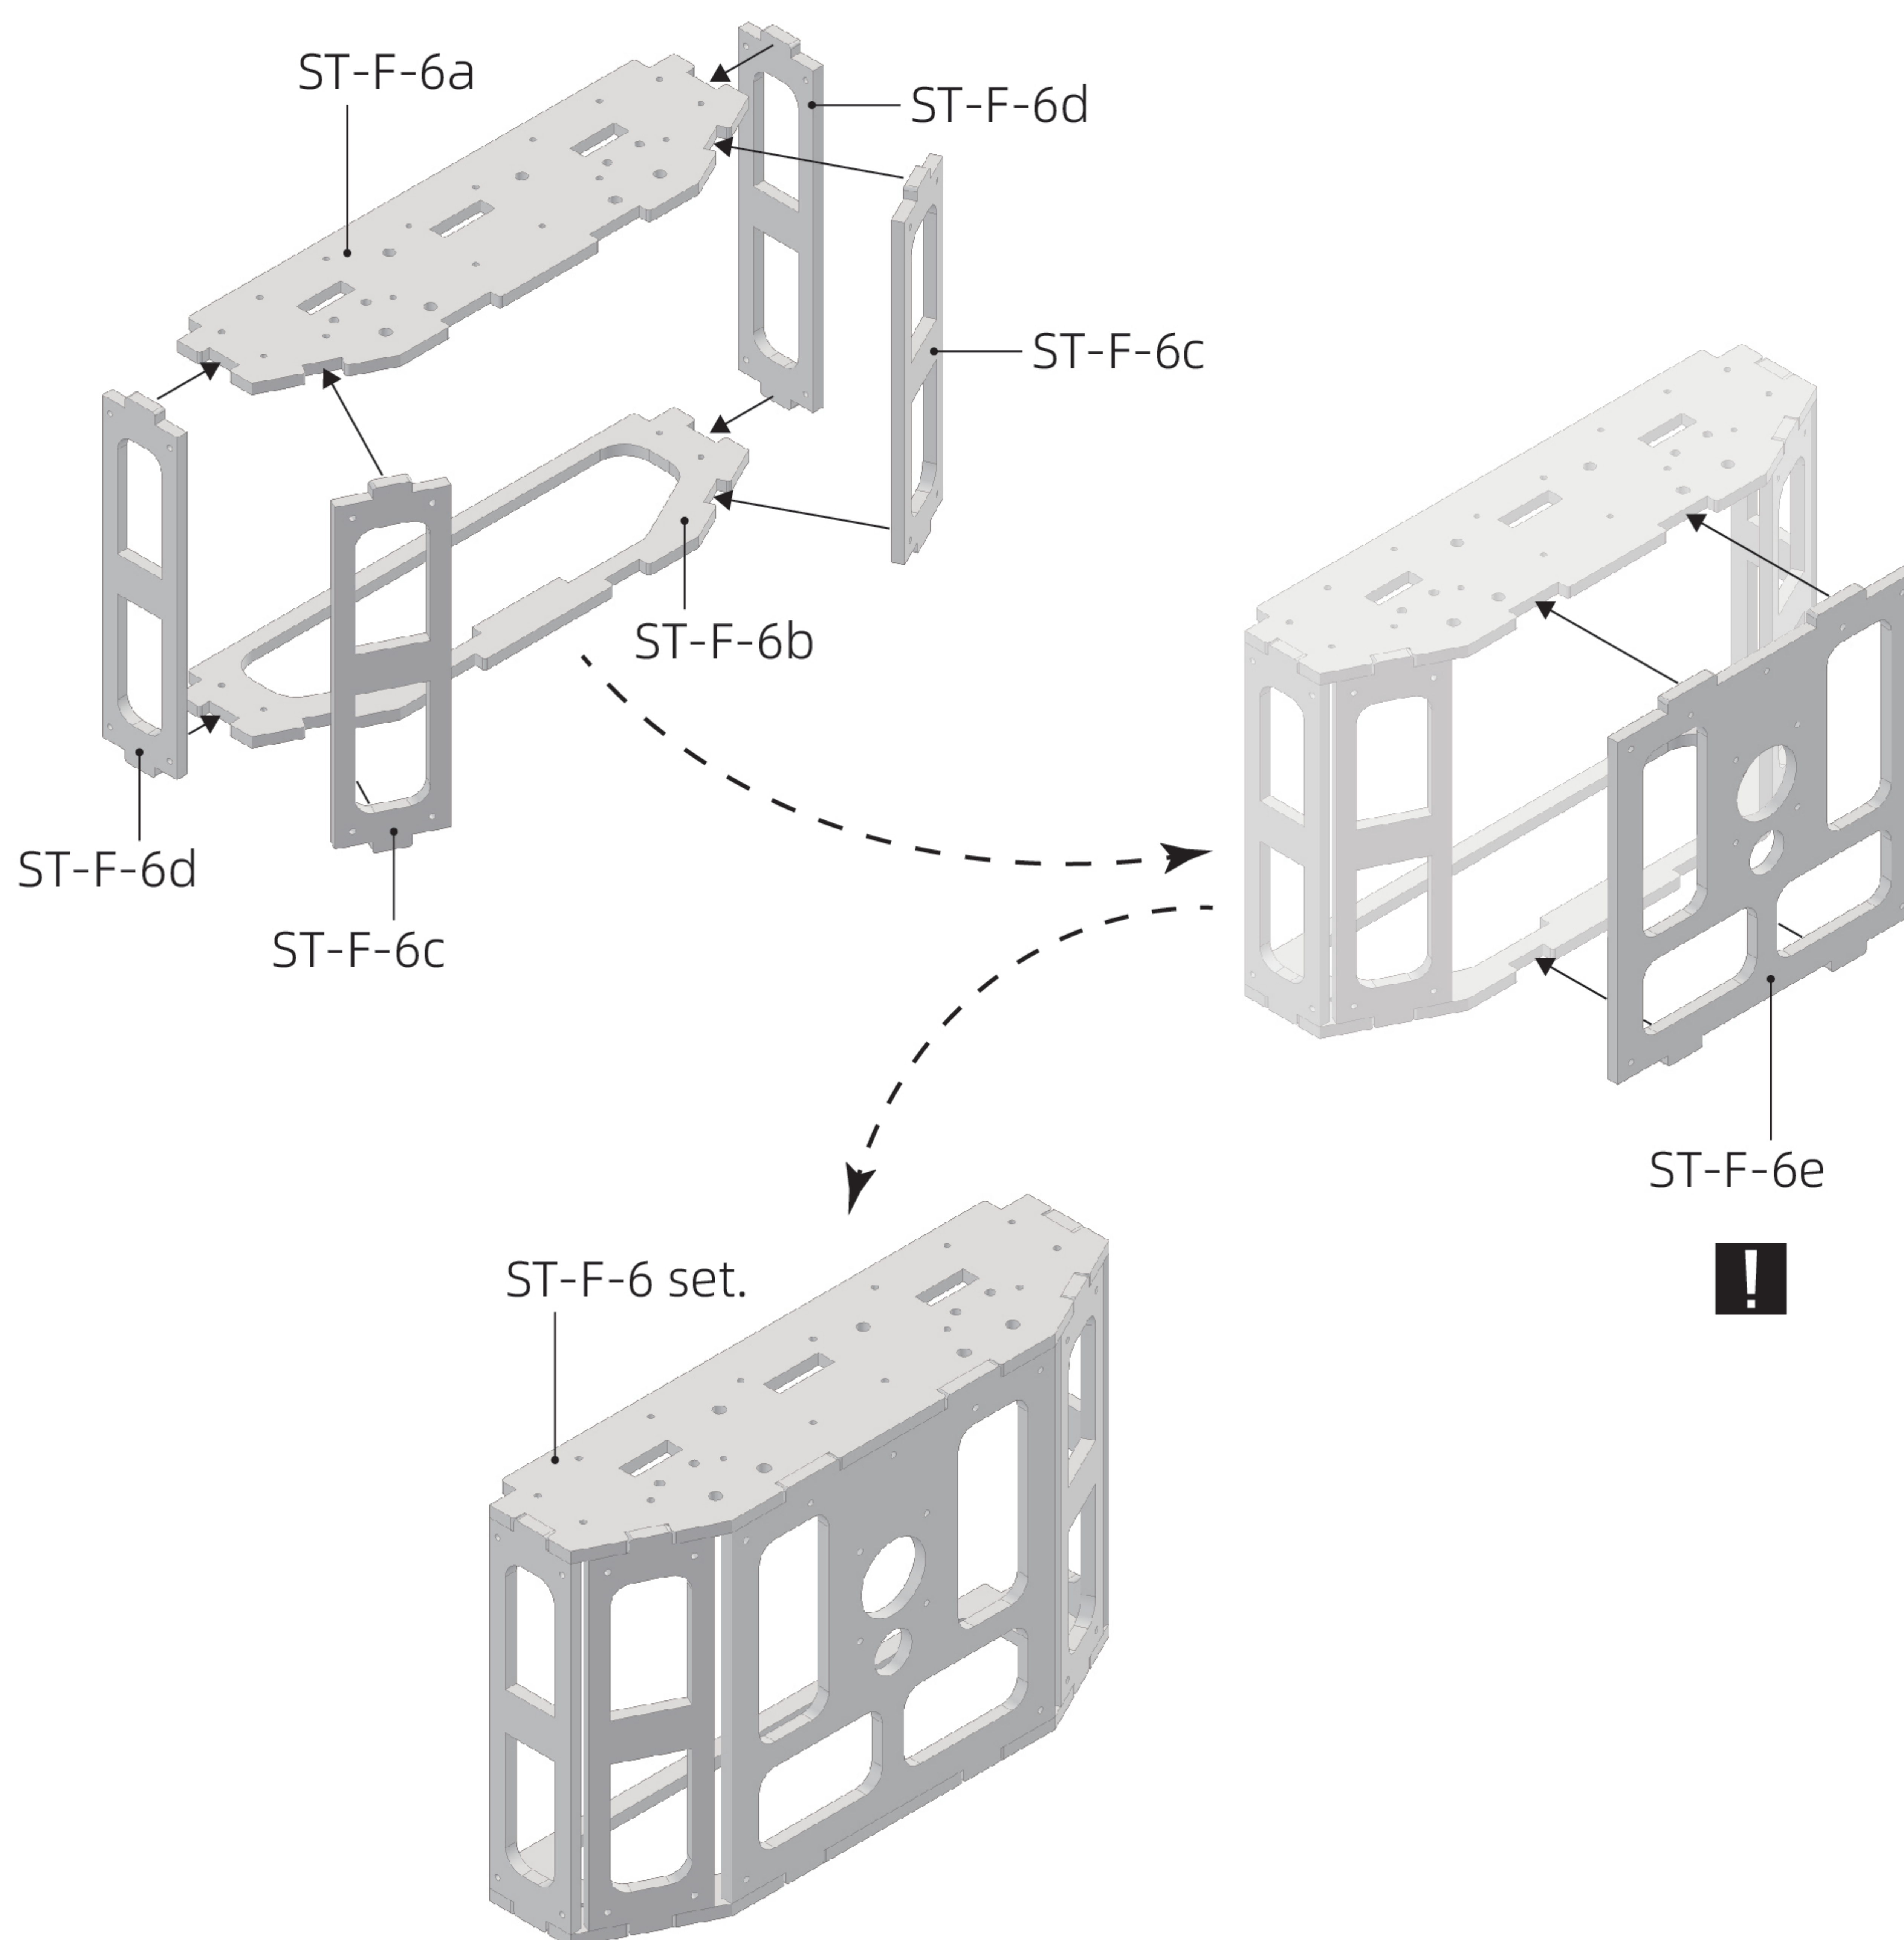


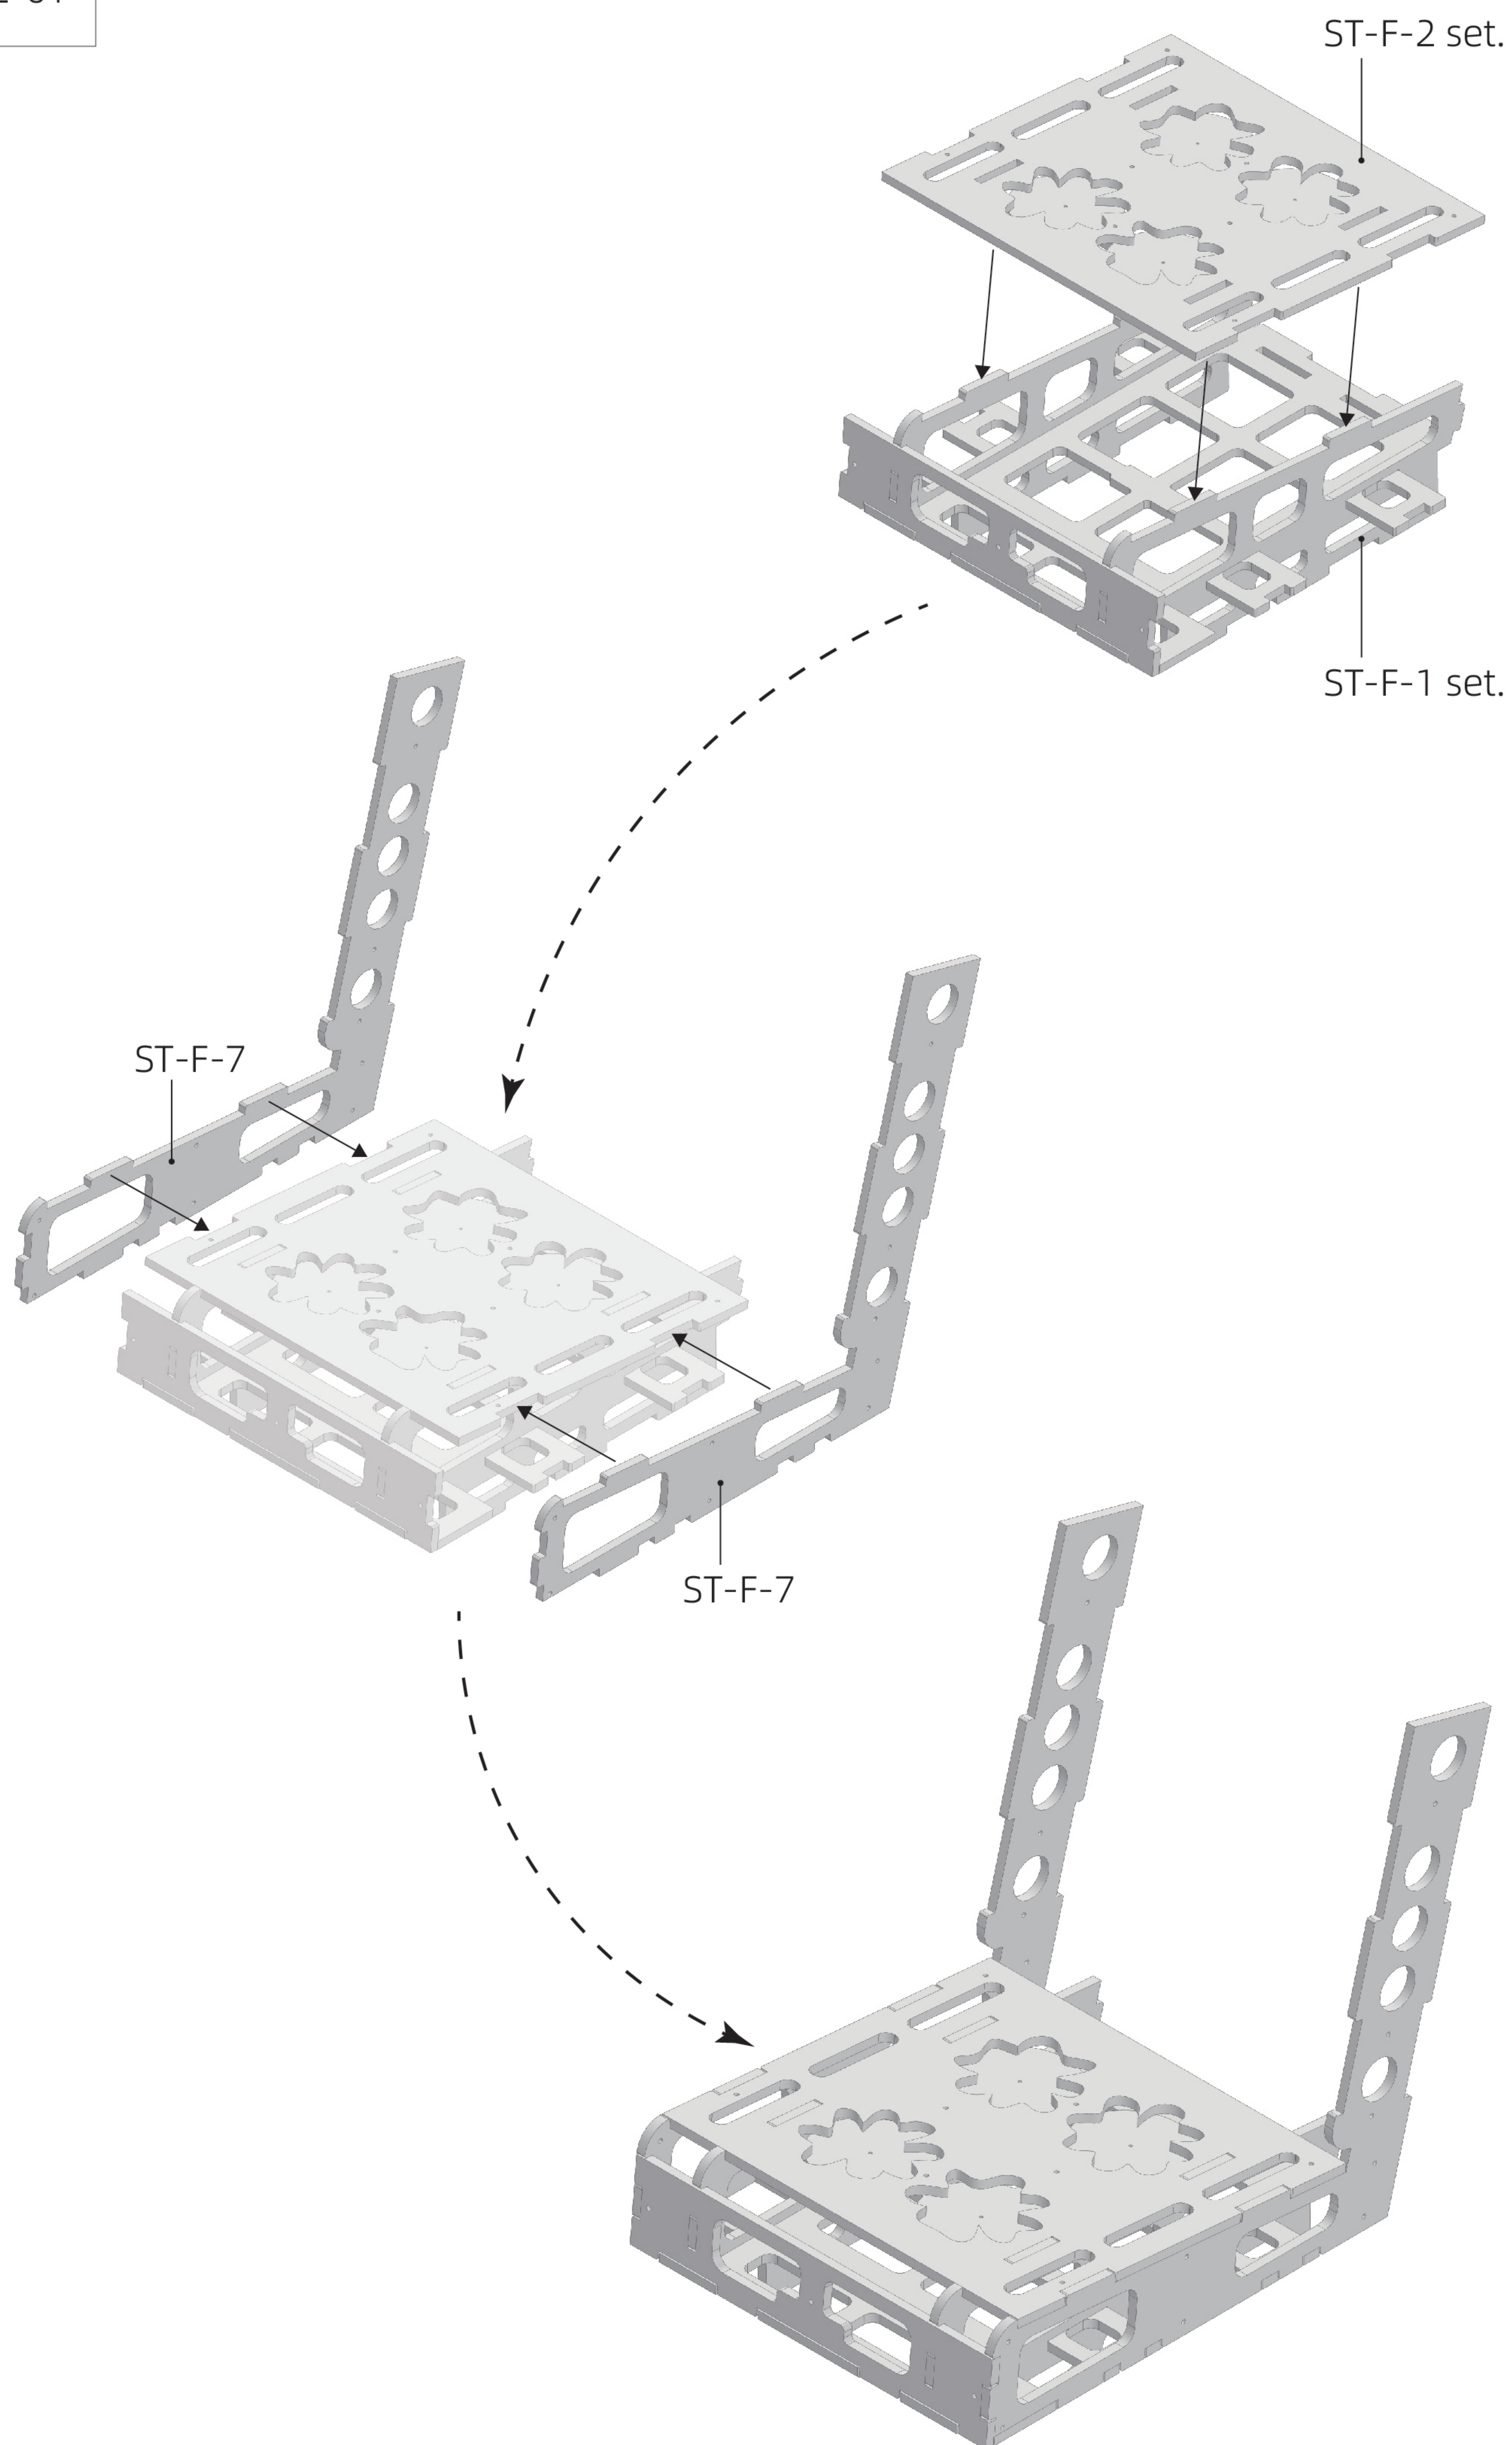

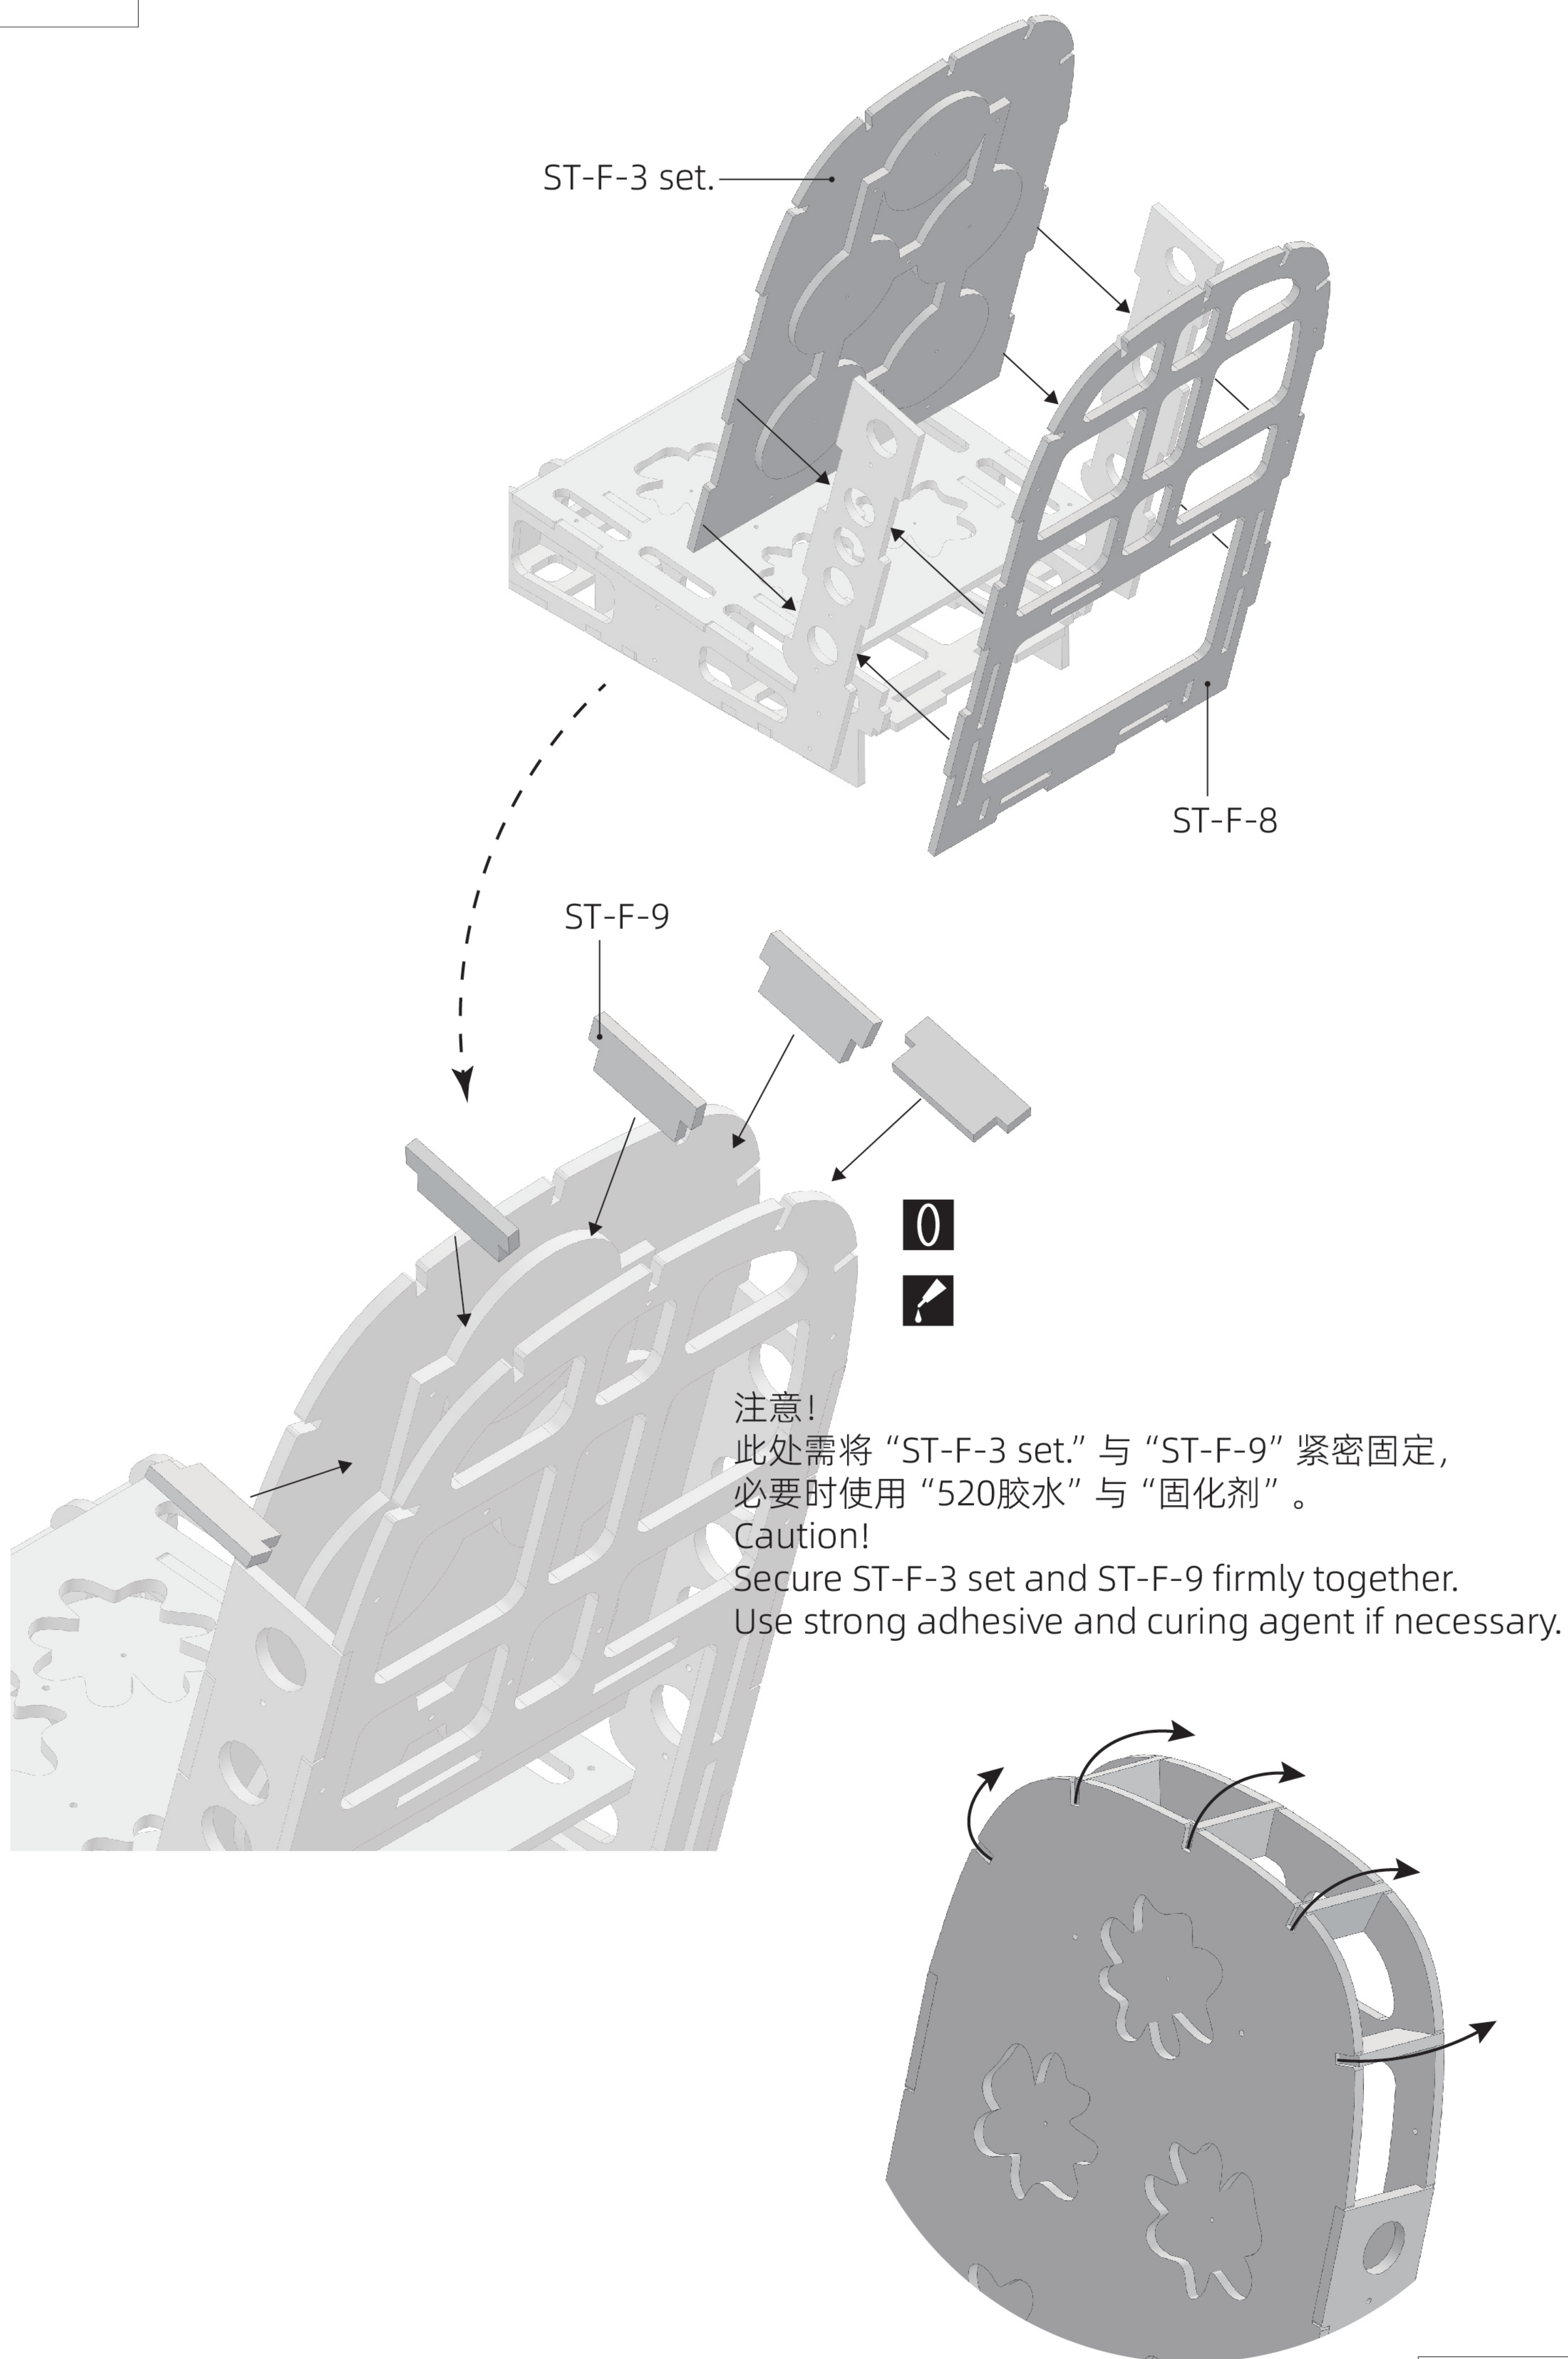

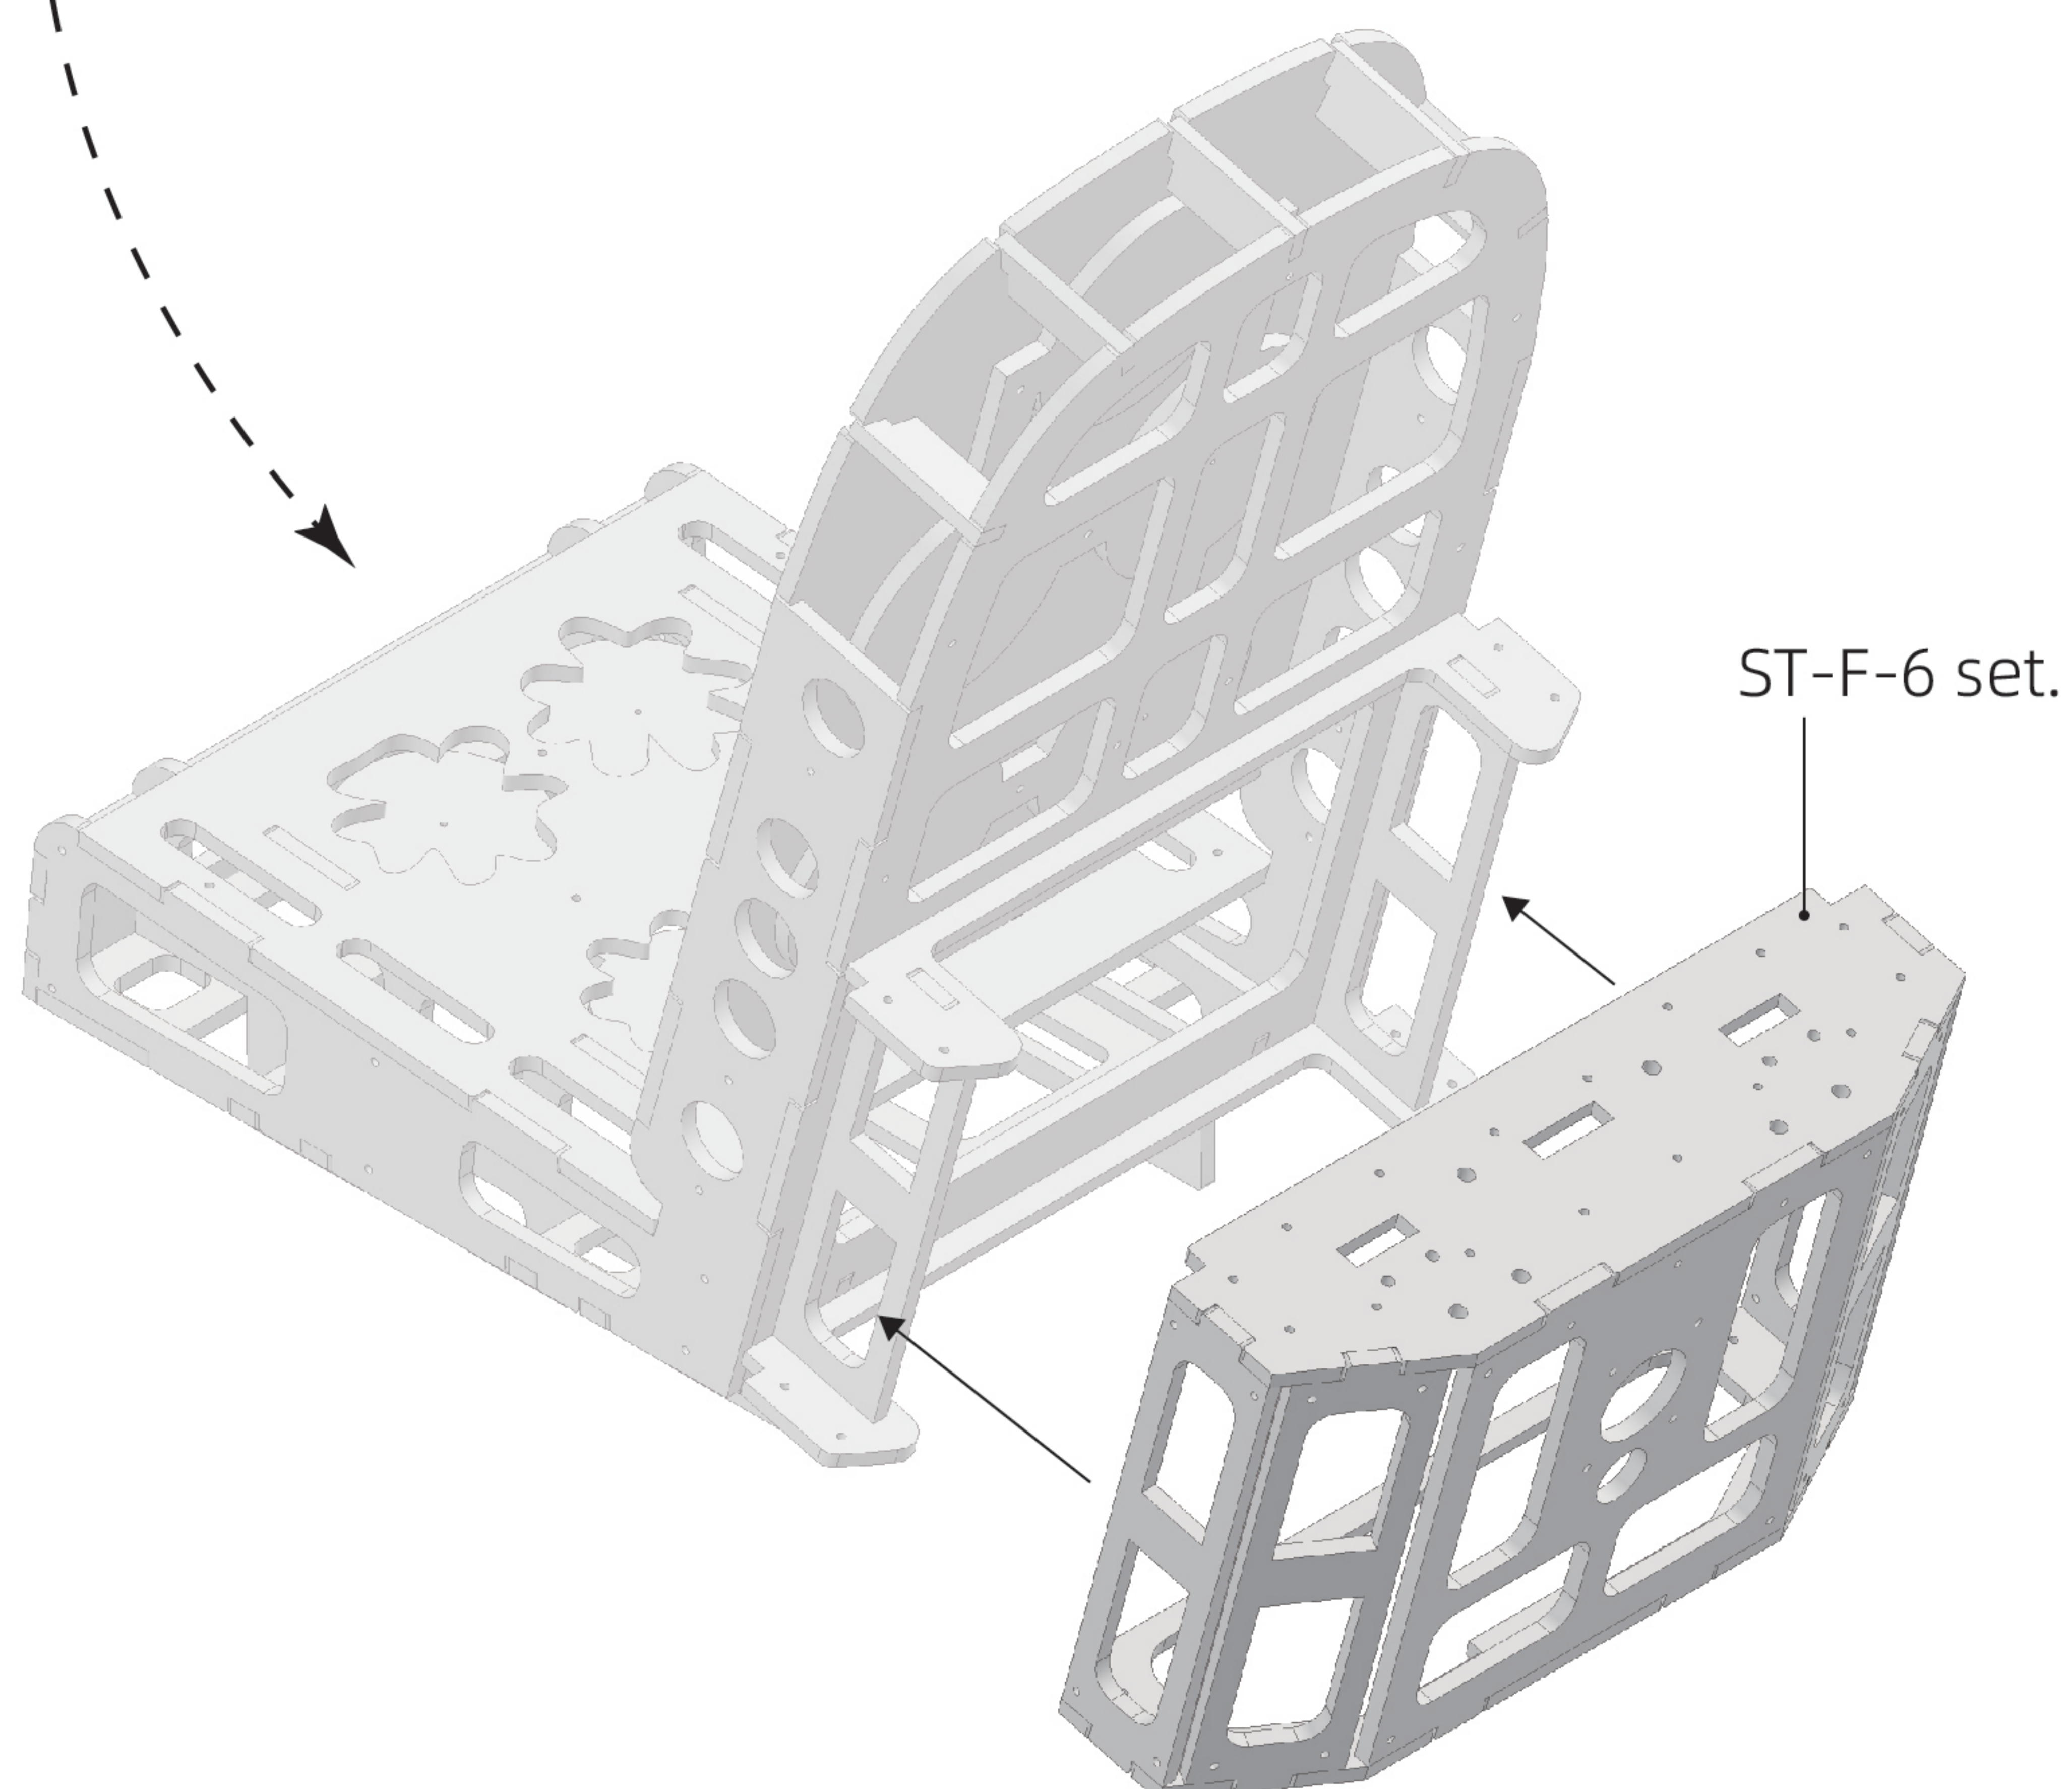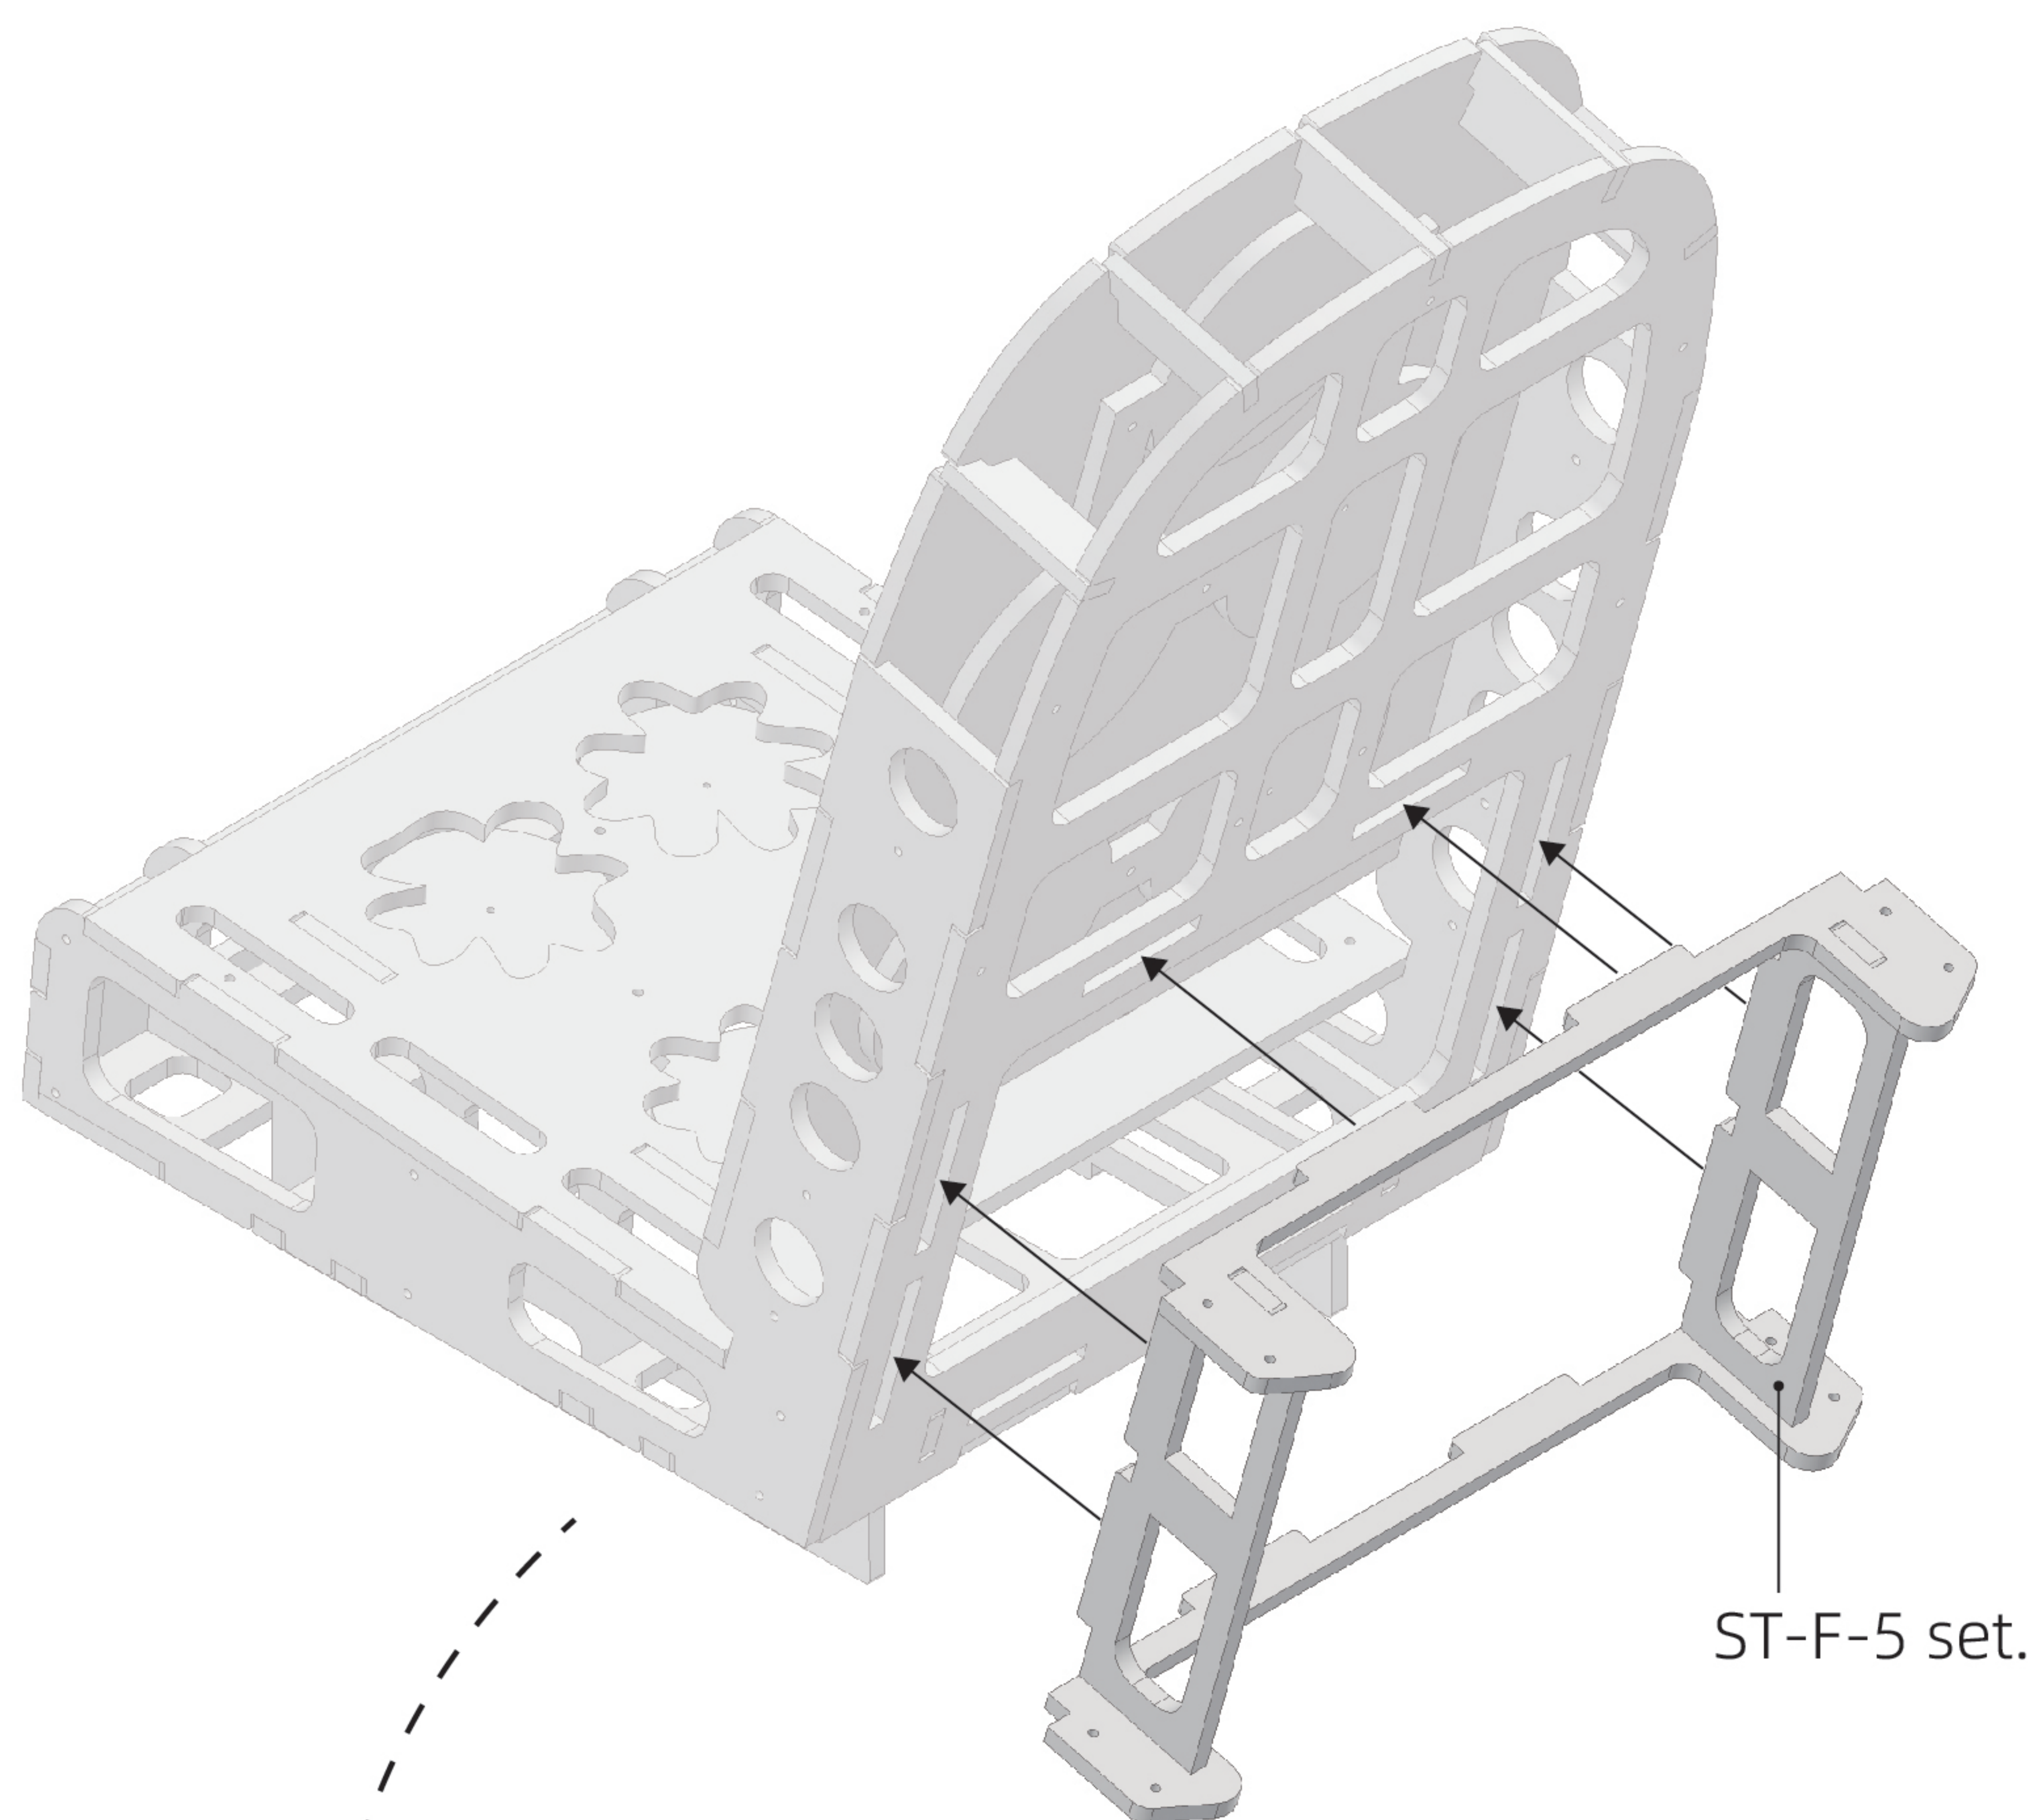

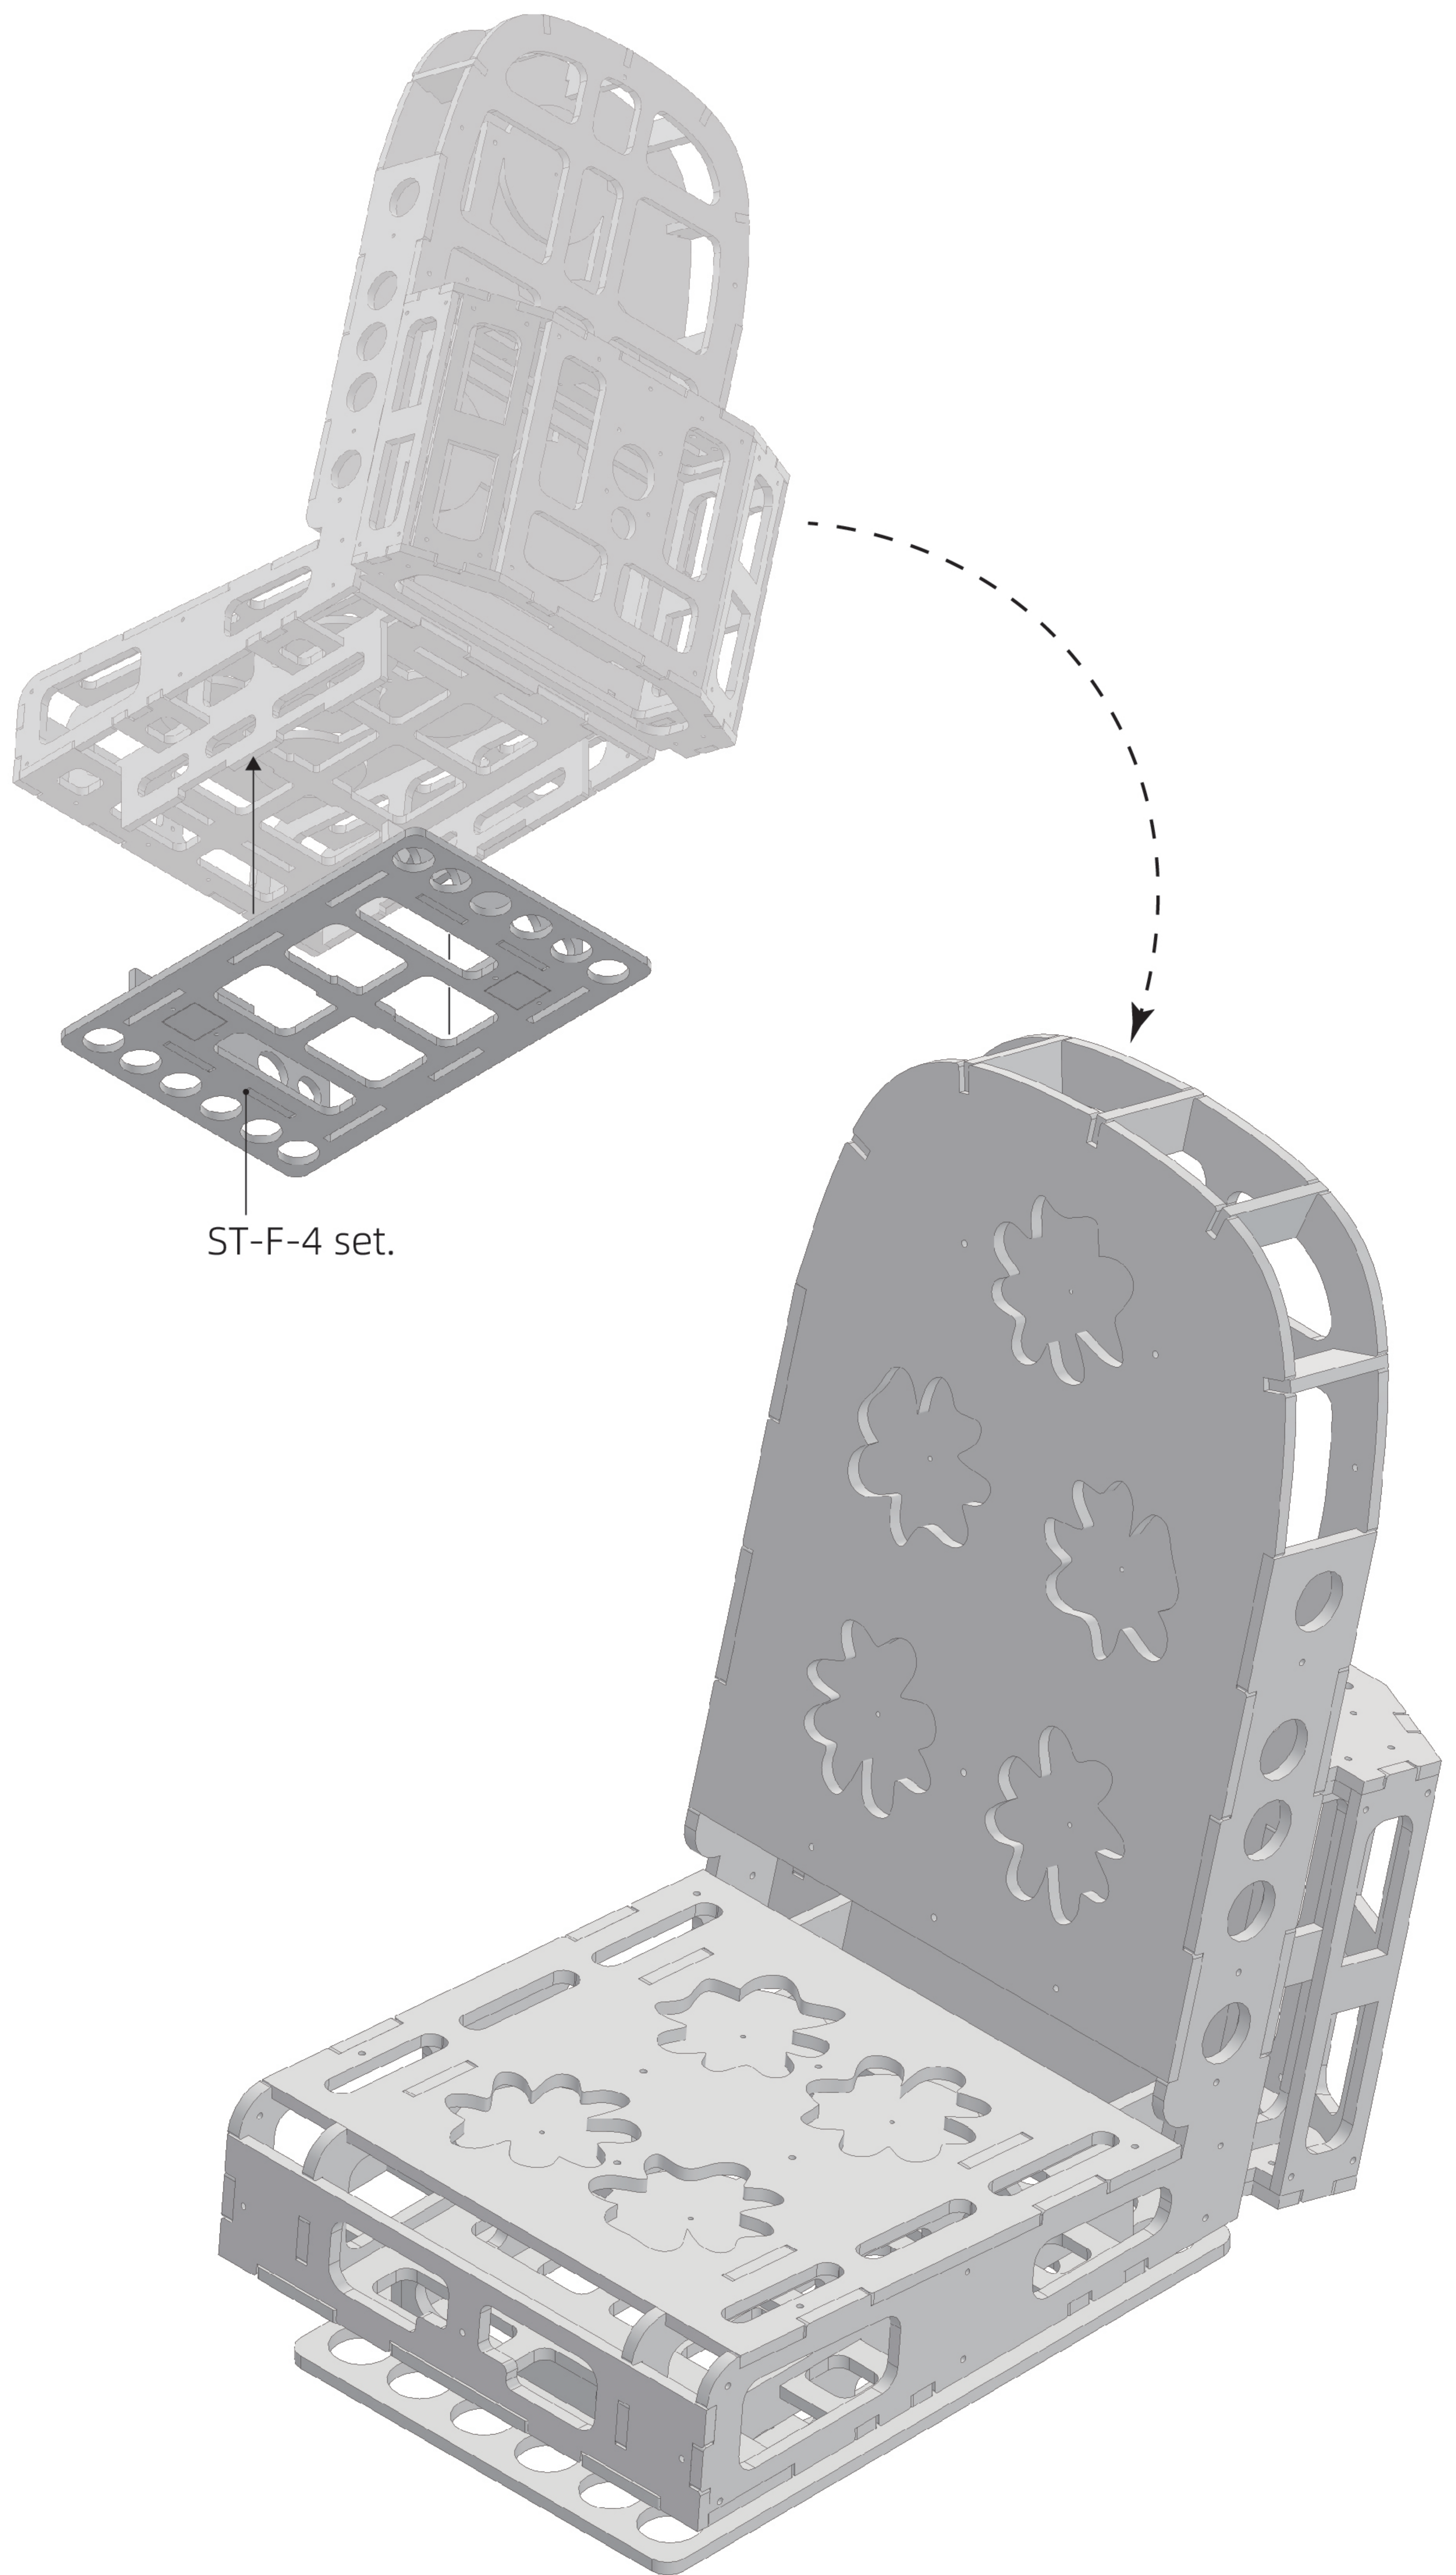

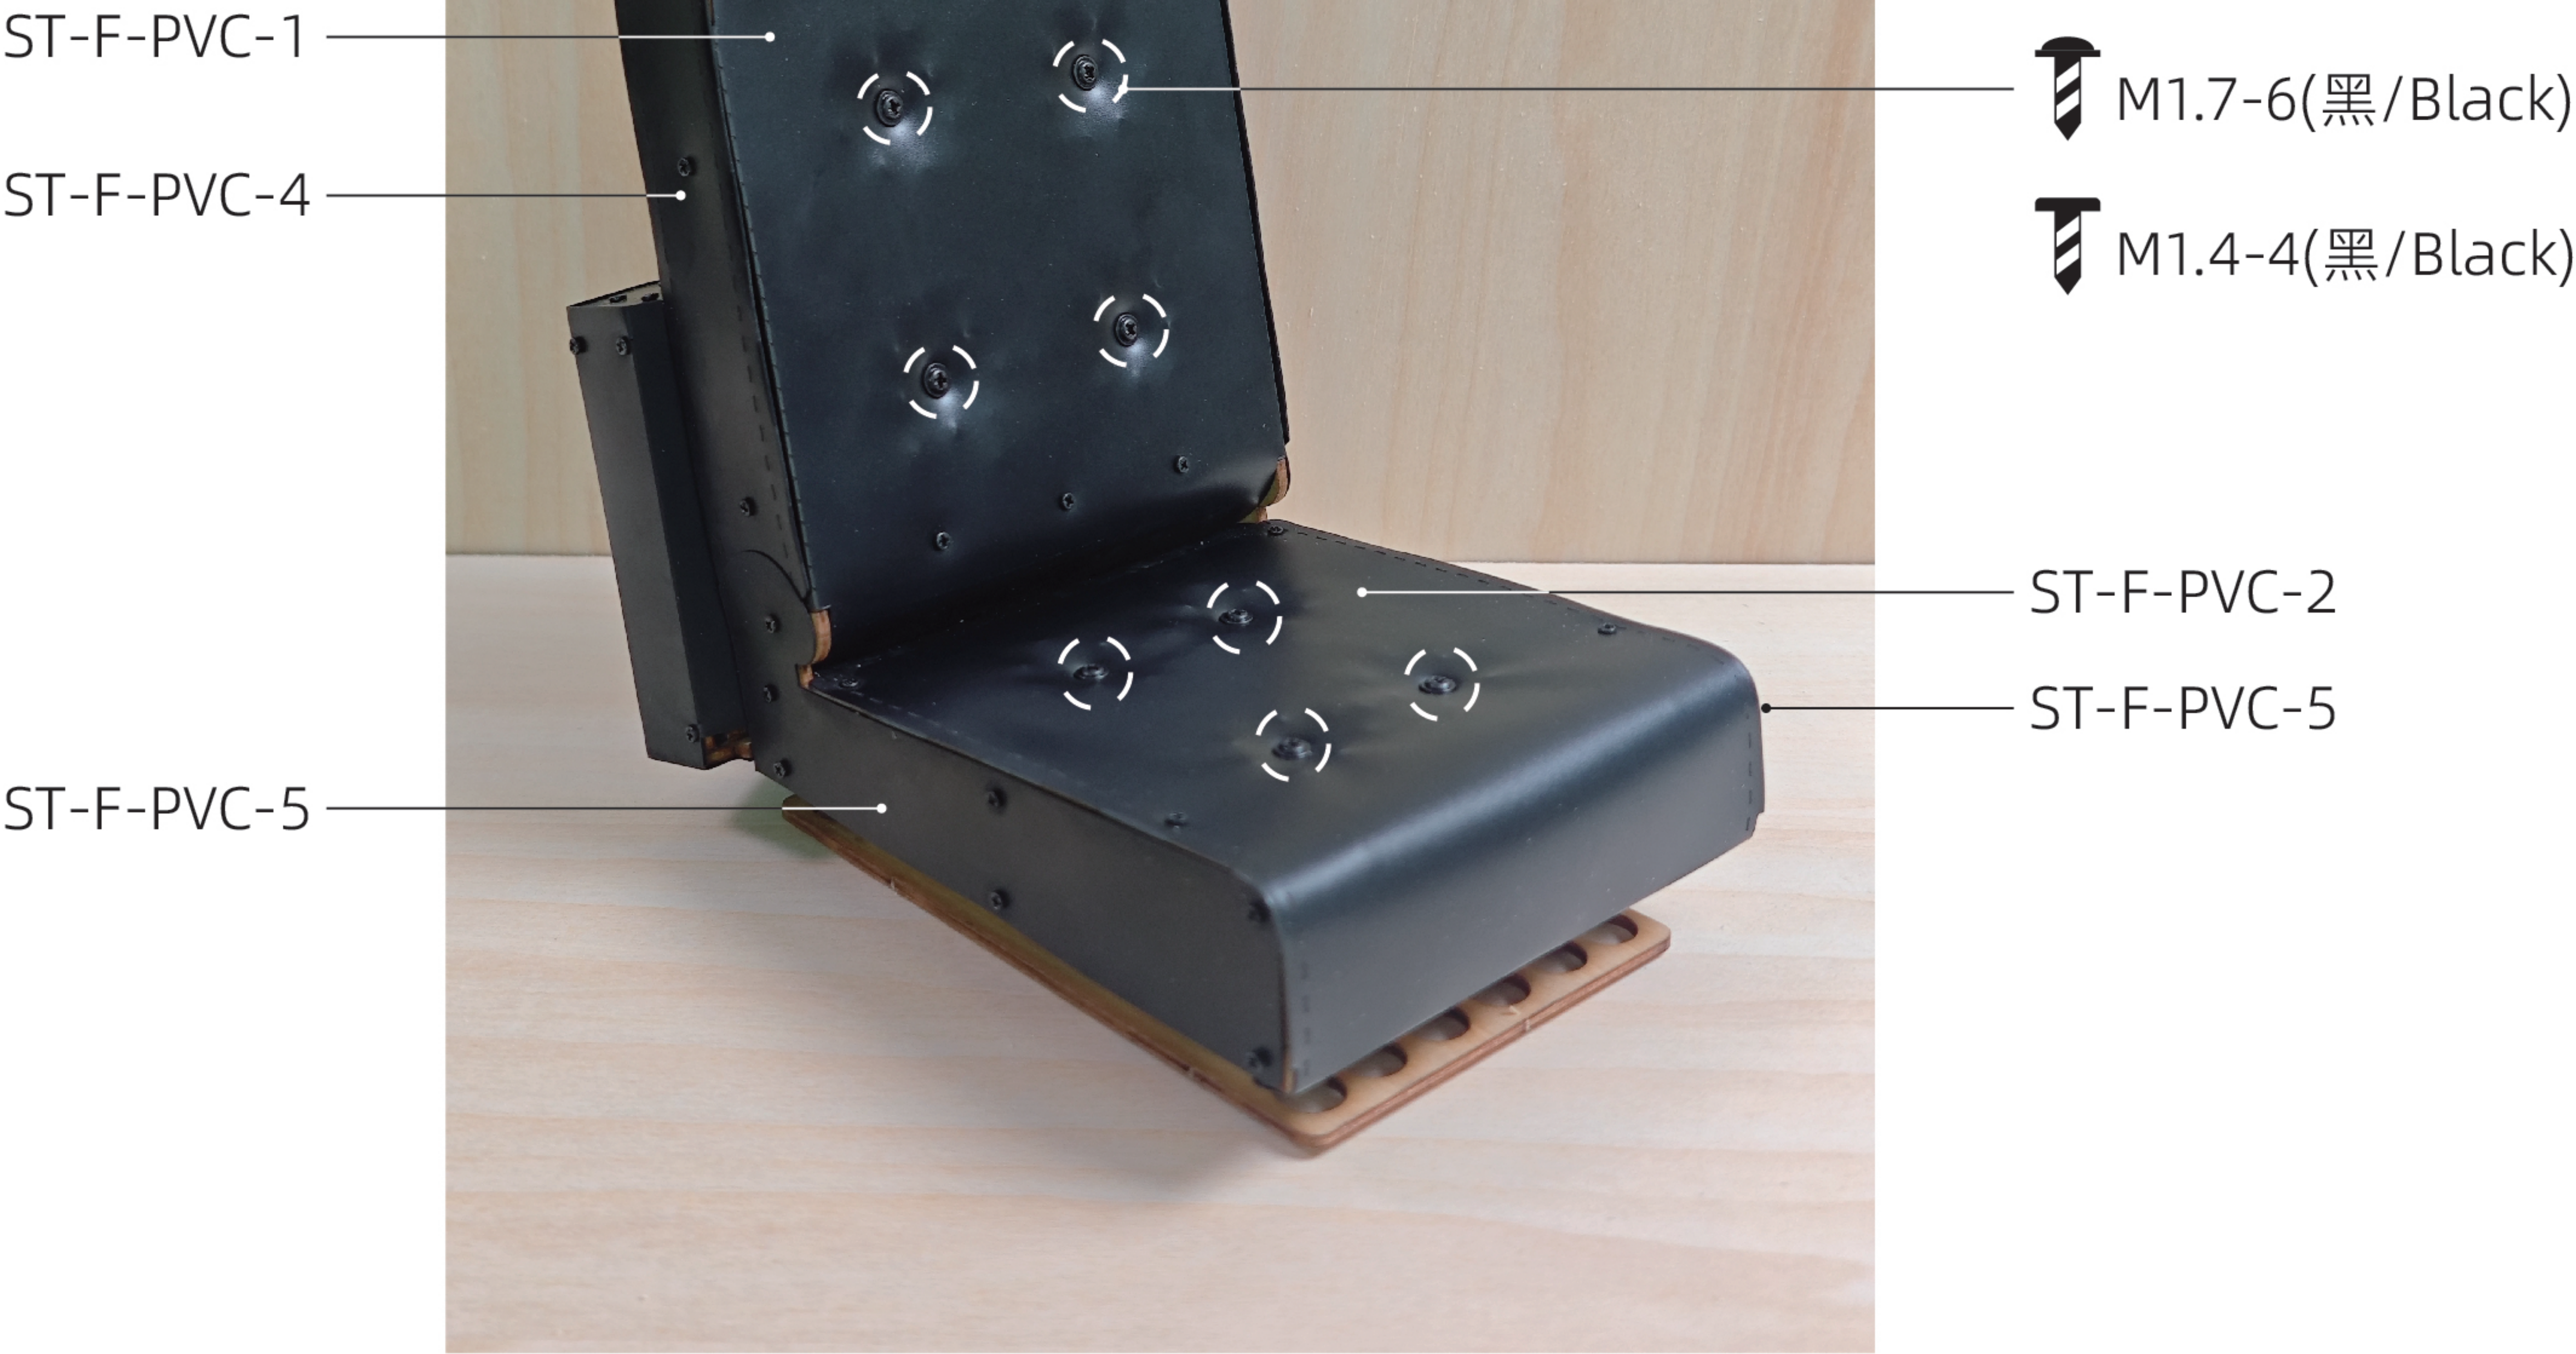




M2锁紧螺母/M2 Lock Nut

DIY
3mm 亚克力/3mm PMMA


- 注意！
- 1、下图装饰图孔位开孔。
 - 2、此处装饰件需背面上胶水。
- Caution!
- 1.Drill holes at the marked positions on the decorative drawing below.
 - 2.Apply glue to the back of the decorative part here.

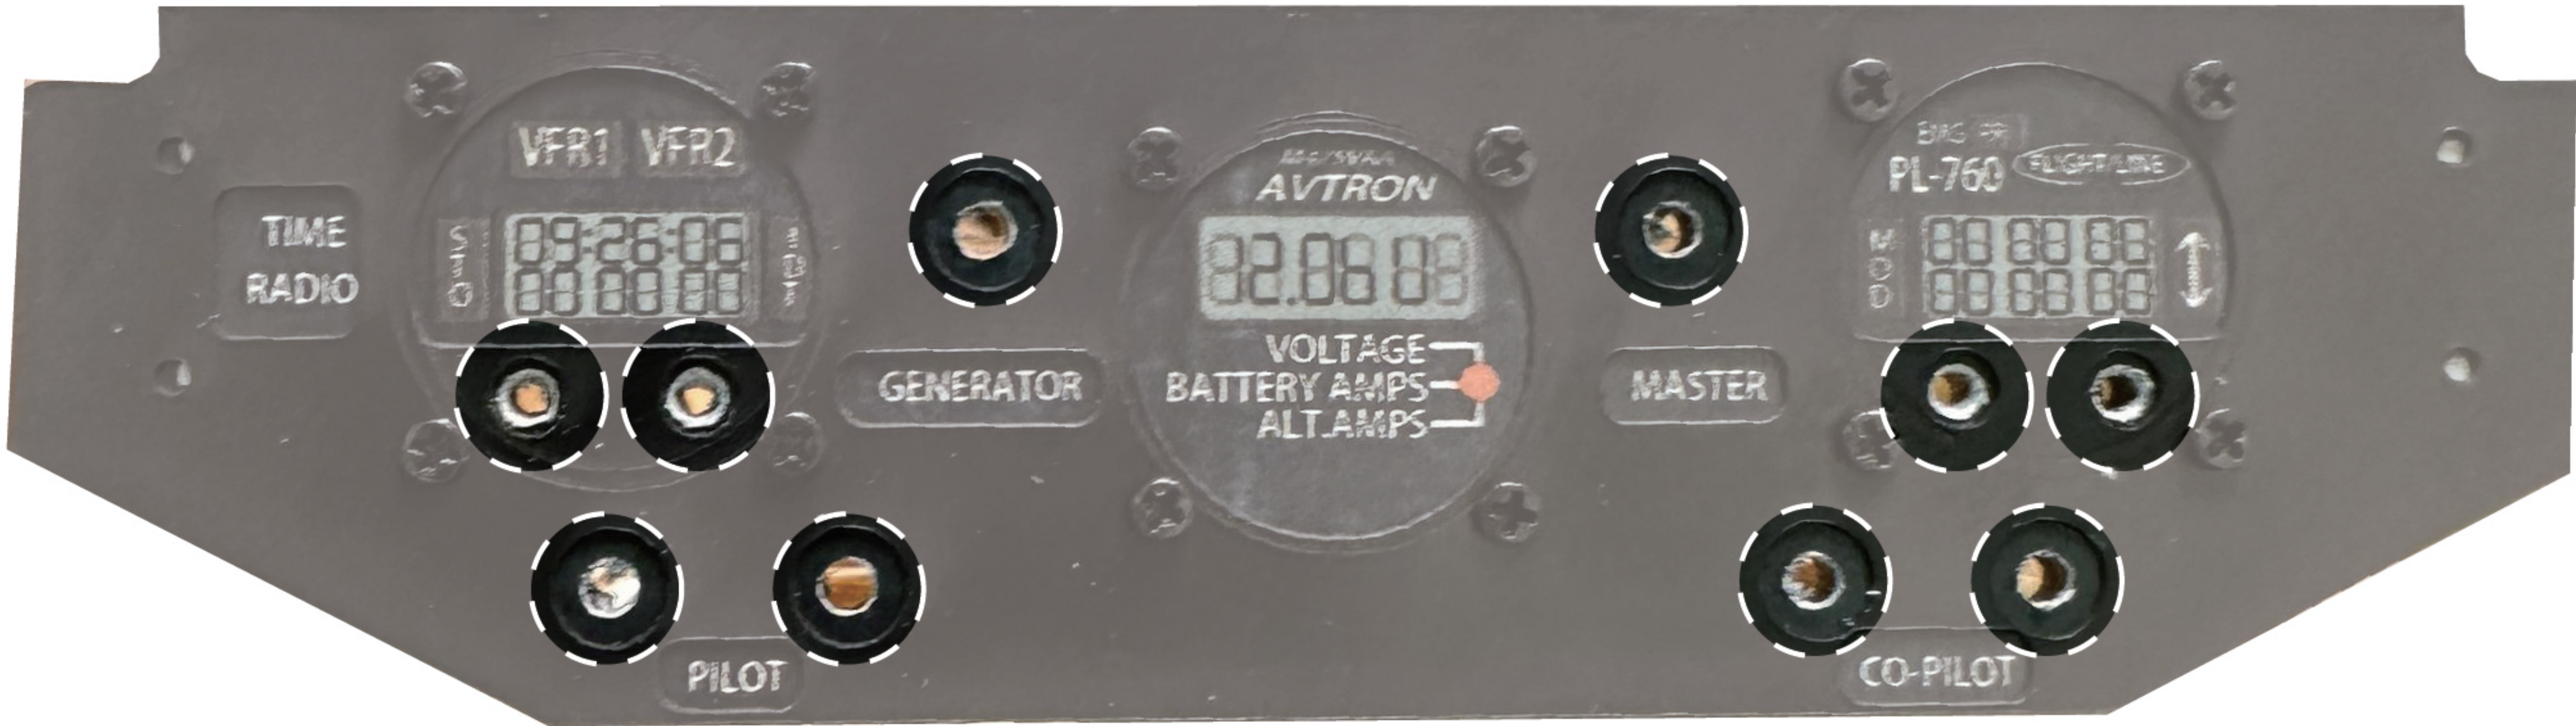



座椅B Pilot Seat B



ST-2-02

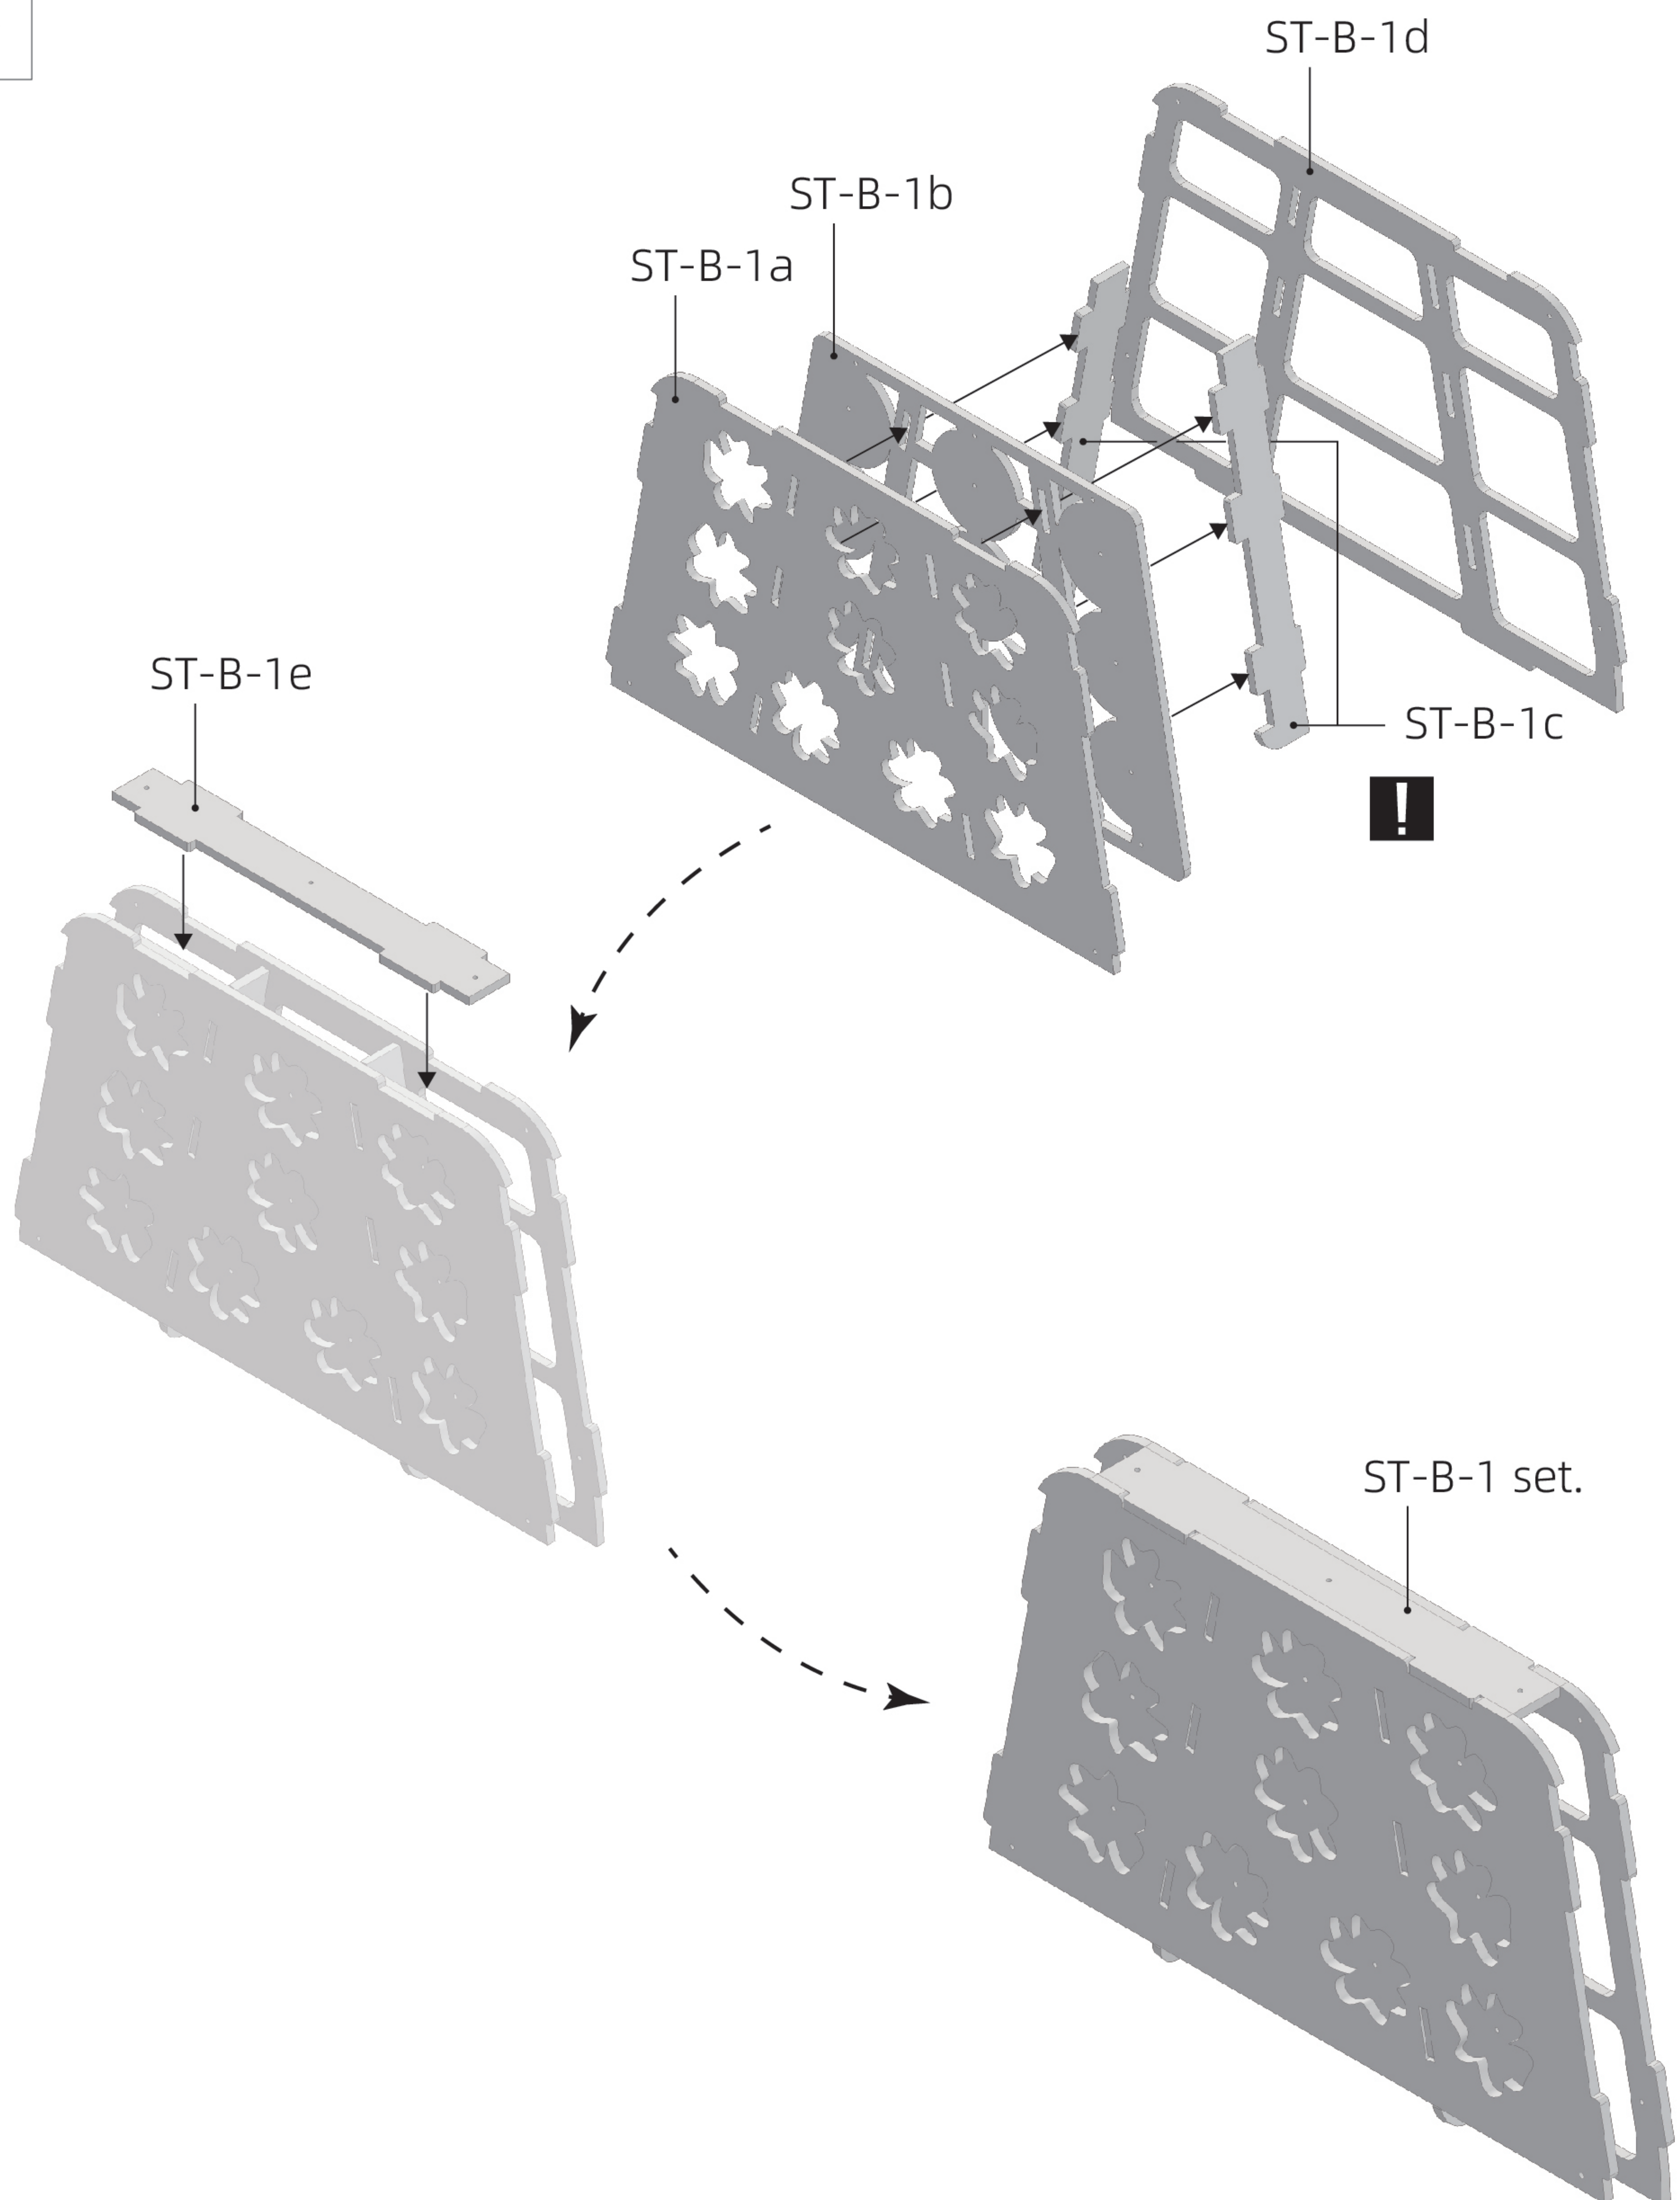

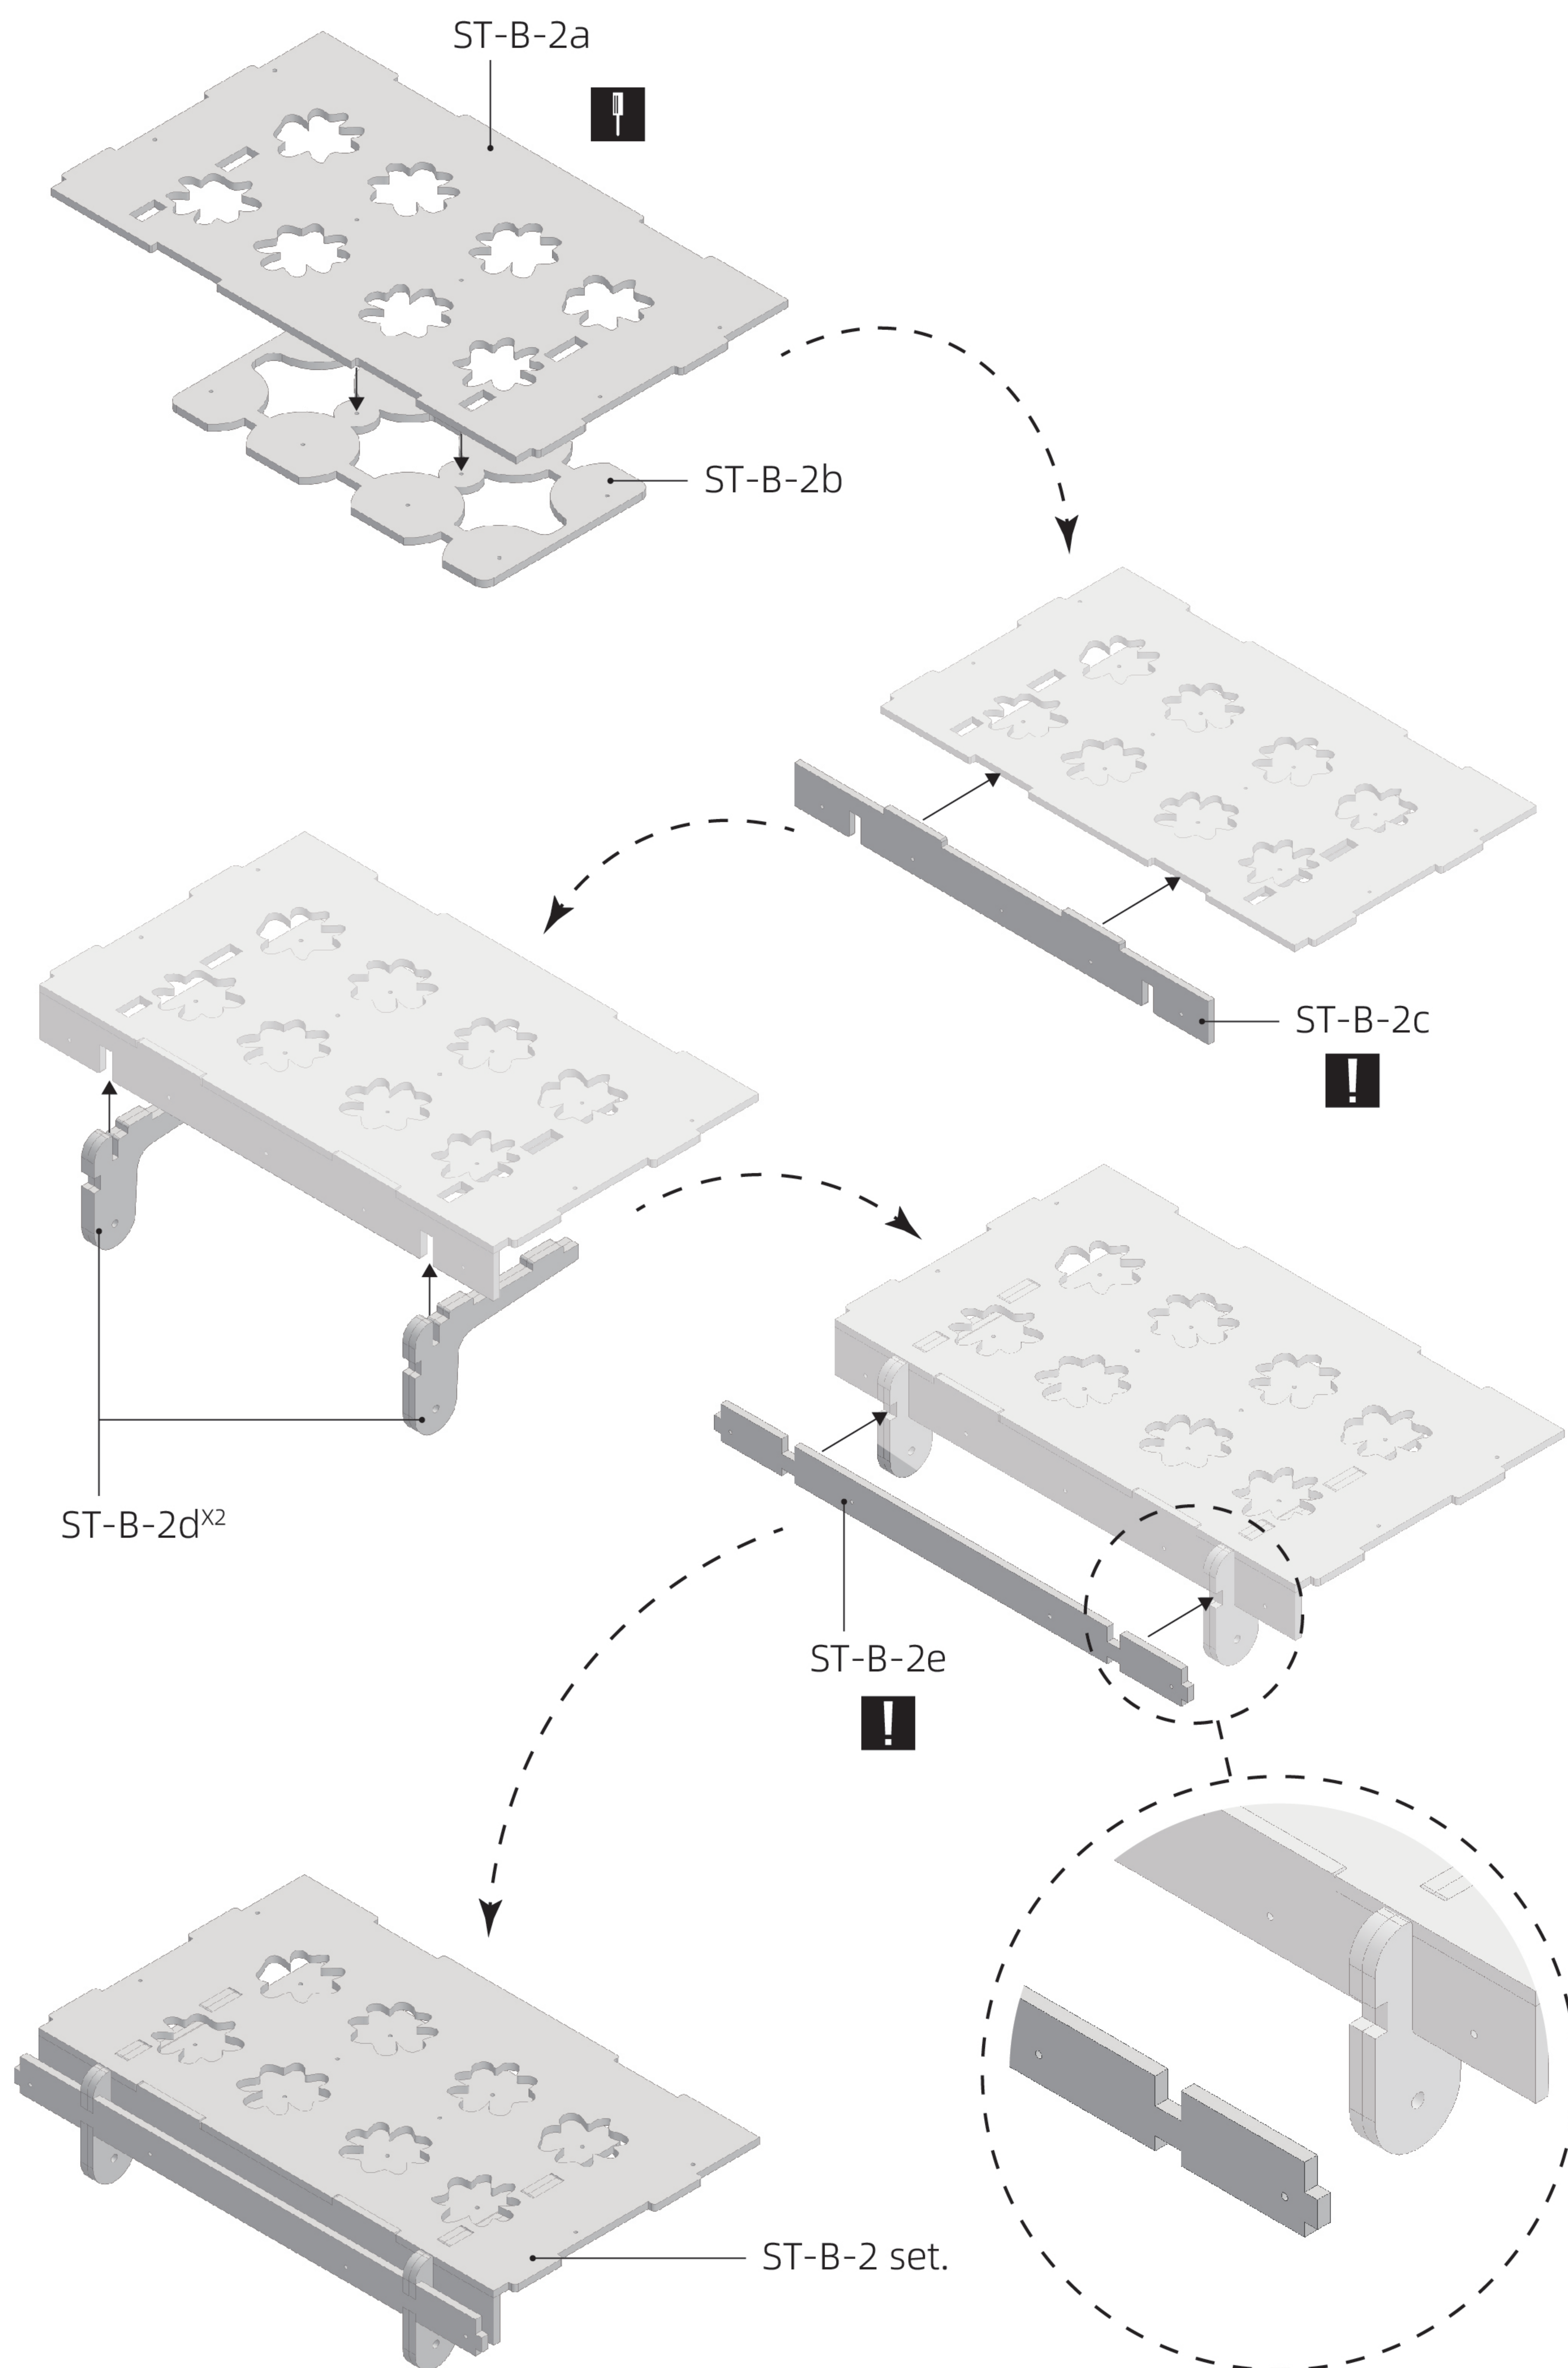

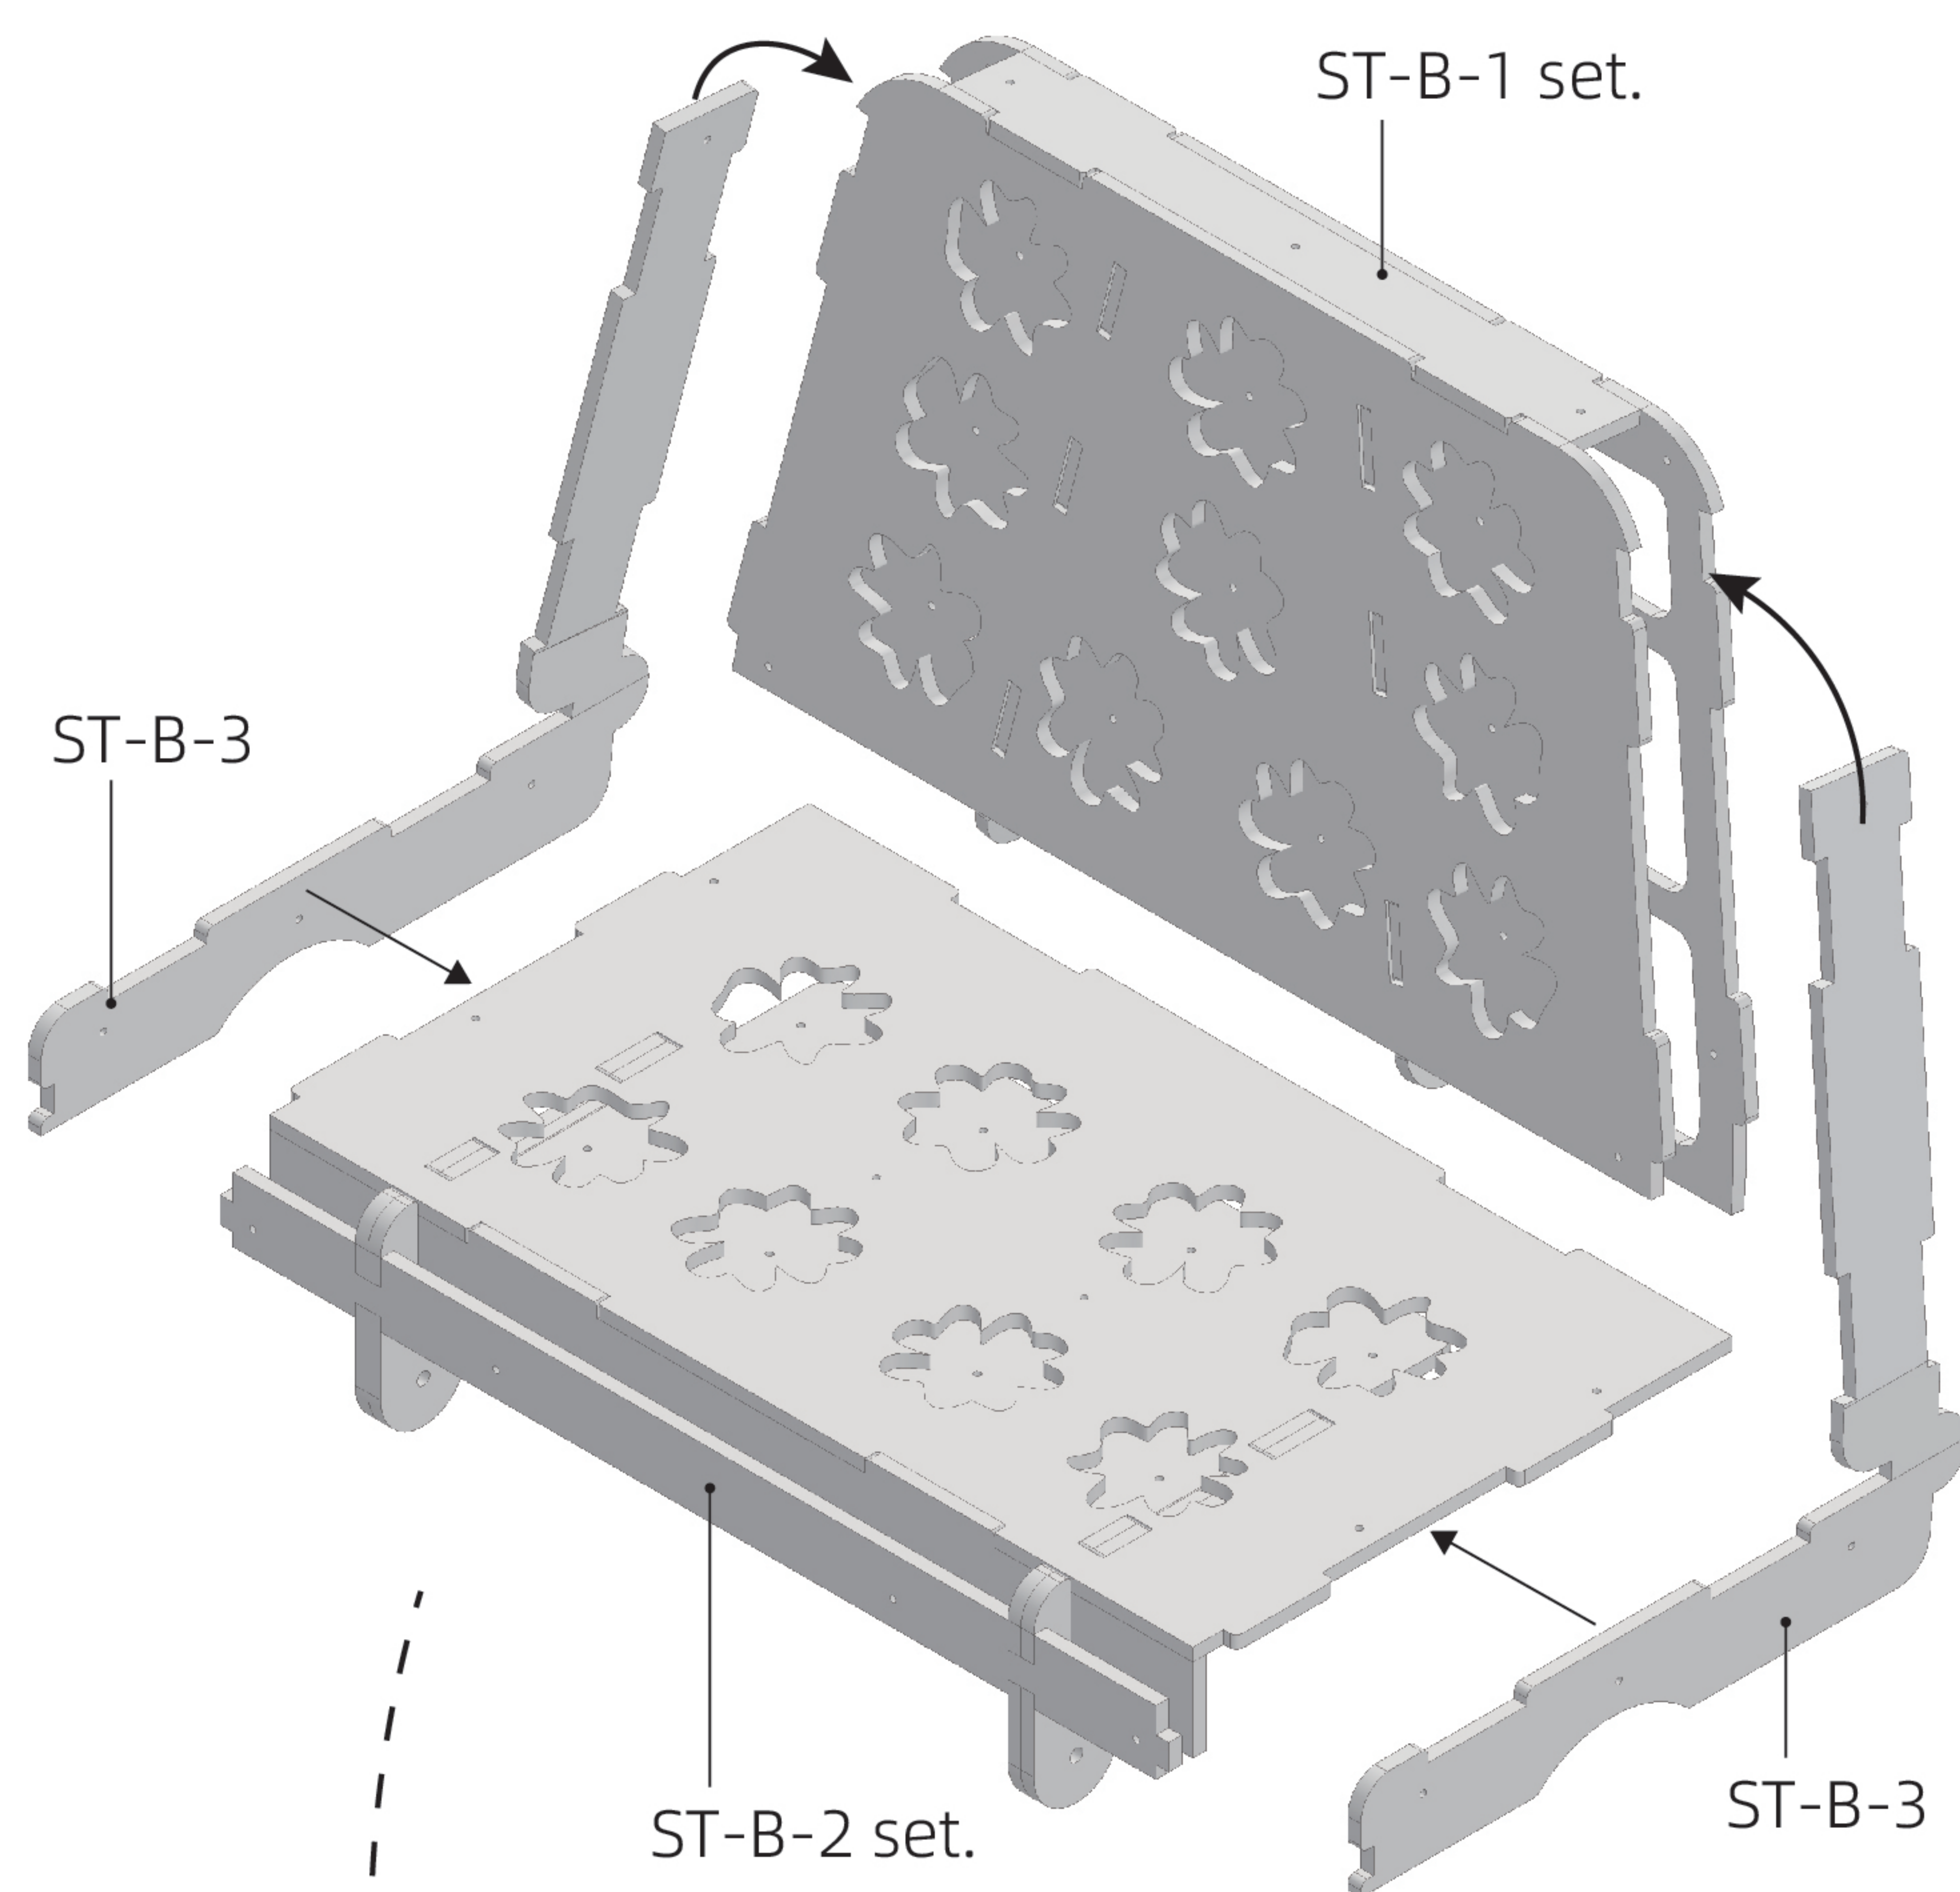


注意!

此处需将“ST-B-1 set.”与“ST-B-3”紧密固定，必要时使用“520胶水”与“固化剂”。

Caution!

Secure 'ST-B-1 set' and 'ST-B-3' firmly together.

Use strong adhesive and curing agent if necessary.

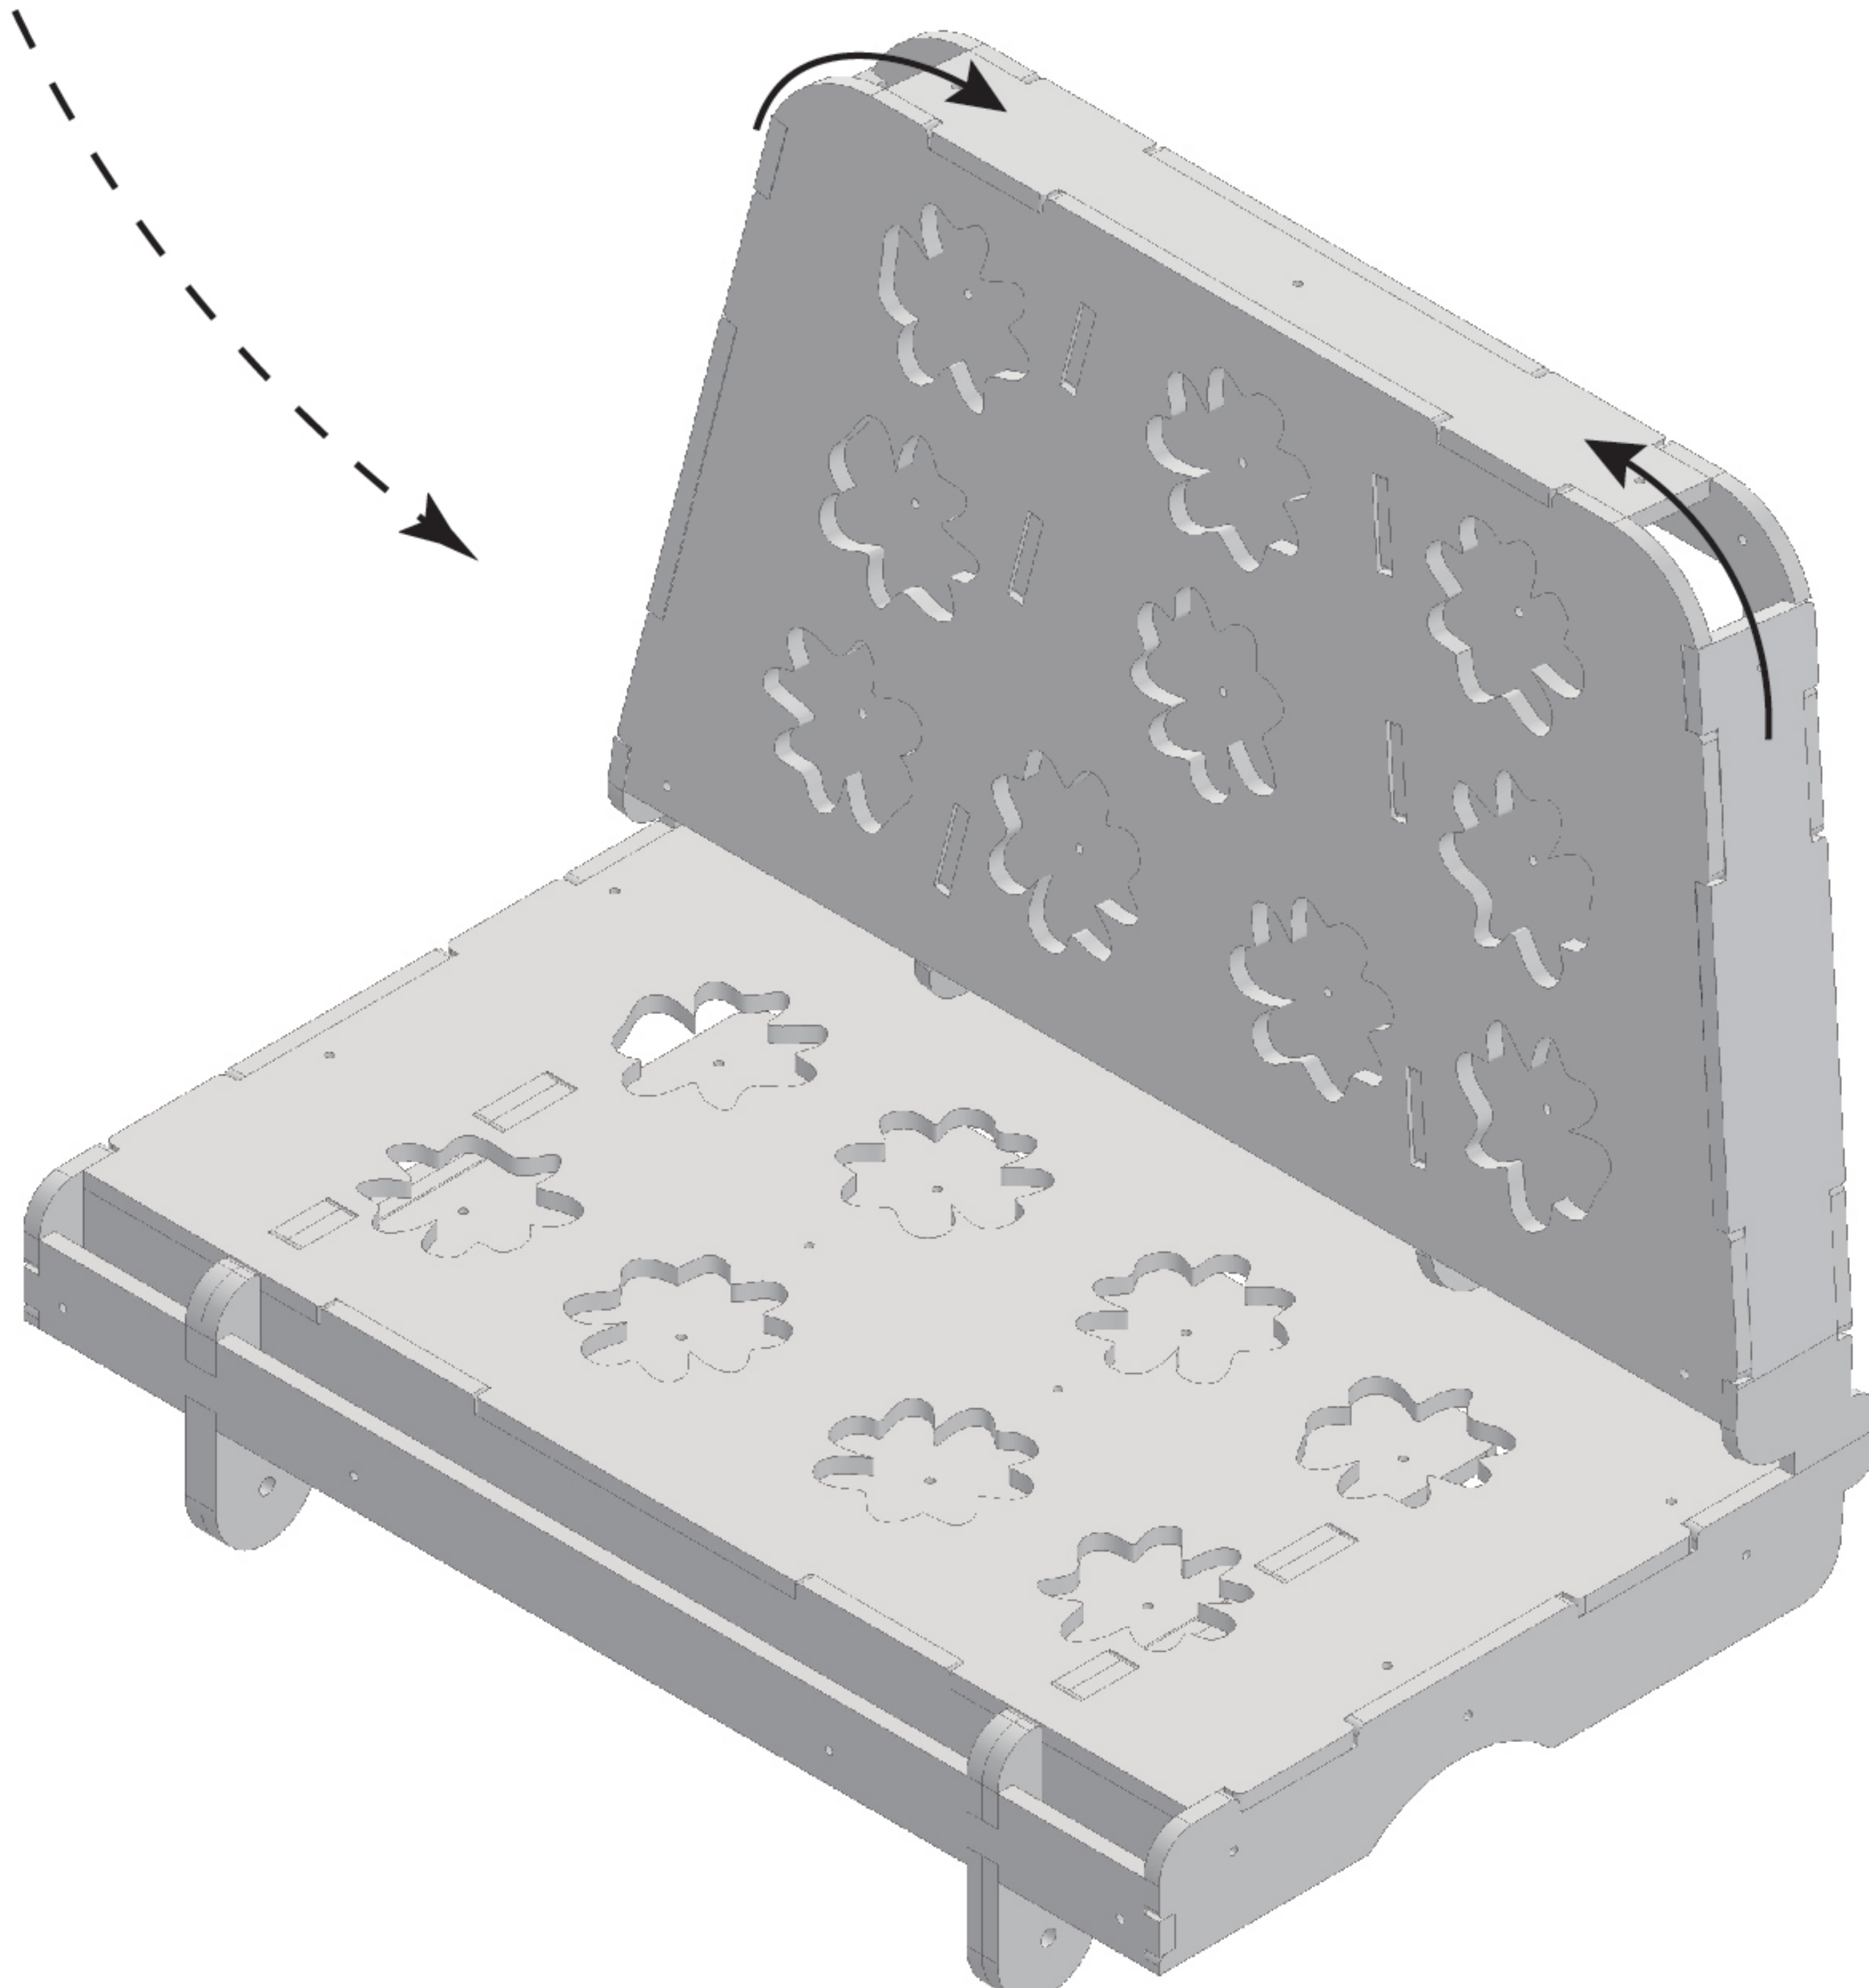

座椅B	B-0.3-01
4	B-0.3-02

 M1.7-6(黑/Black)

 M1.4-4(黑/Black)

ST-B-PVC-1

ST-B-PVC-4

ST-B-PVC-2

ST-B-PVC-3



ST-B-PVC-5

