



方向舵 Rudder

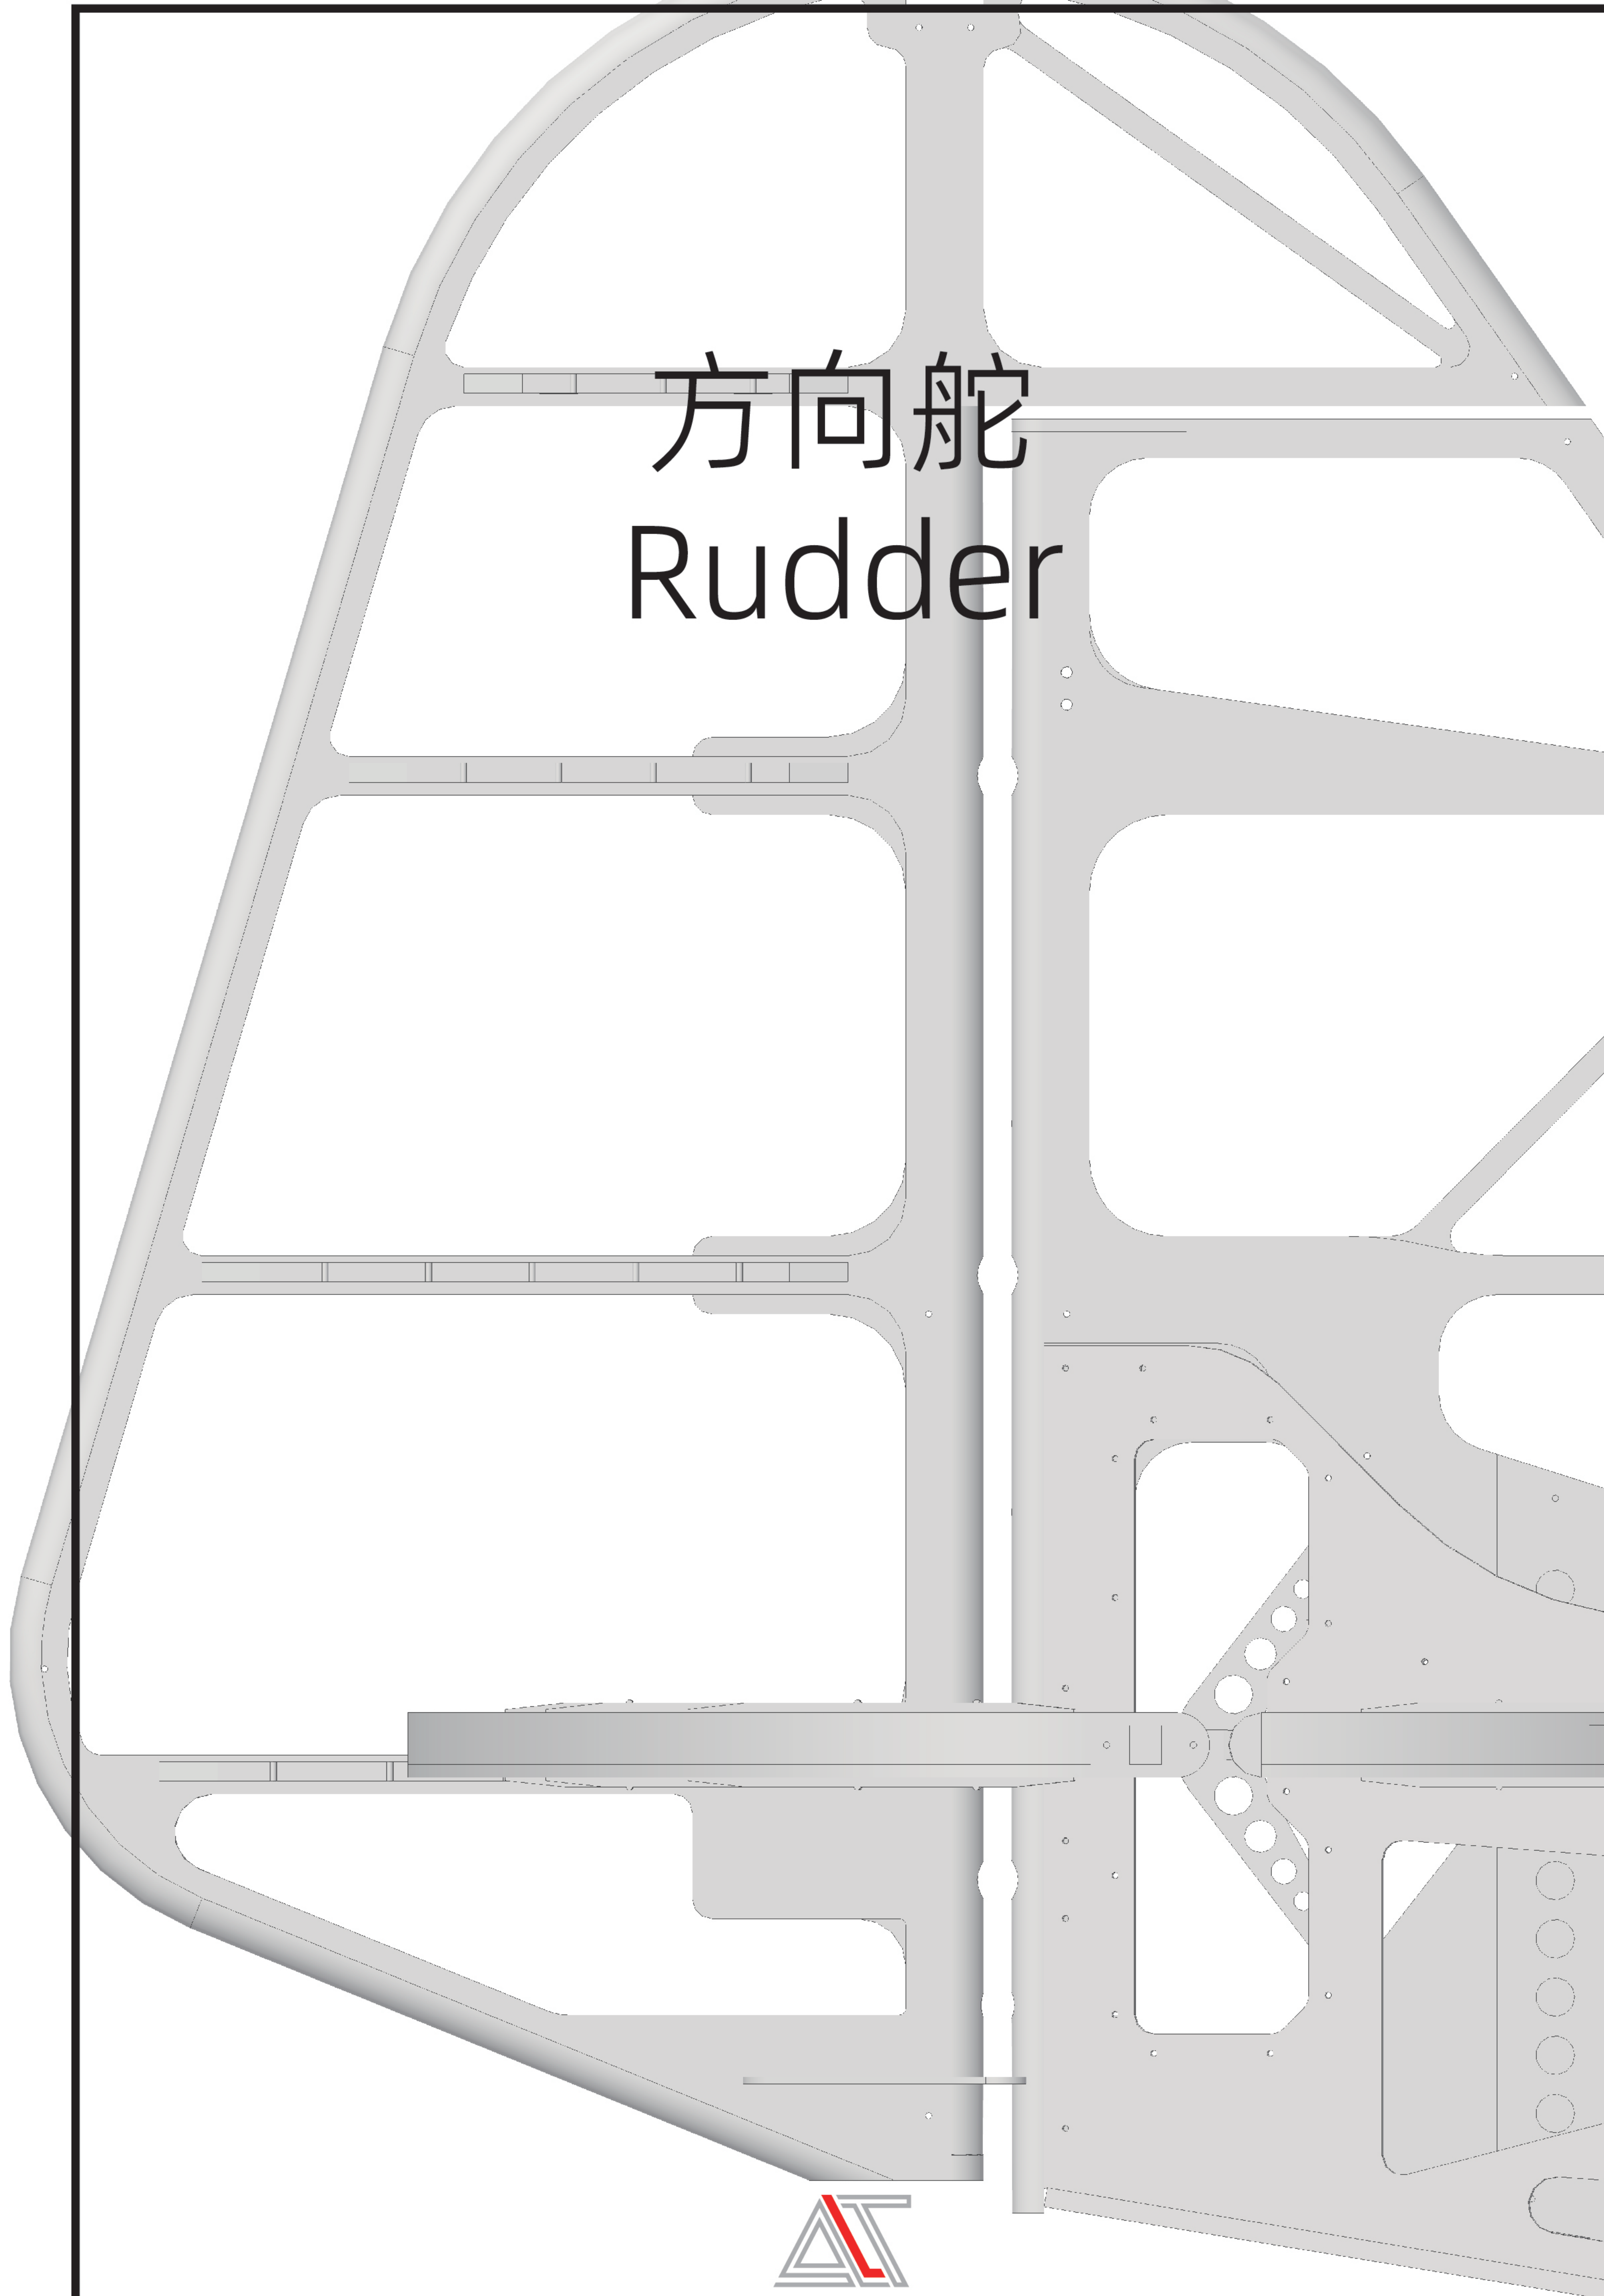


方向舵 Rudder





FSL-2-03
WG&FSL-6-02

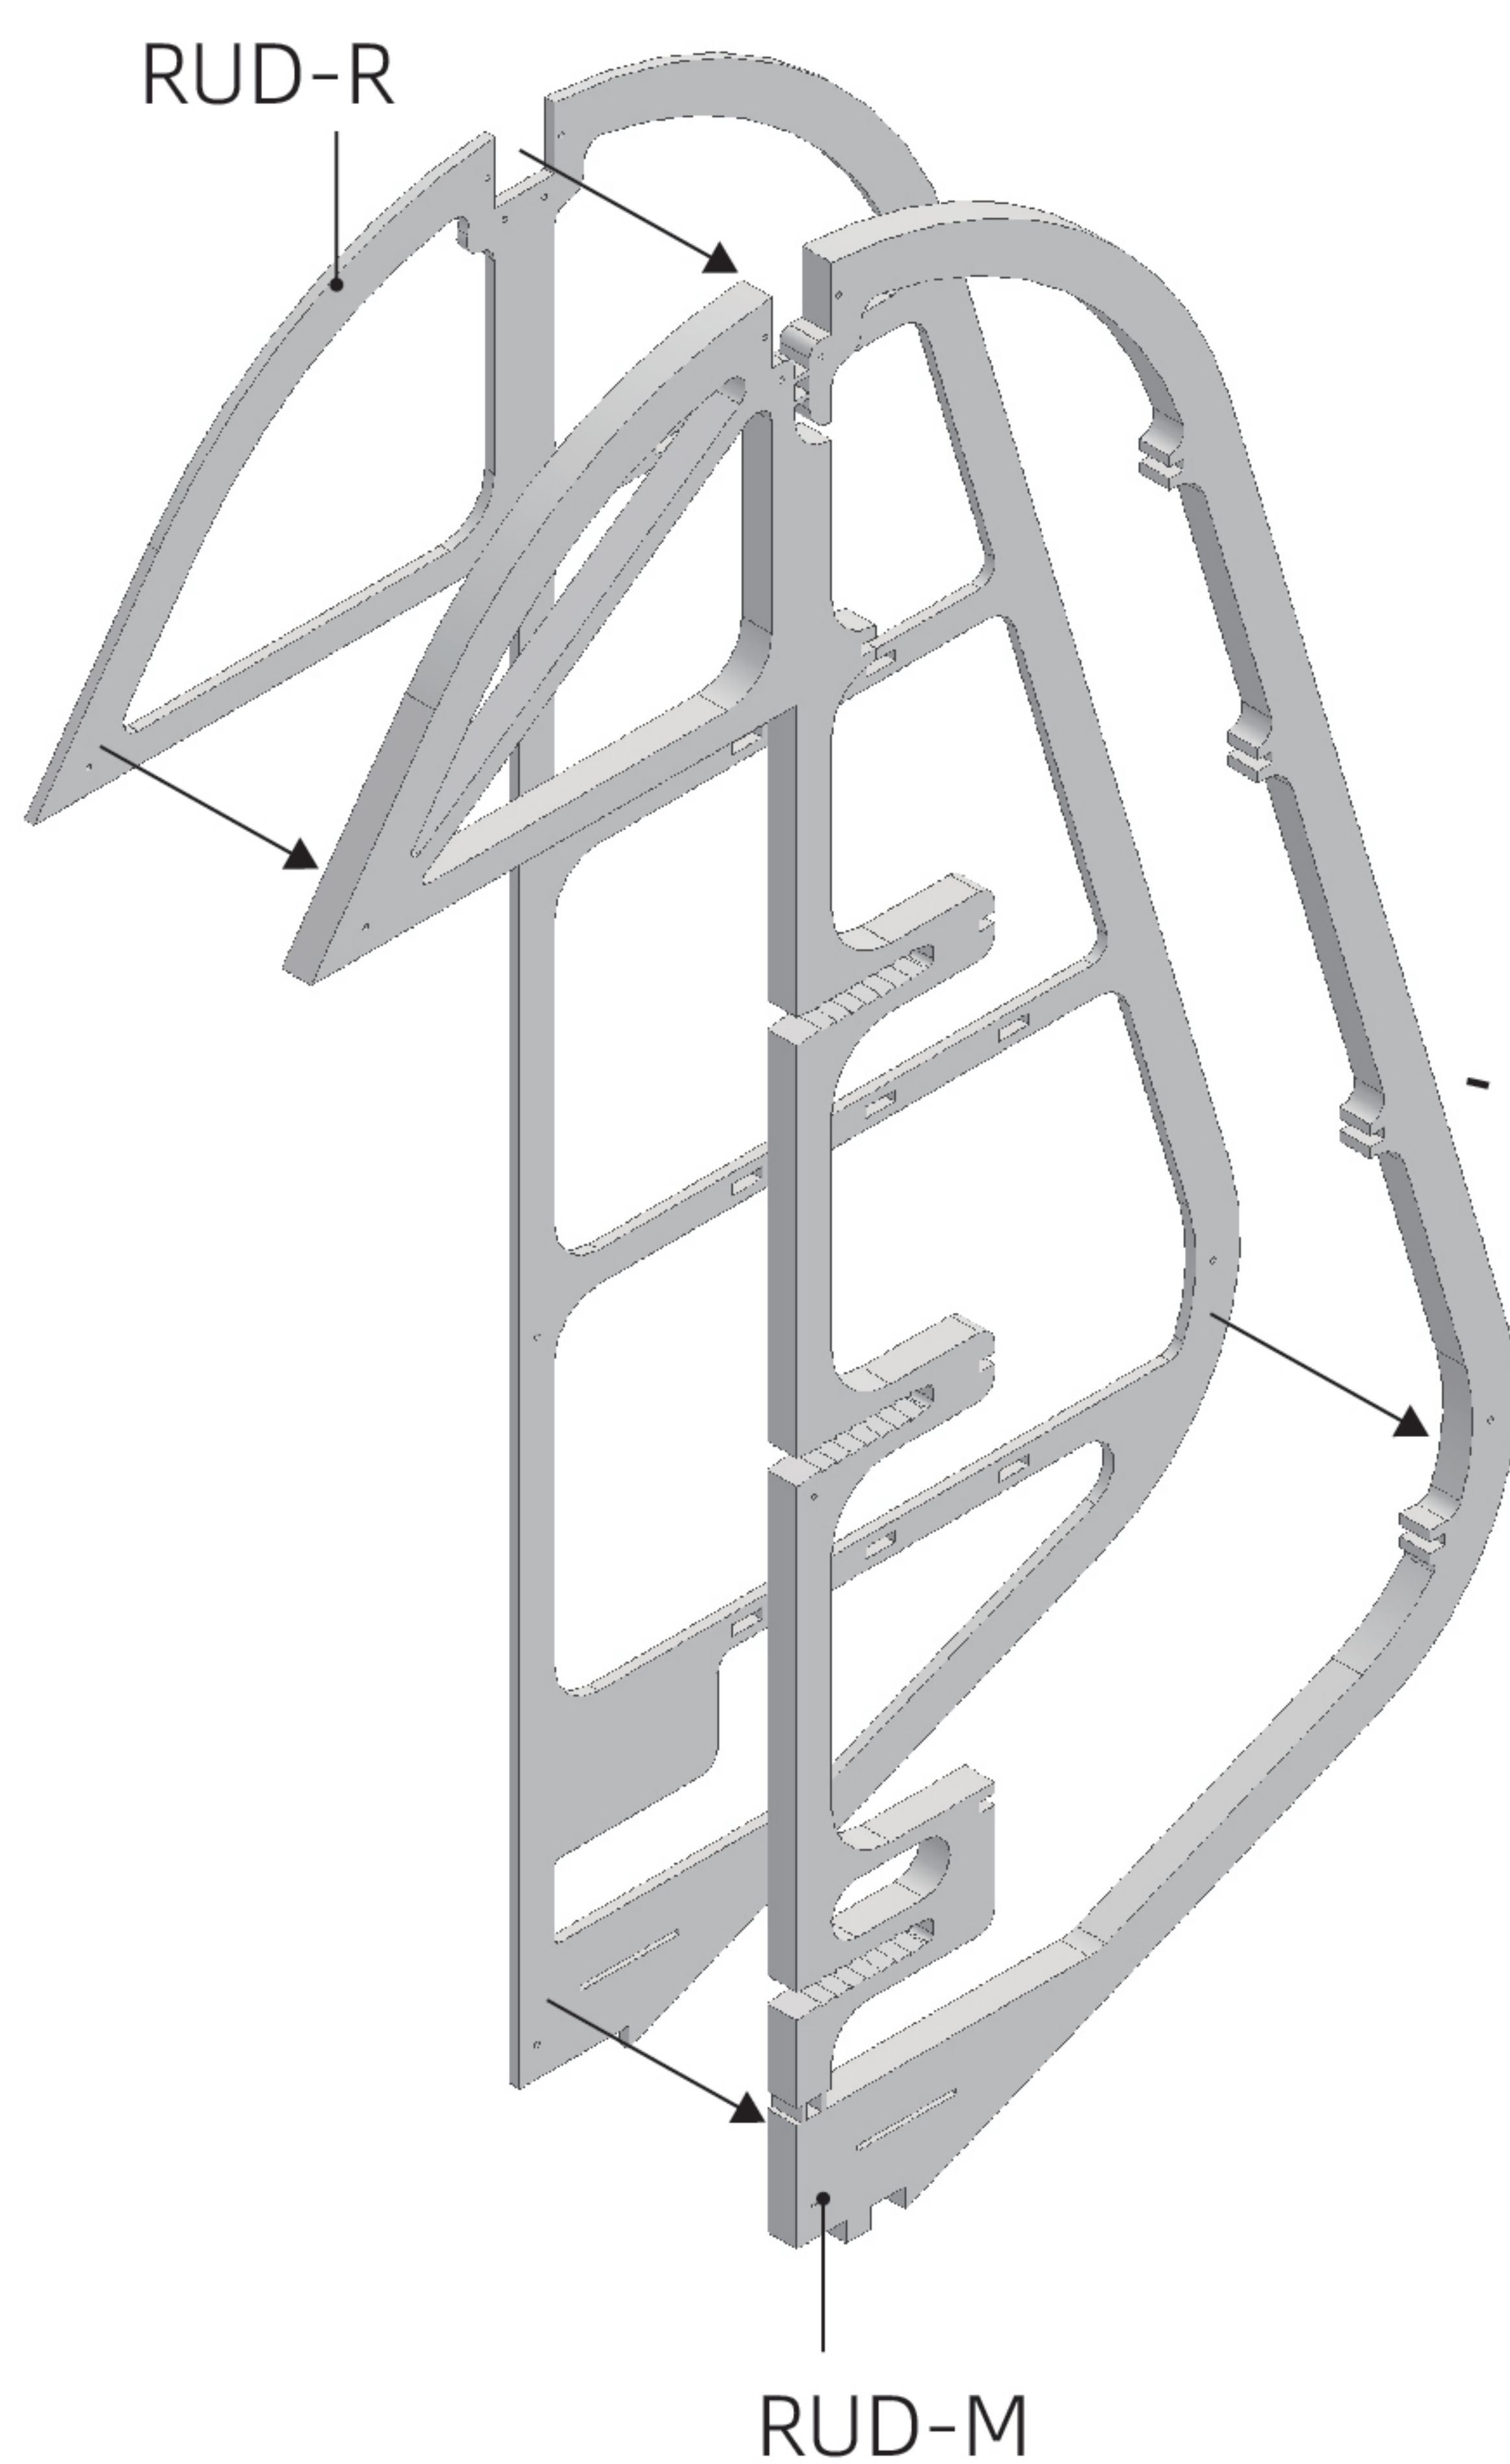


◀ DM 注意方向标
Pay attention to the direction mark.

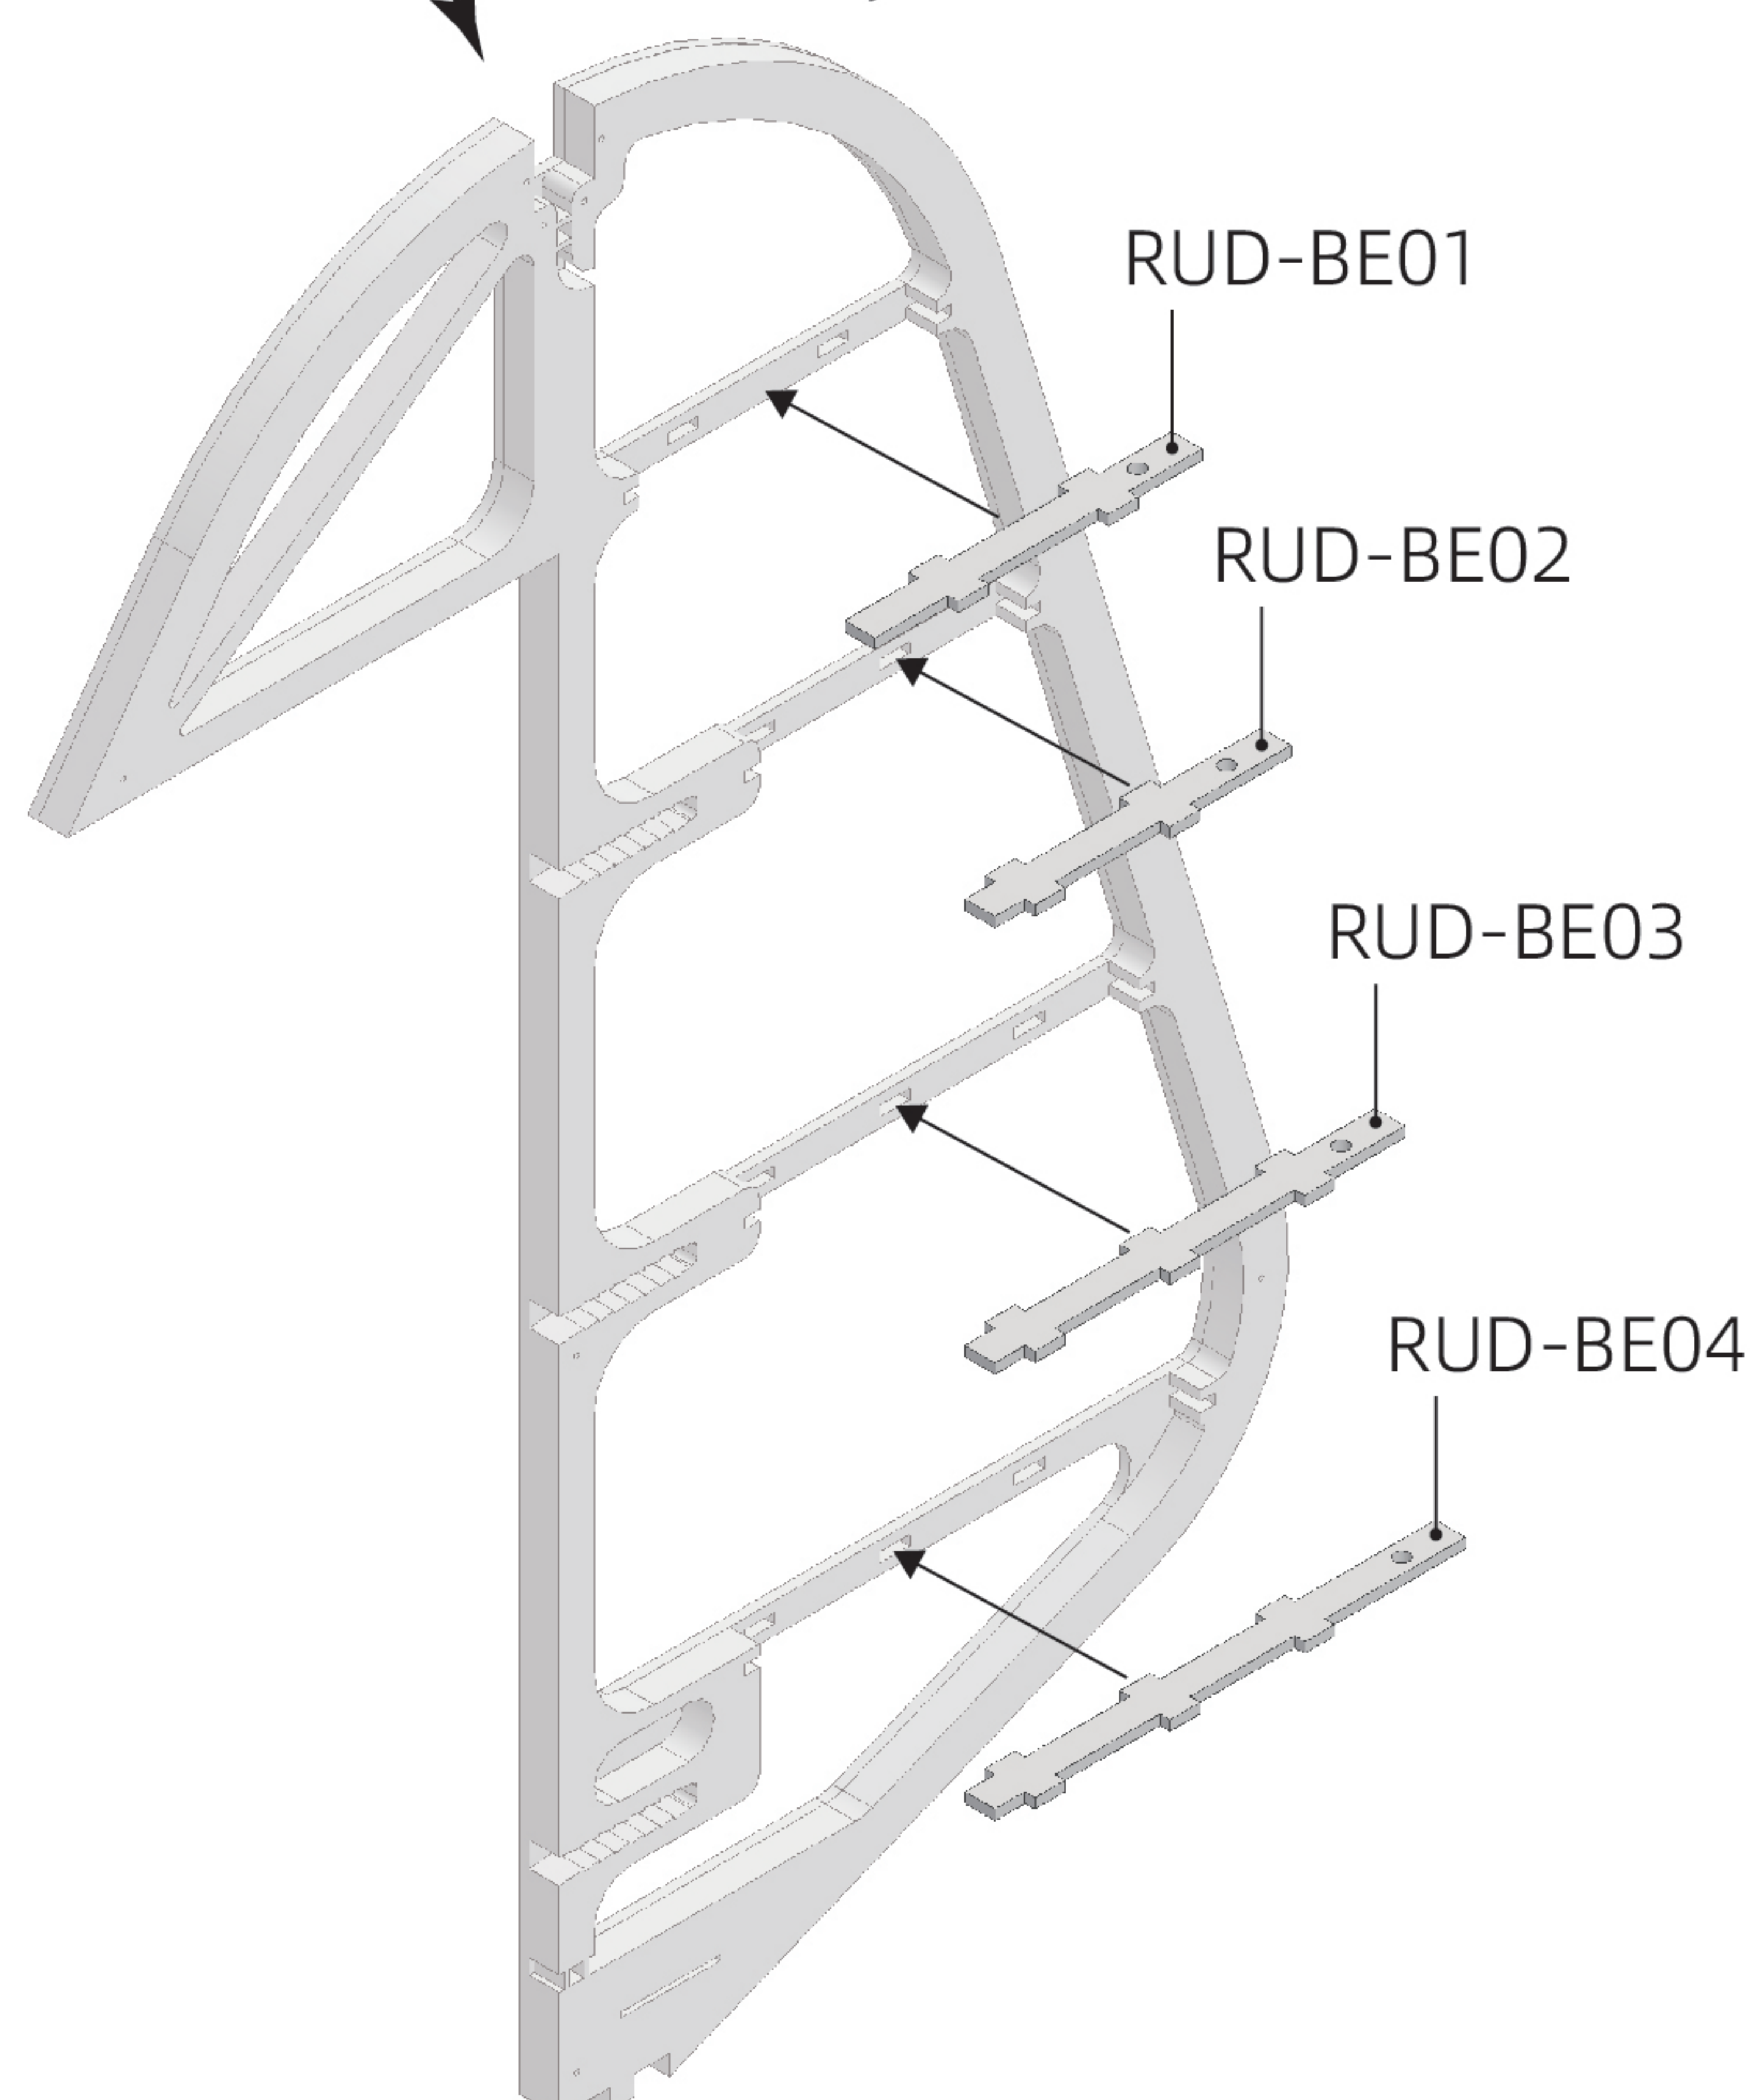

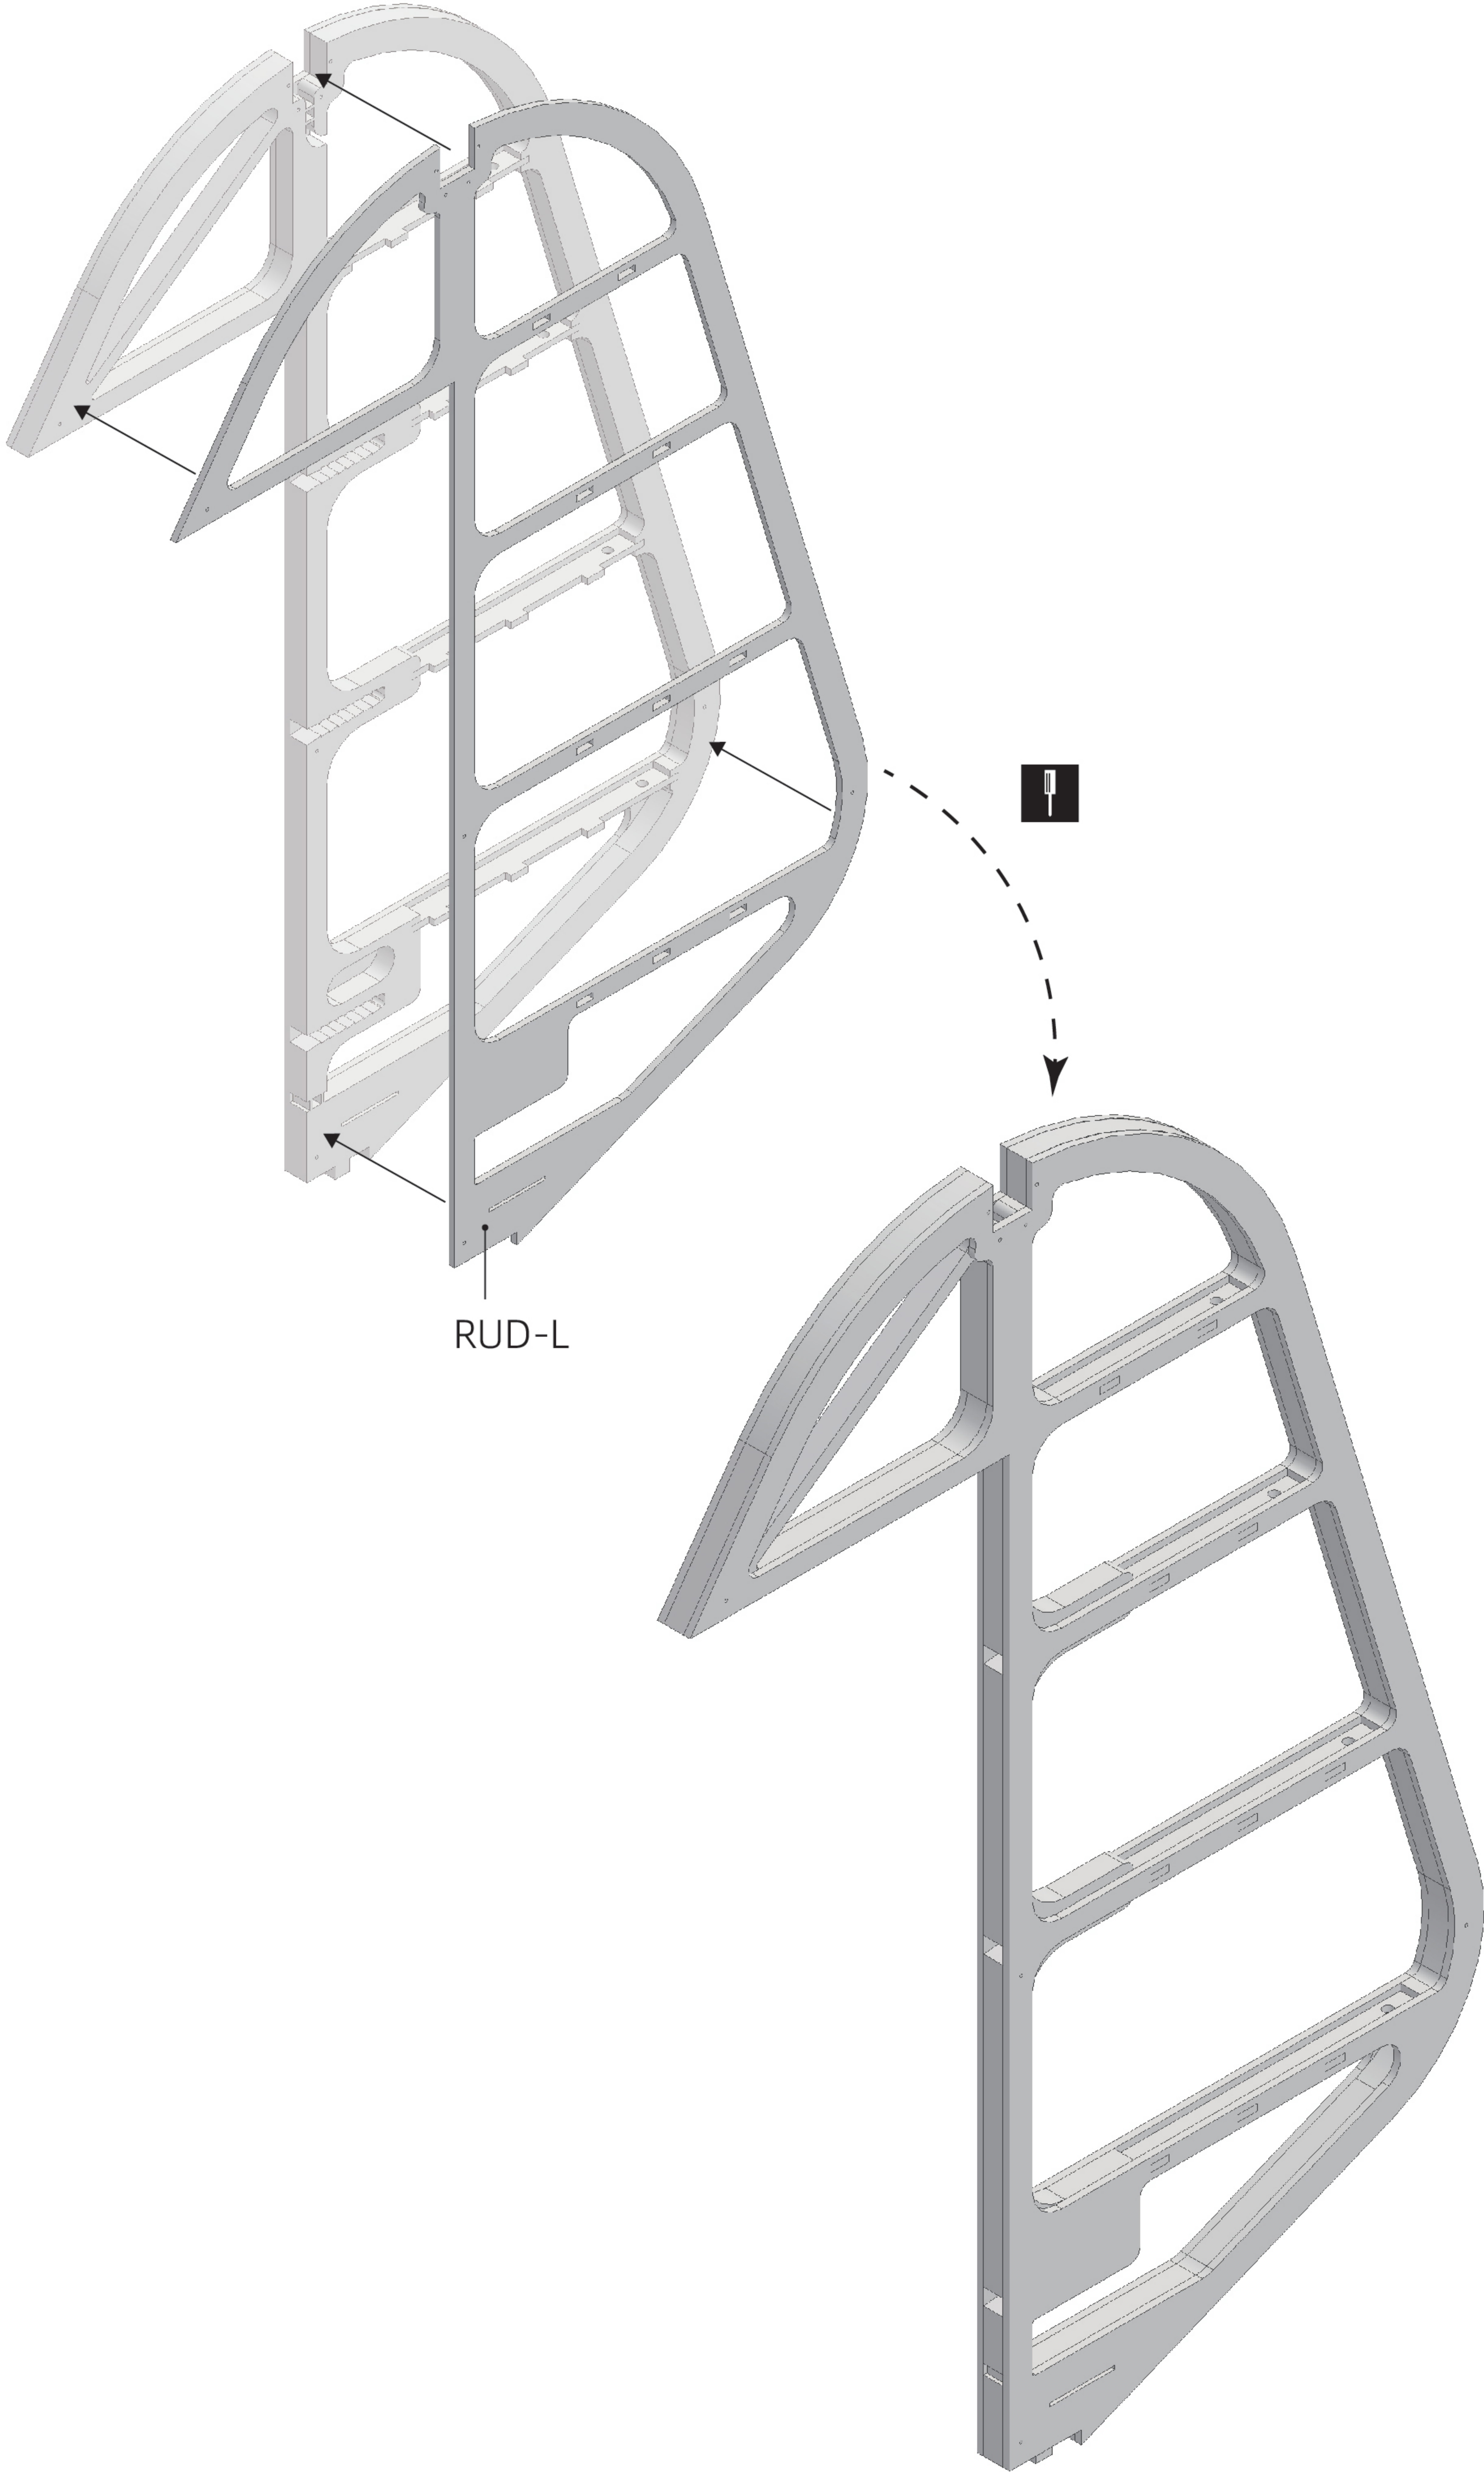



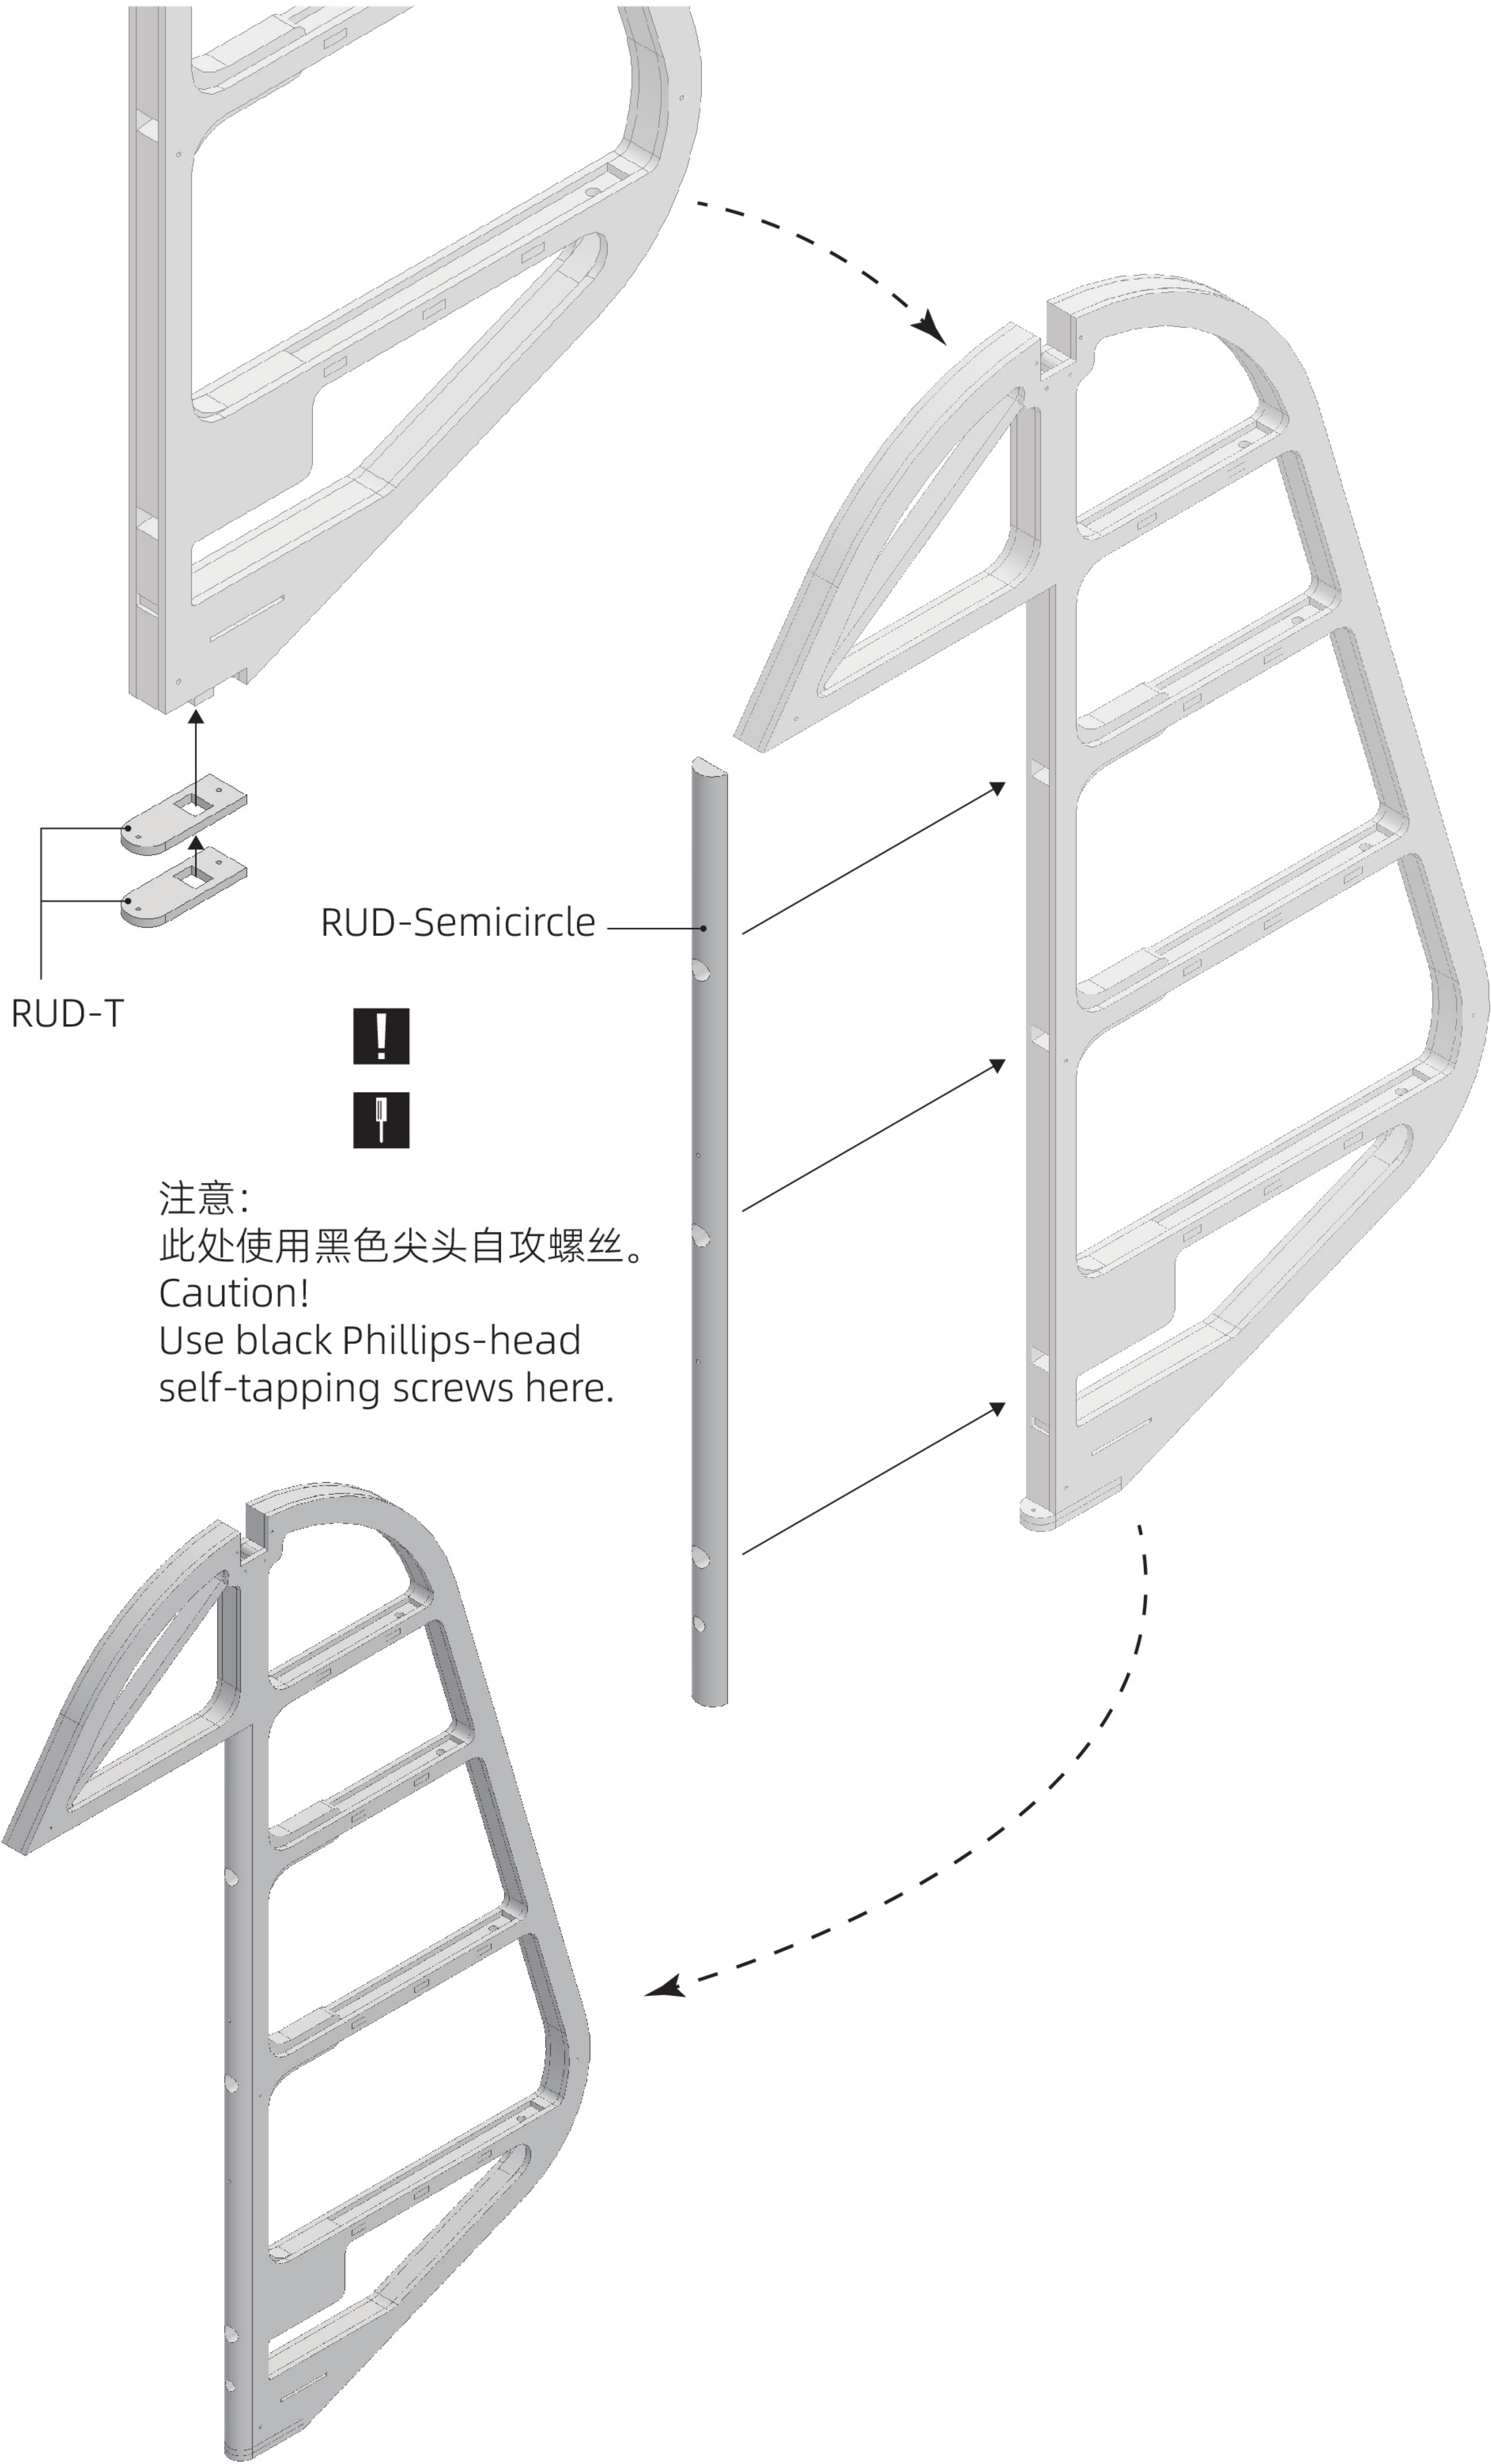


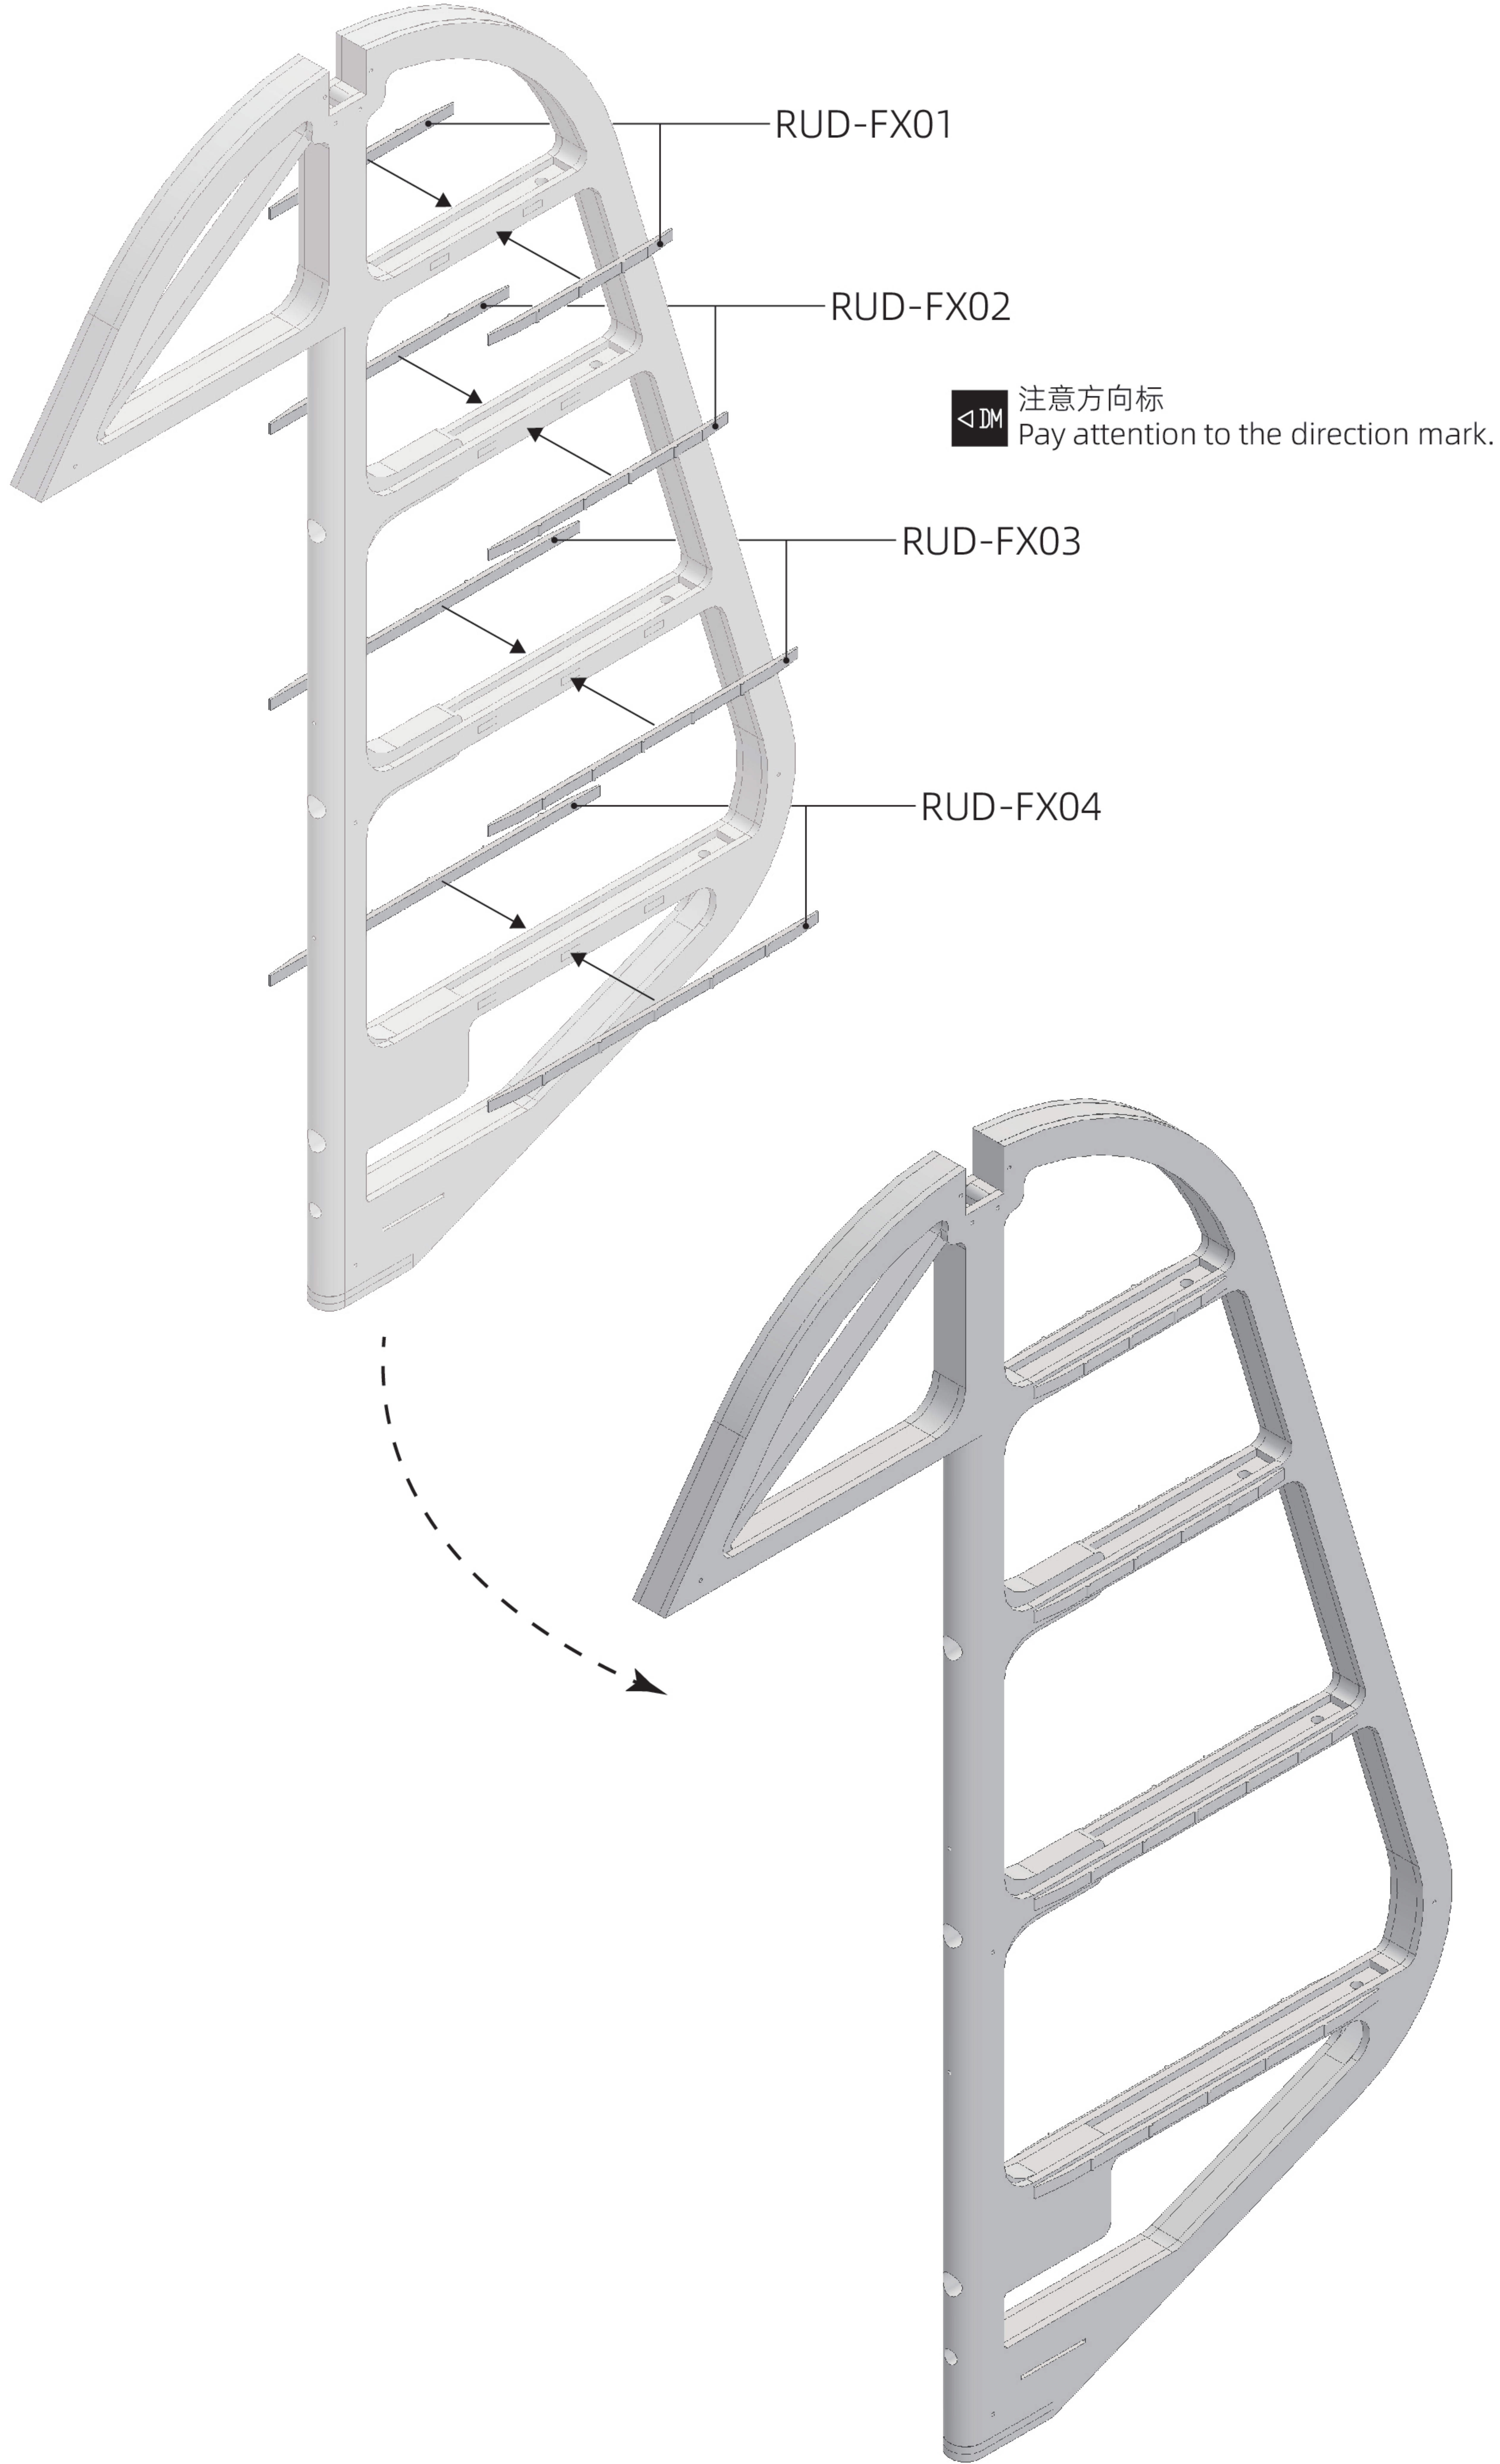




虚线边需要打磨成圆角。
The edges marked by dashed lines need to be sanded to rounded corners.

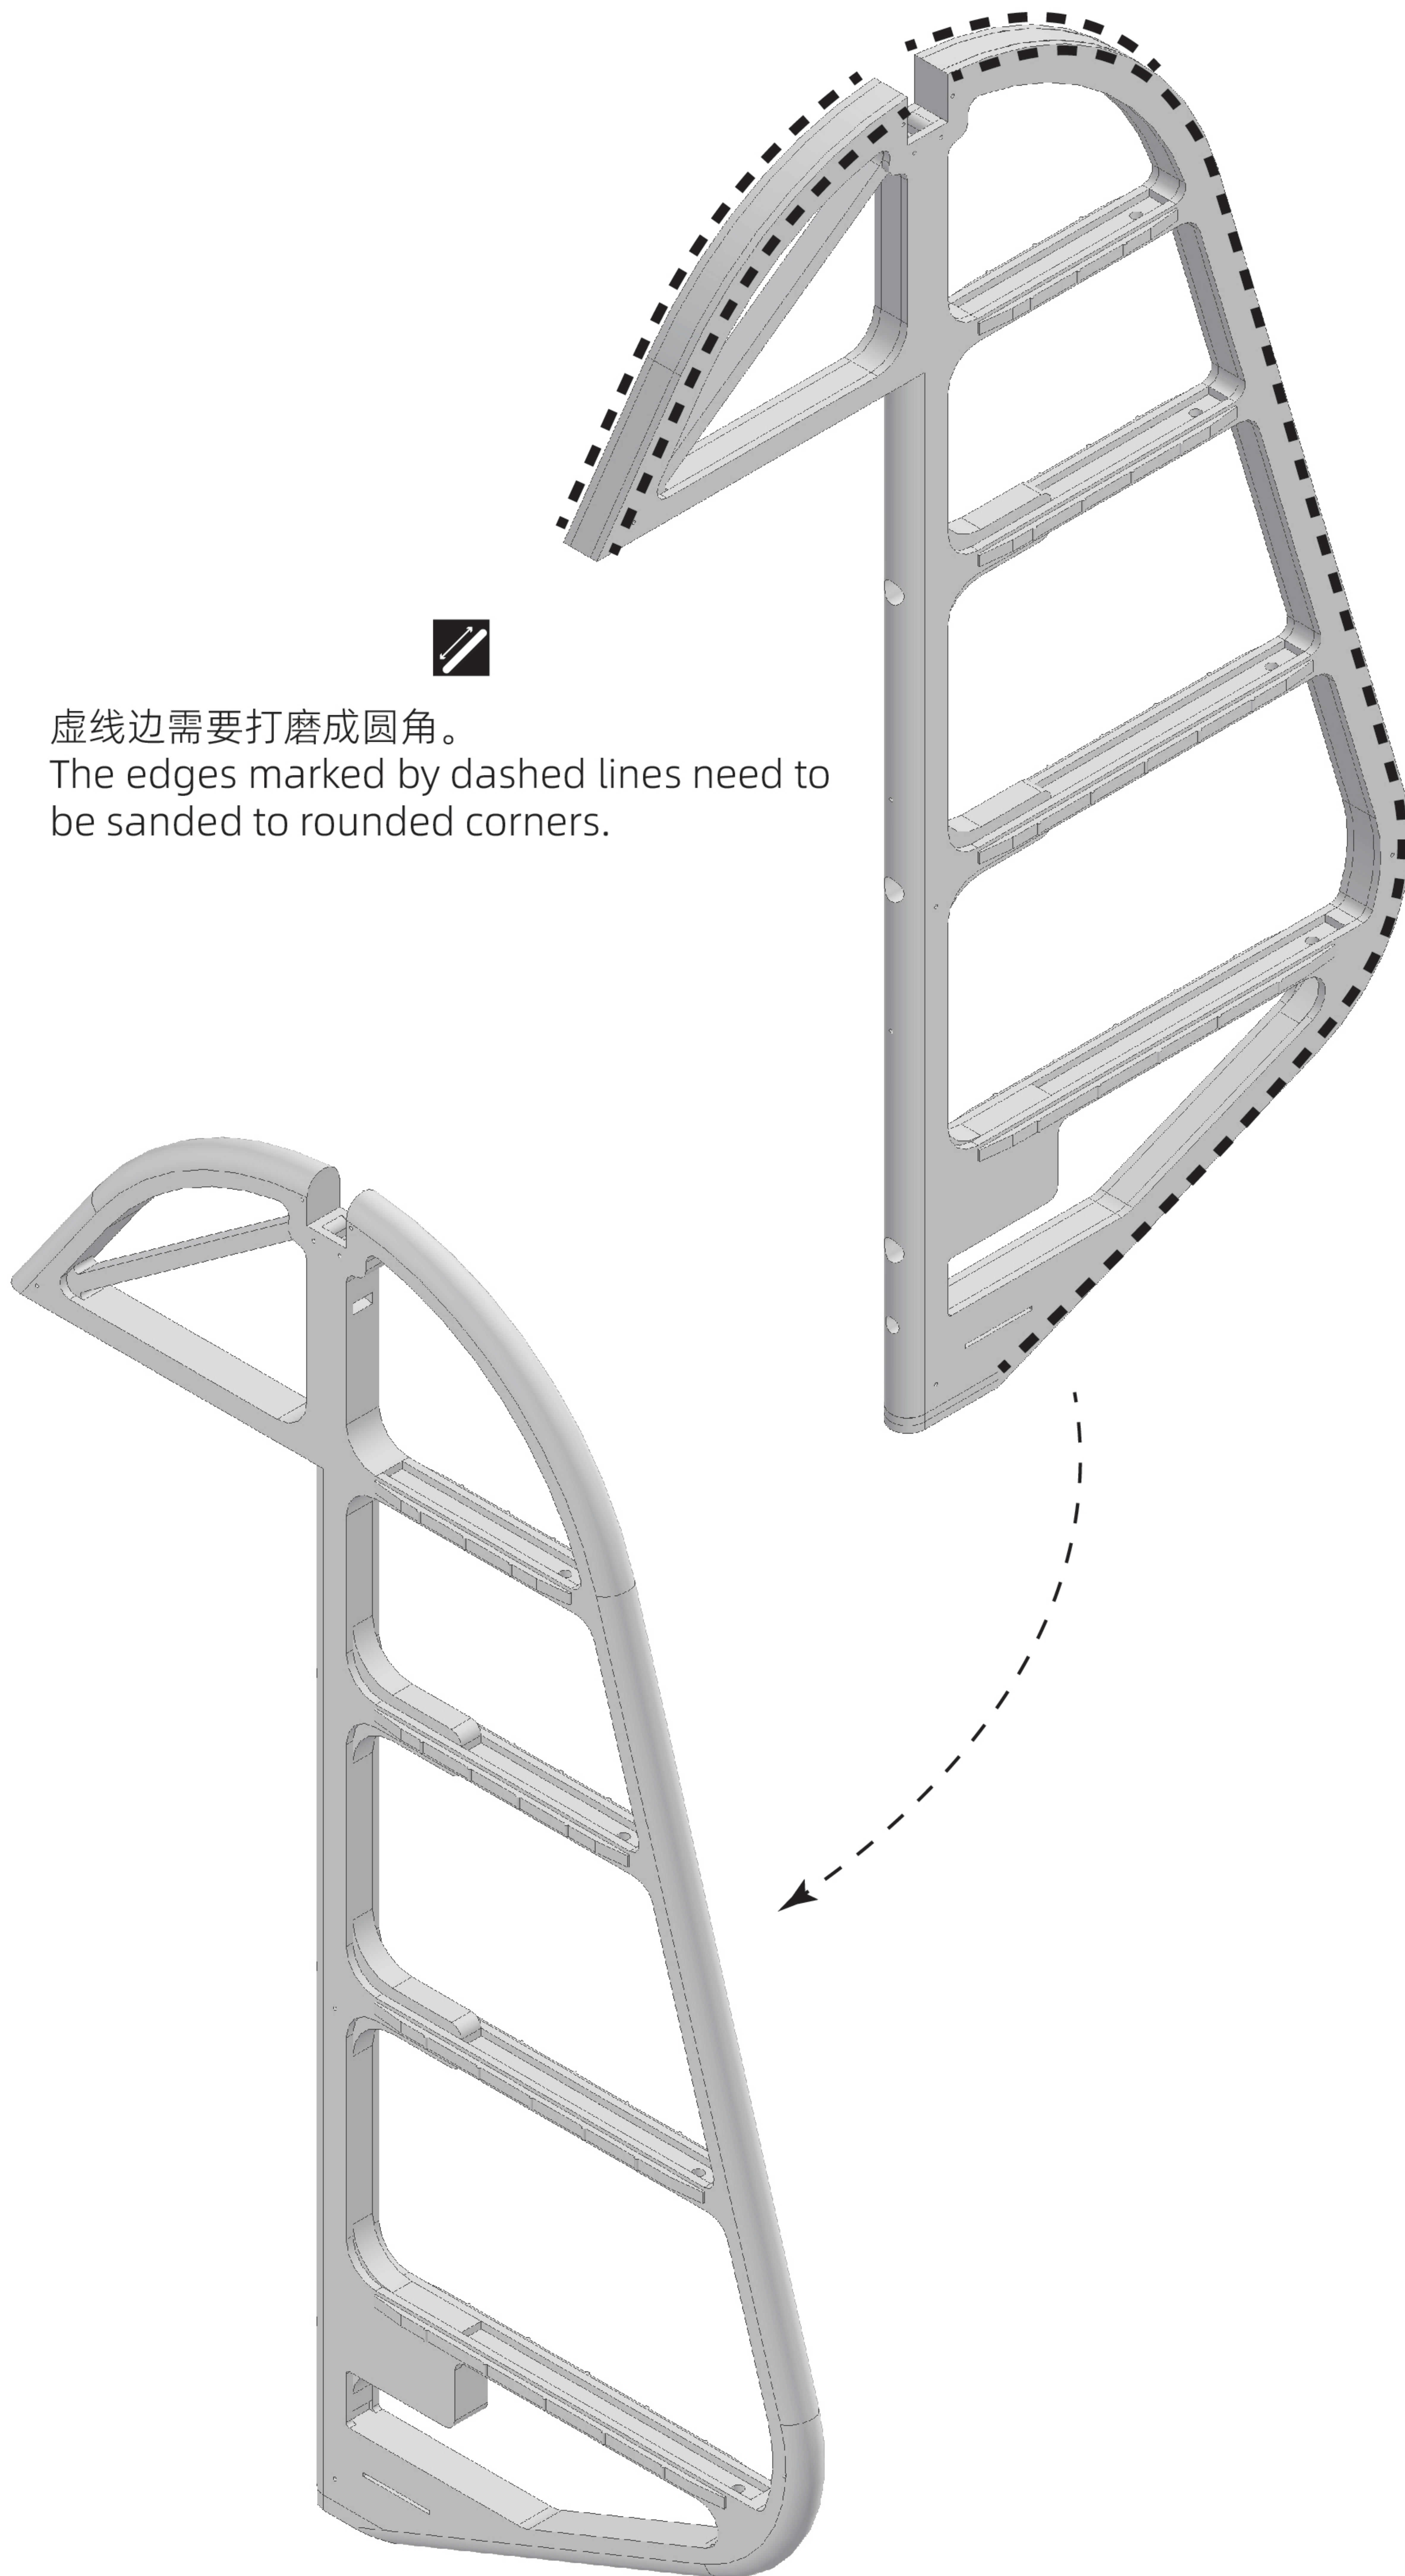


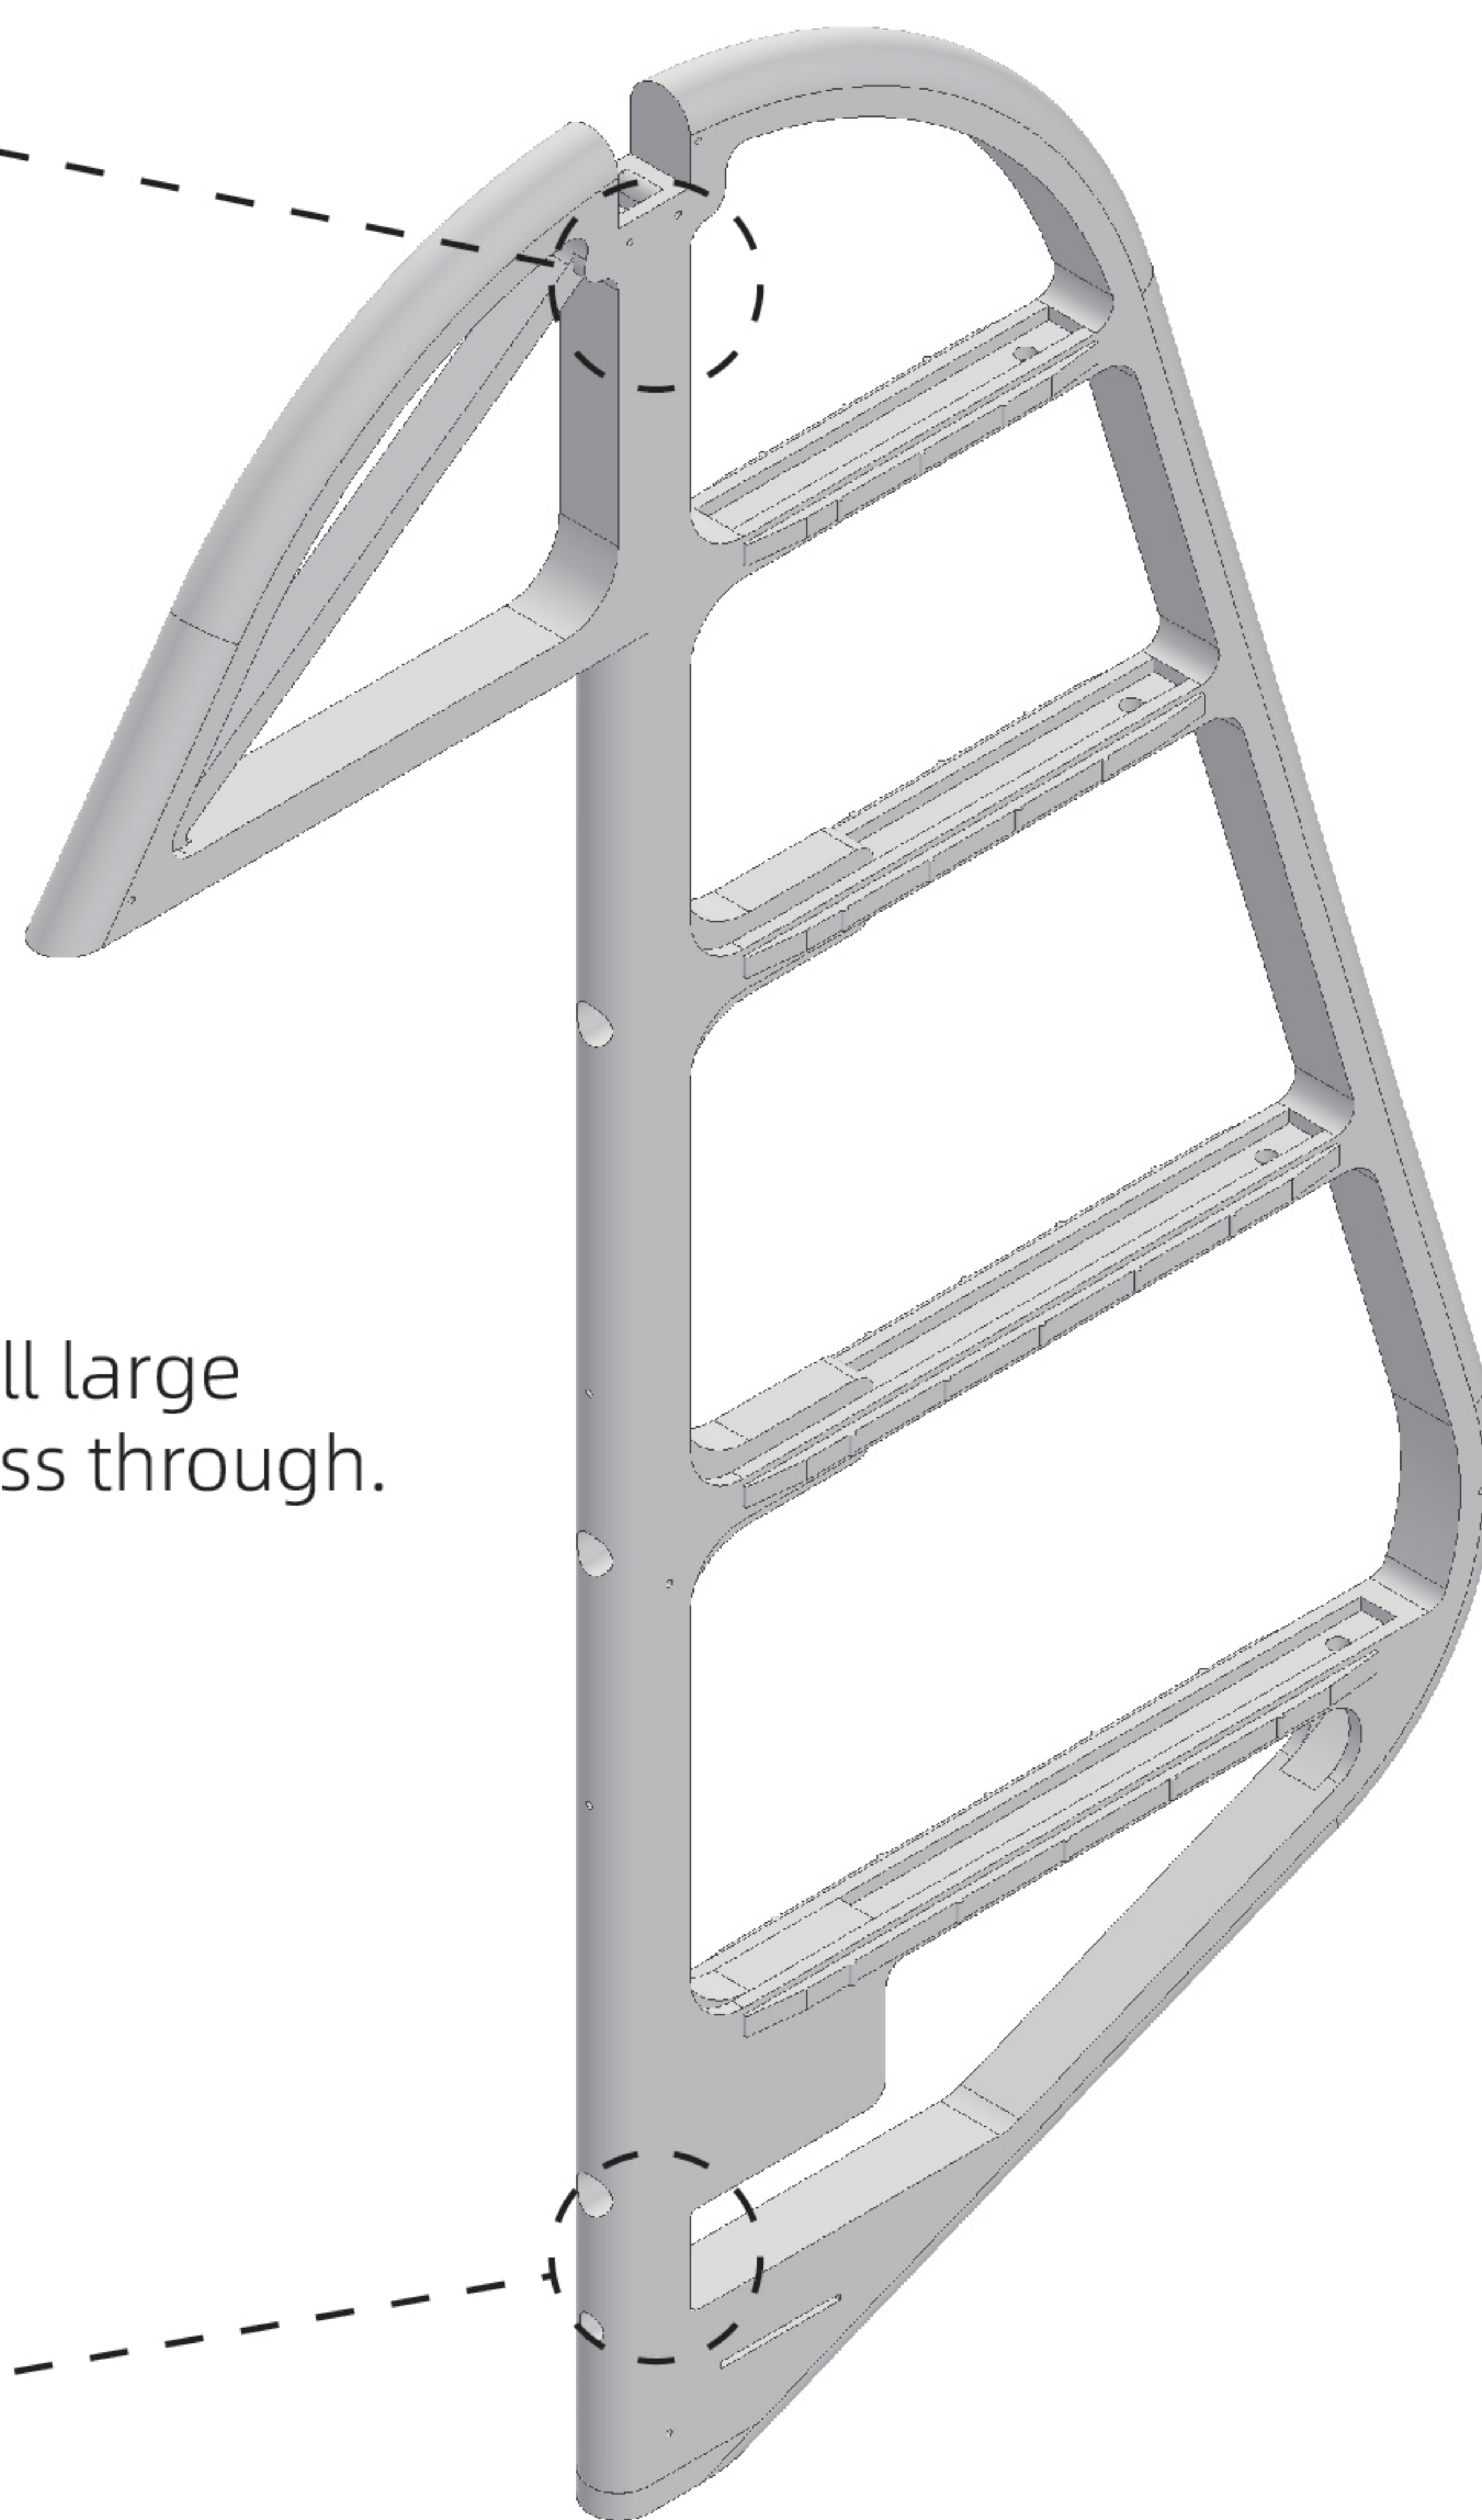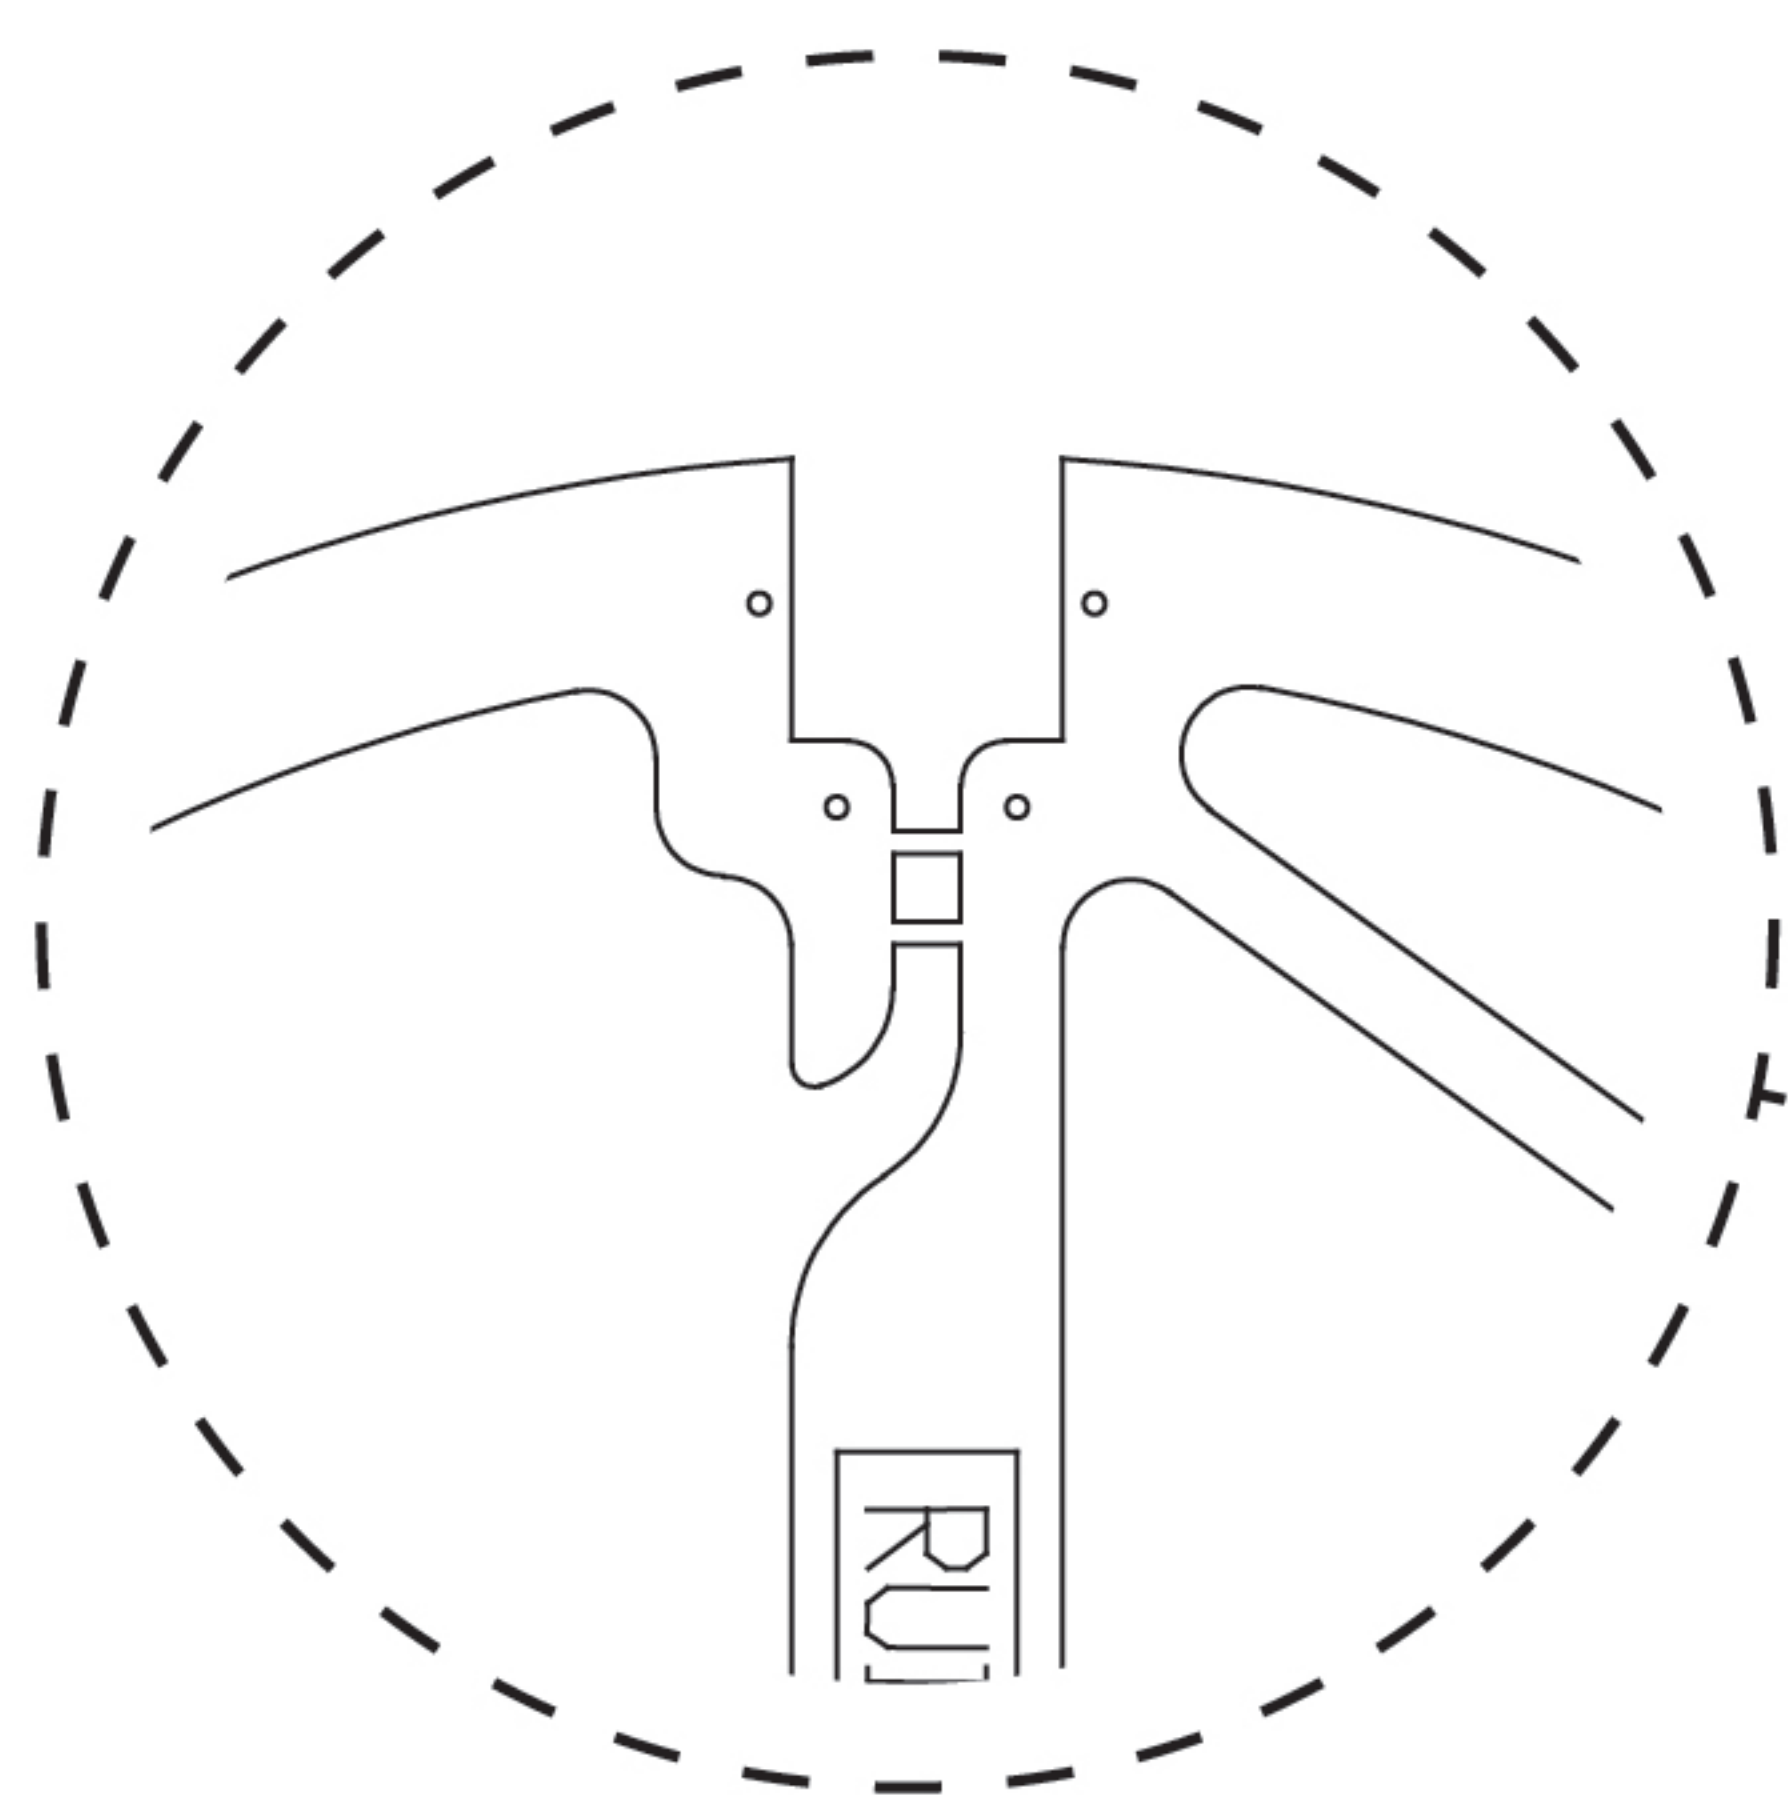

需要使用手钻开孔，
使其足以穿过电线。
Drill a hole with a hand drill large
enough for the wires to pass through.

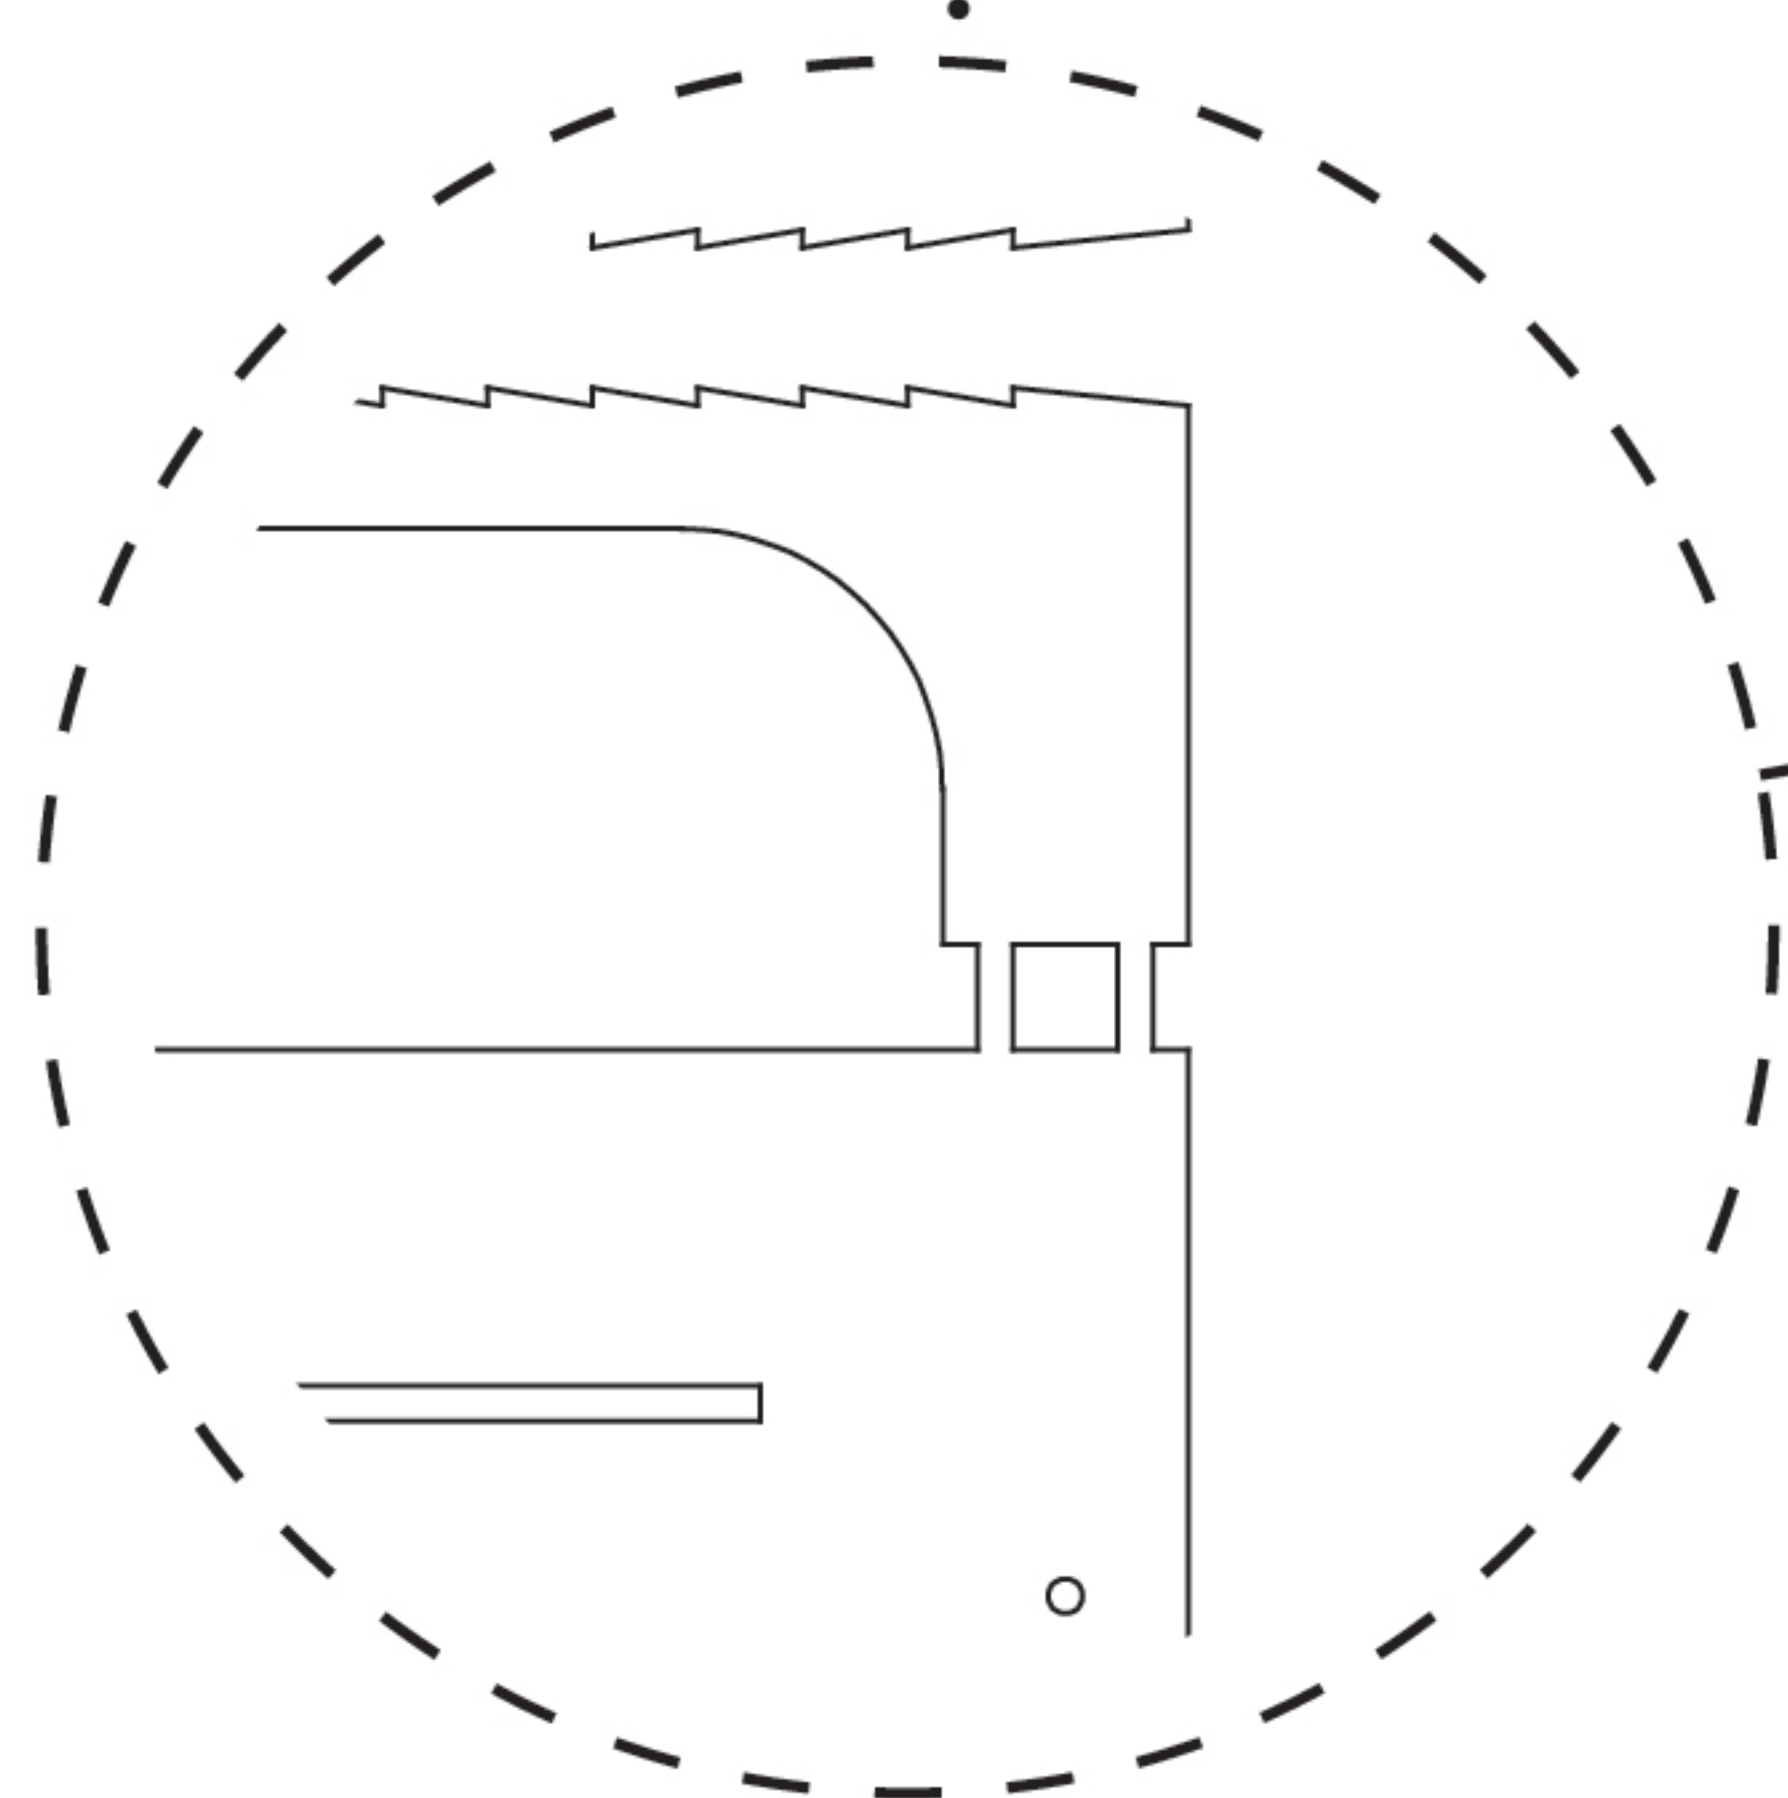



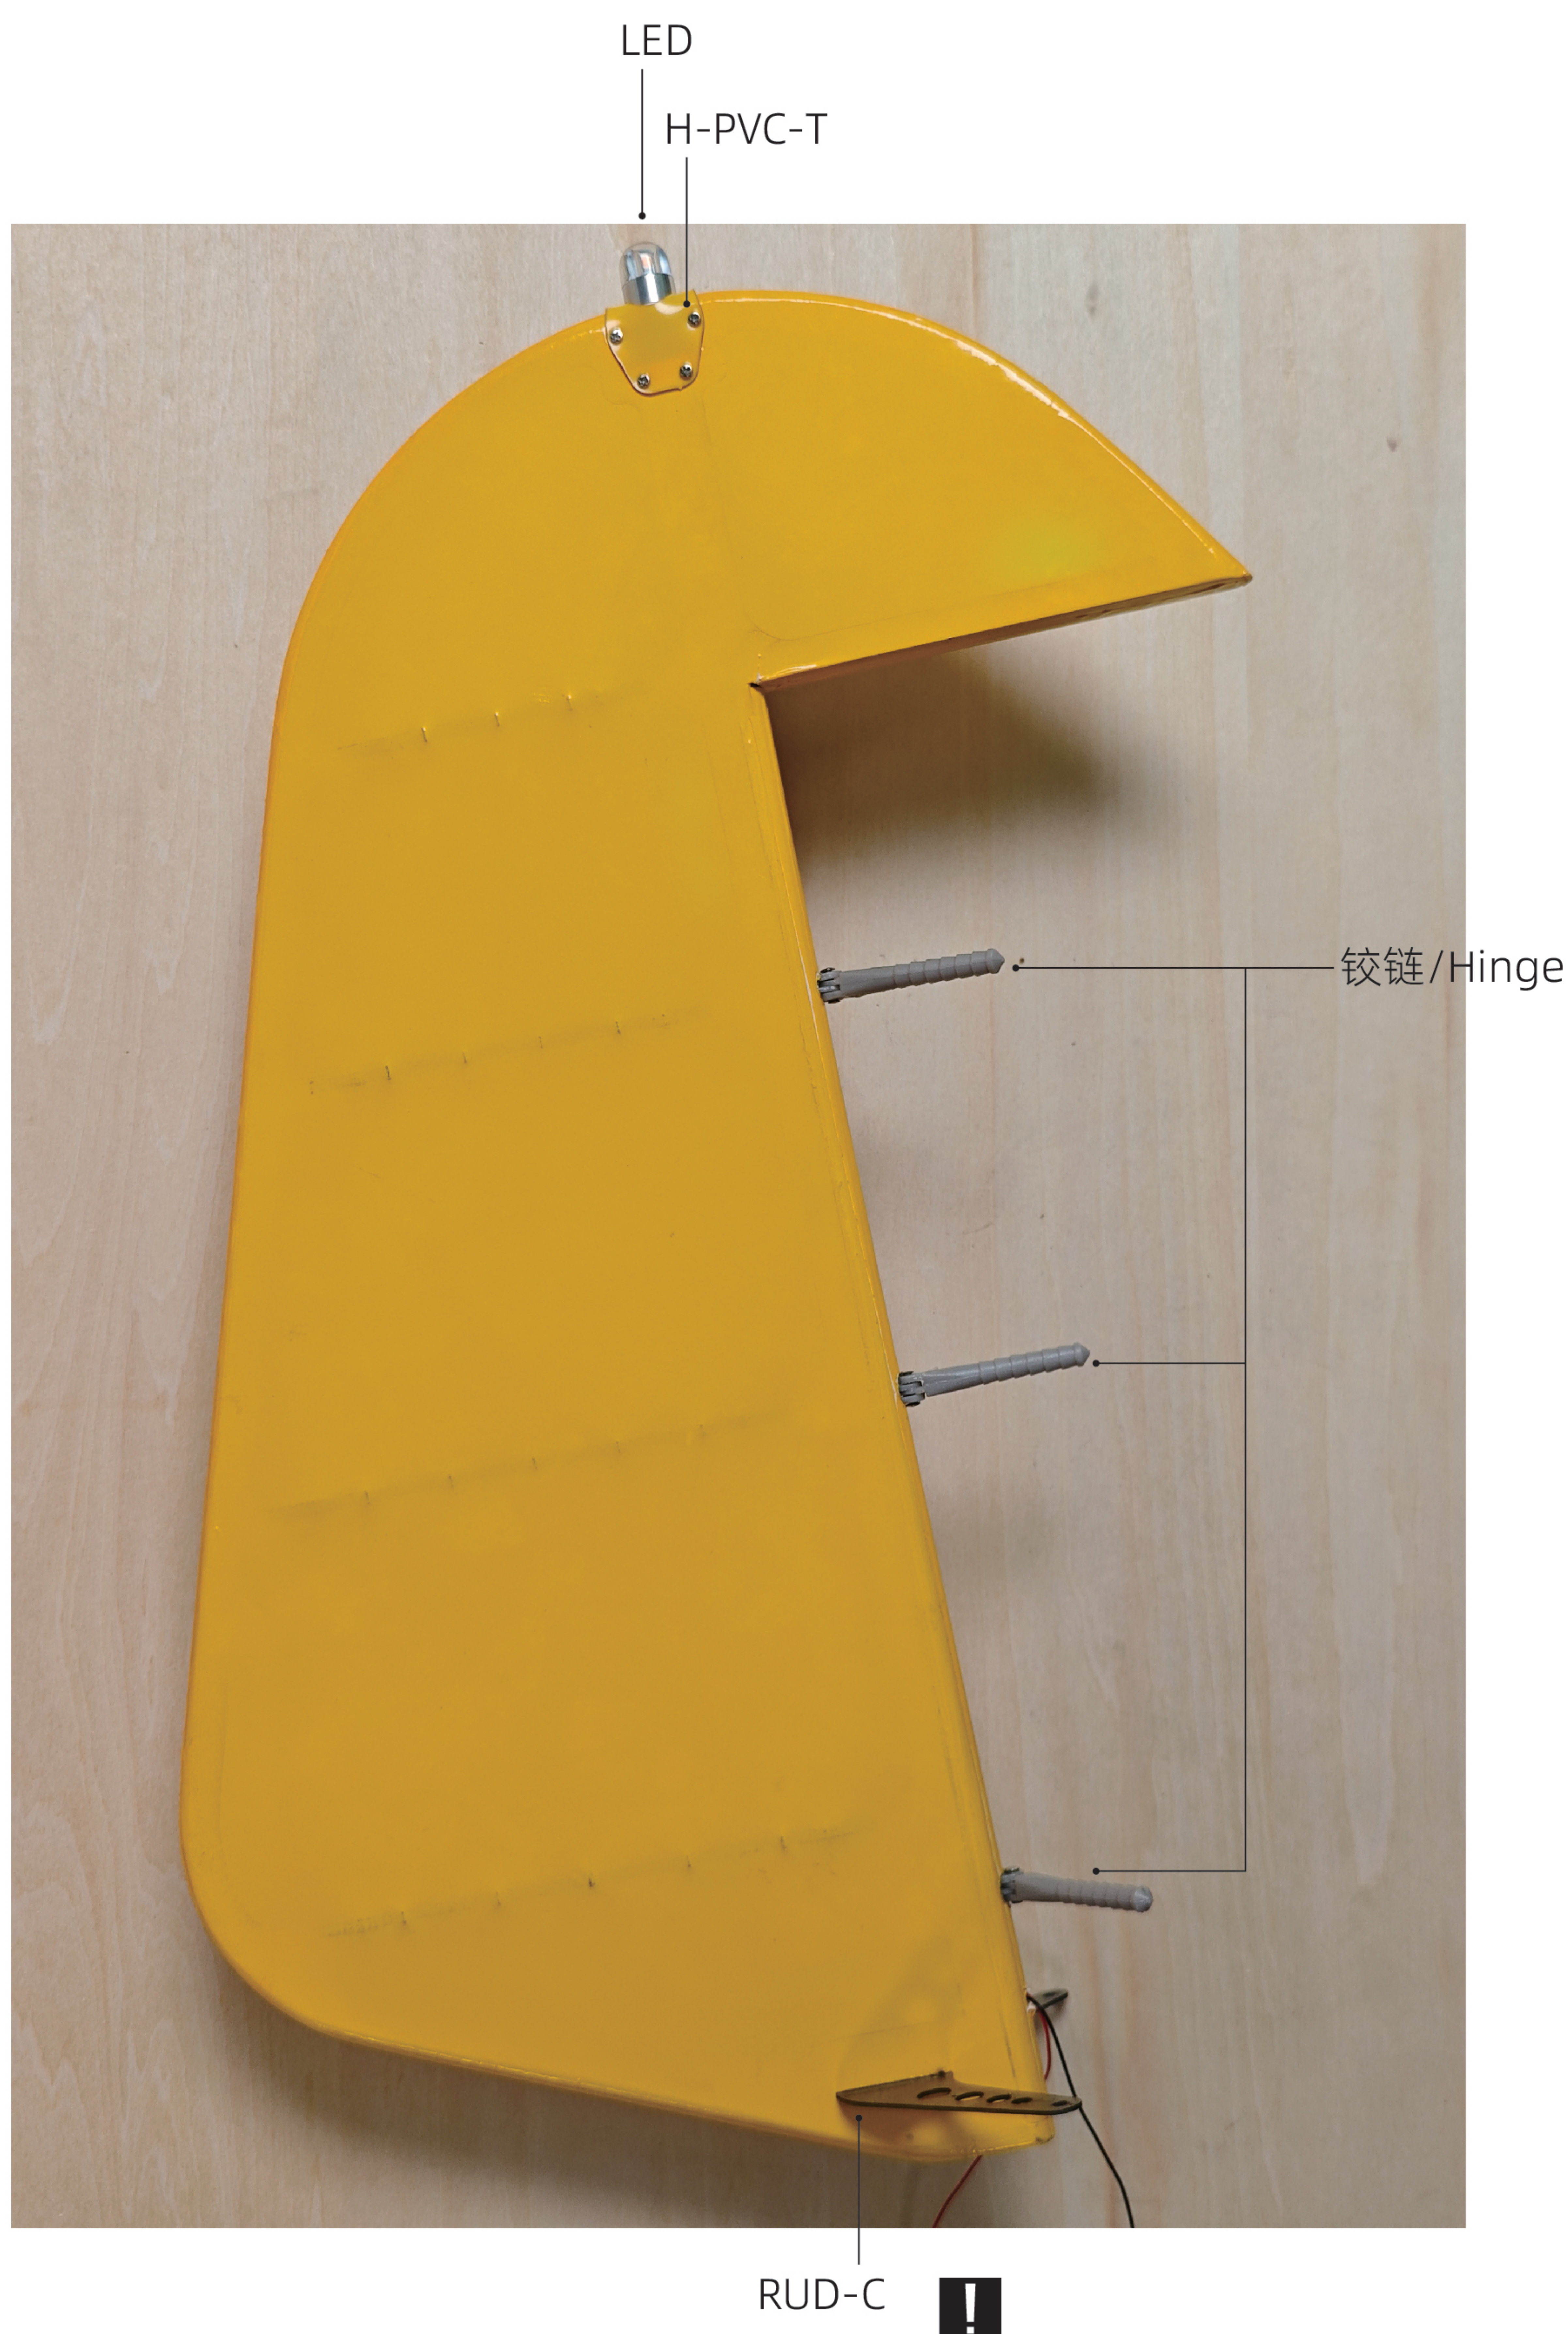

注意!

1、铰链请先与机身垂尾配合校准后固定。

2、“RUD-C”与铰链使用环氧固定。

Caution!

1.Align the hinges with the fuselage vertical stabilizer first, then secure them in place.

2.Secure the 'RUD-C' to the hinges with epoxy glue.