



水平尾翼


Horizontal Stabilizer



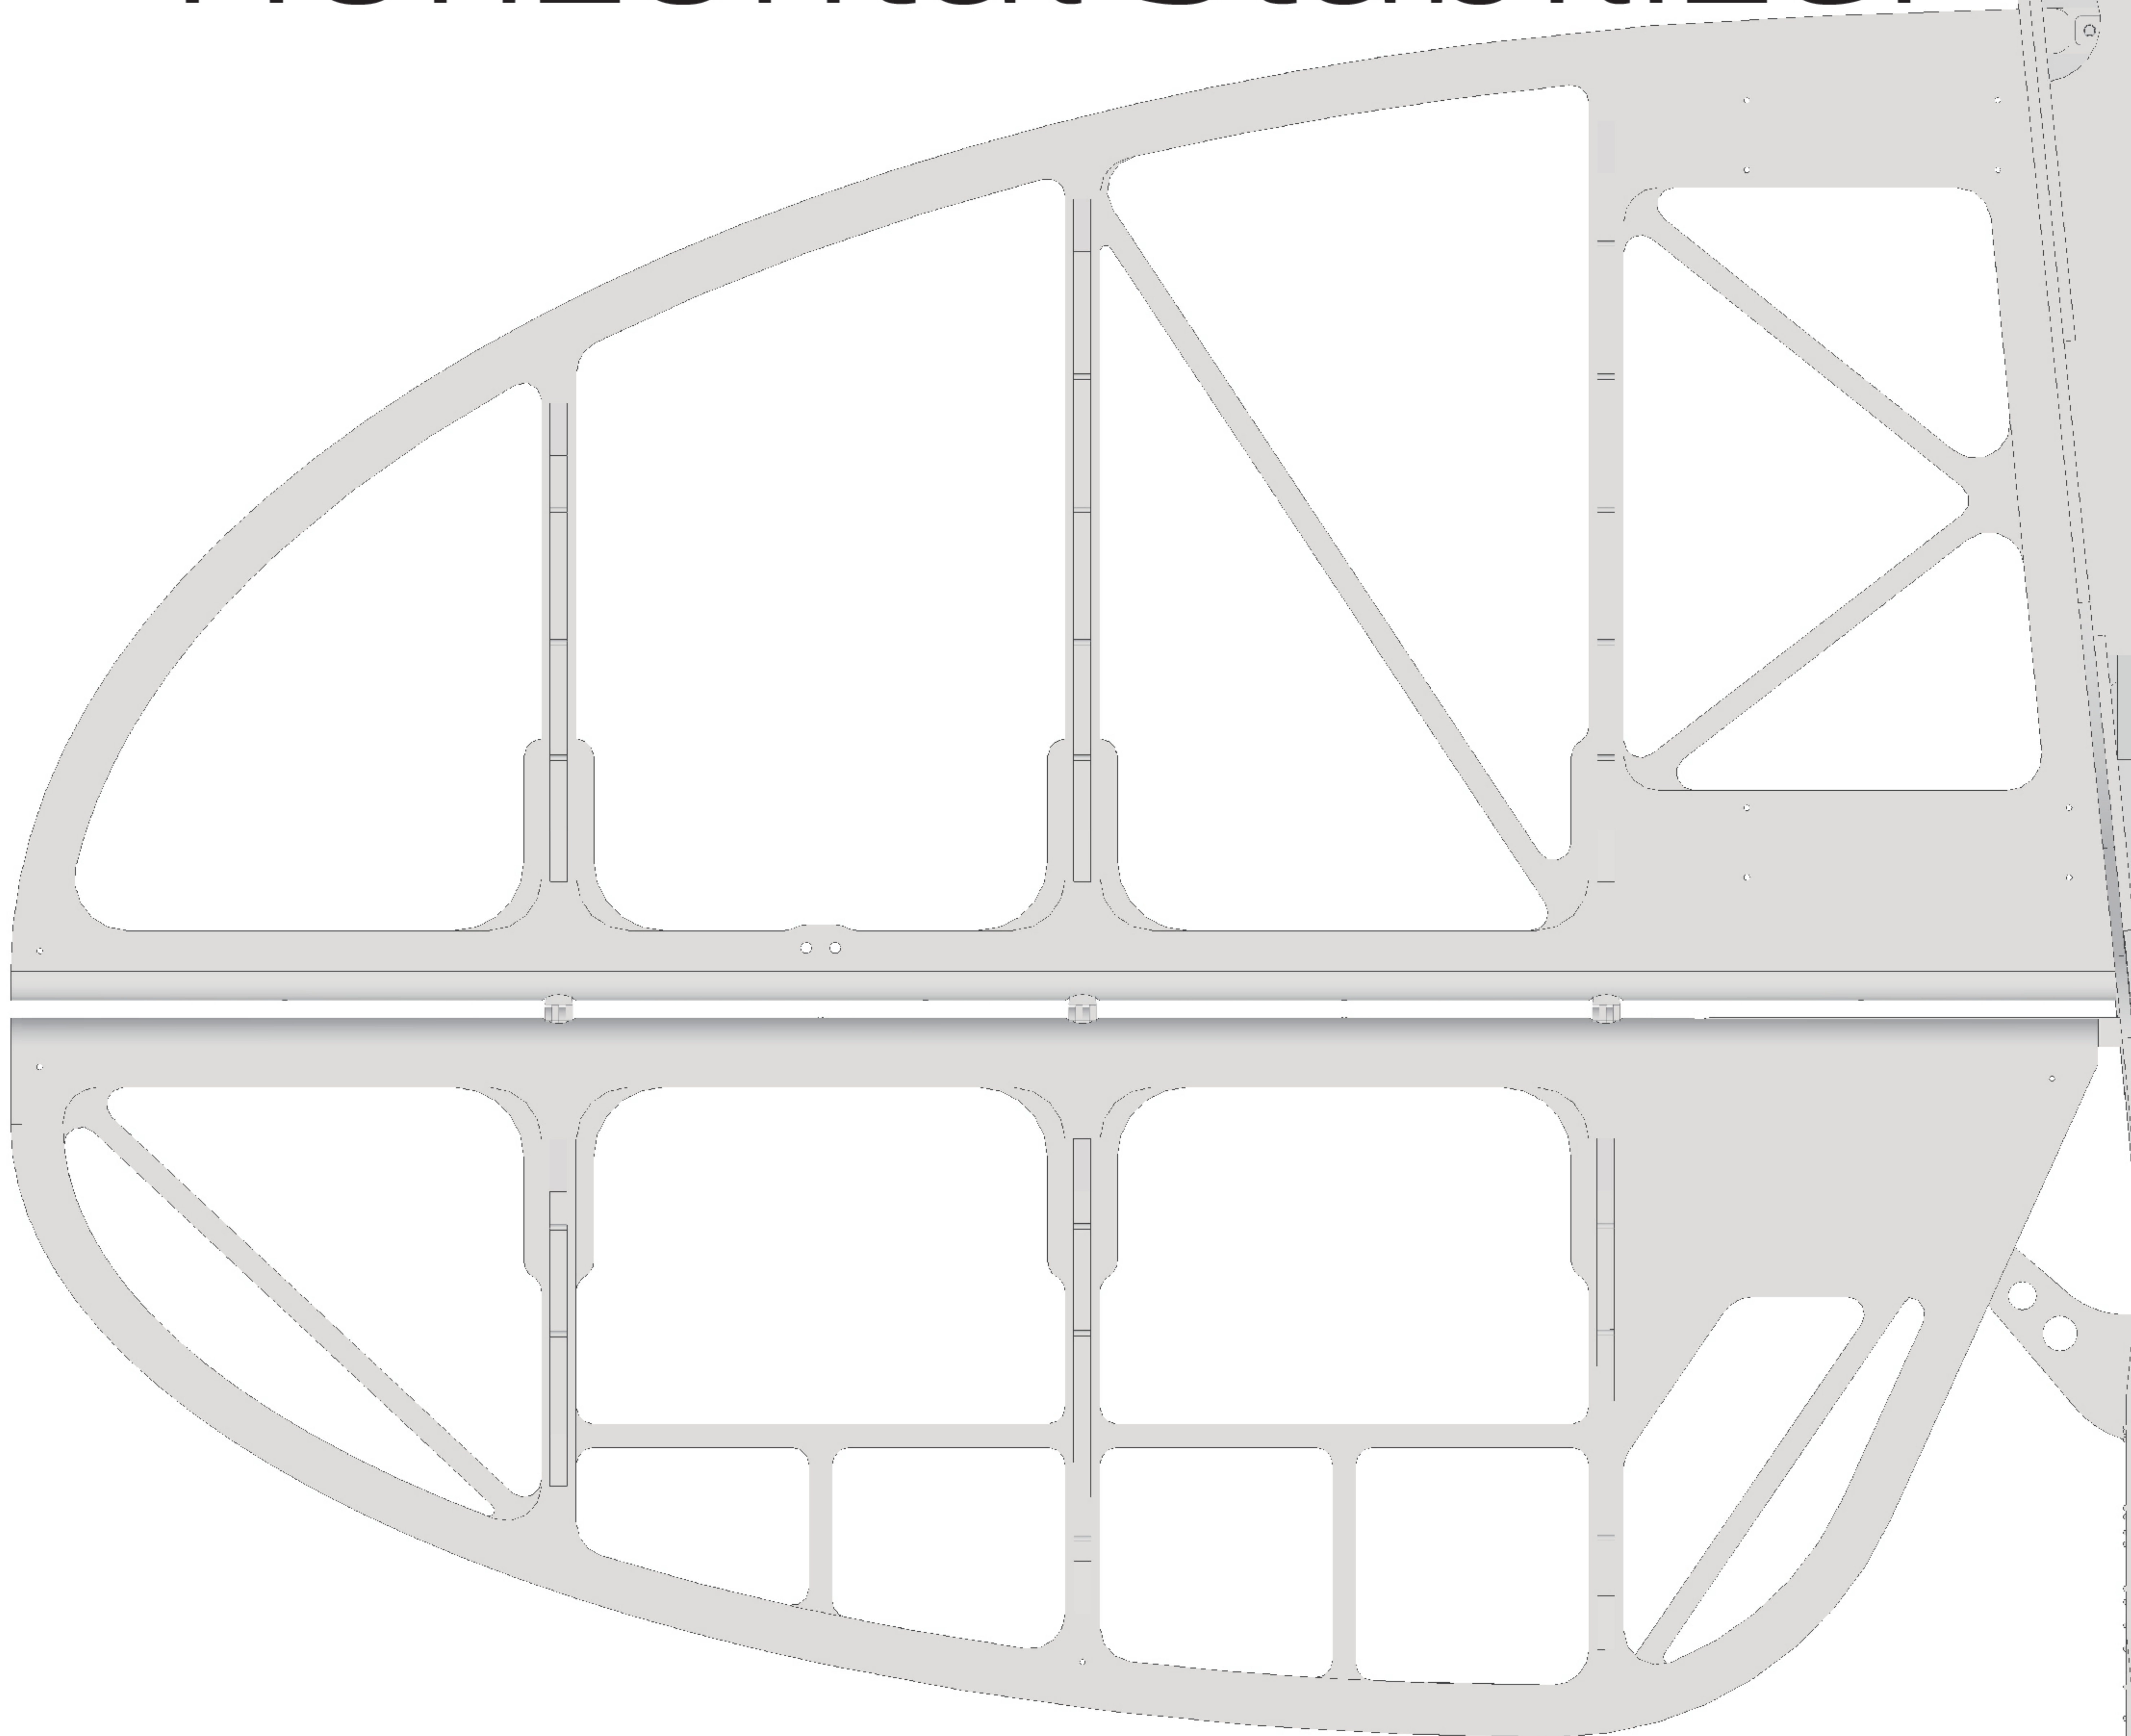



水平尾翼 Horizontal Stabilizer

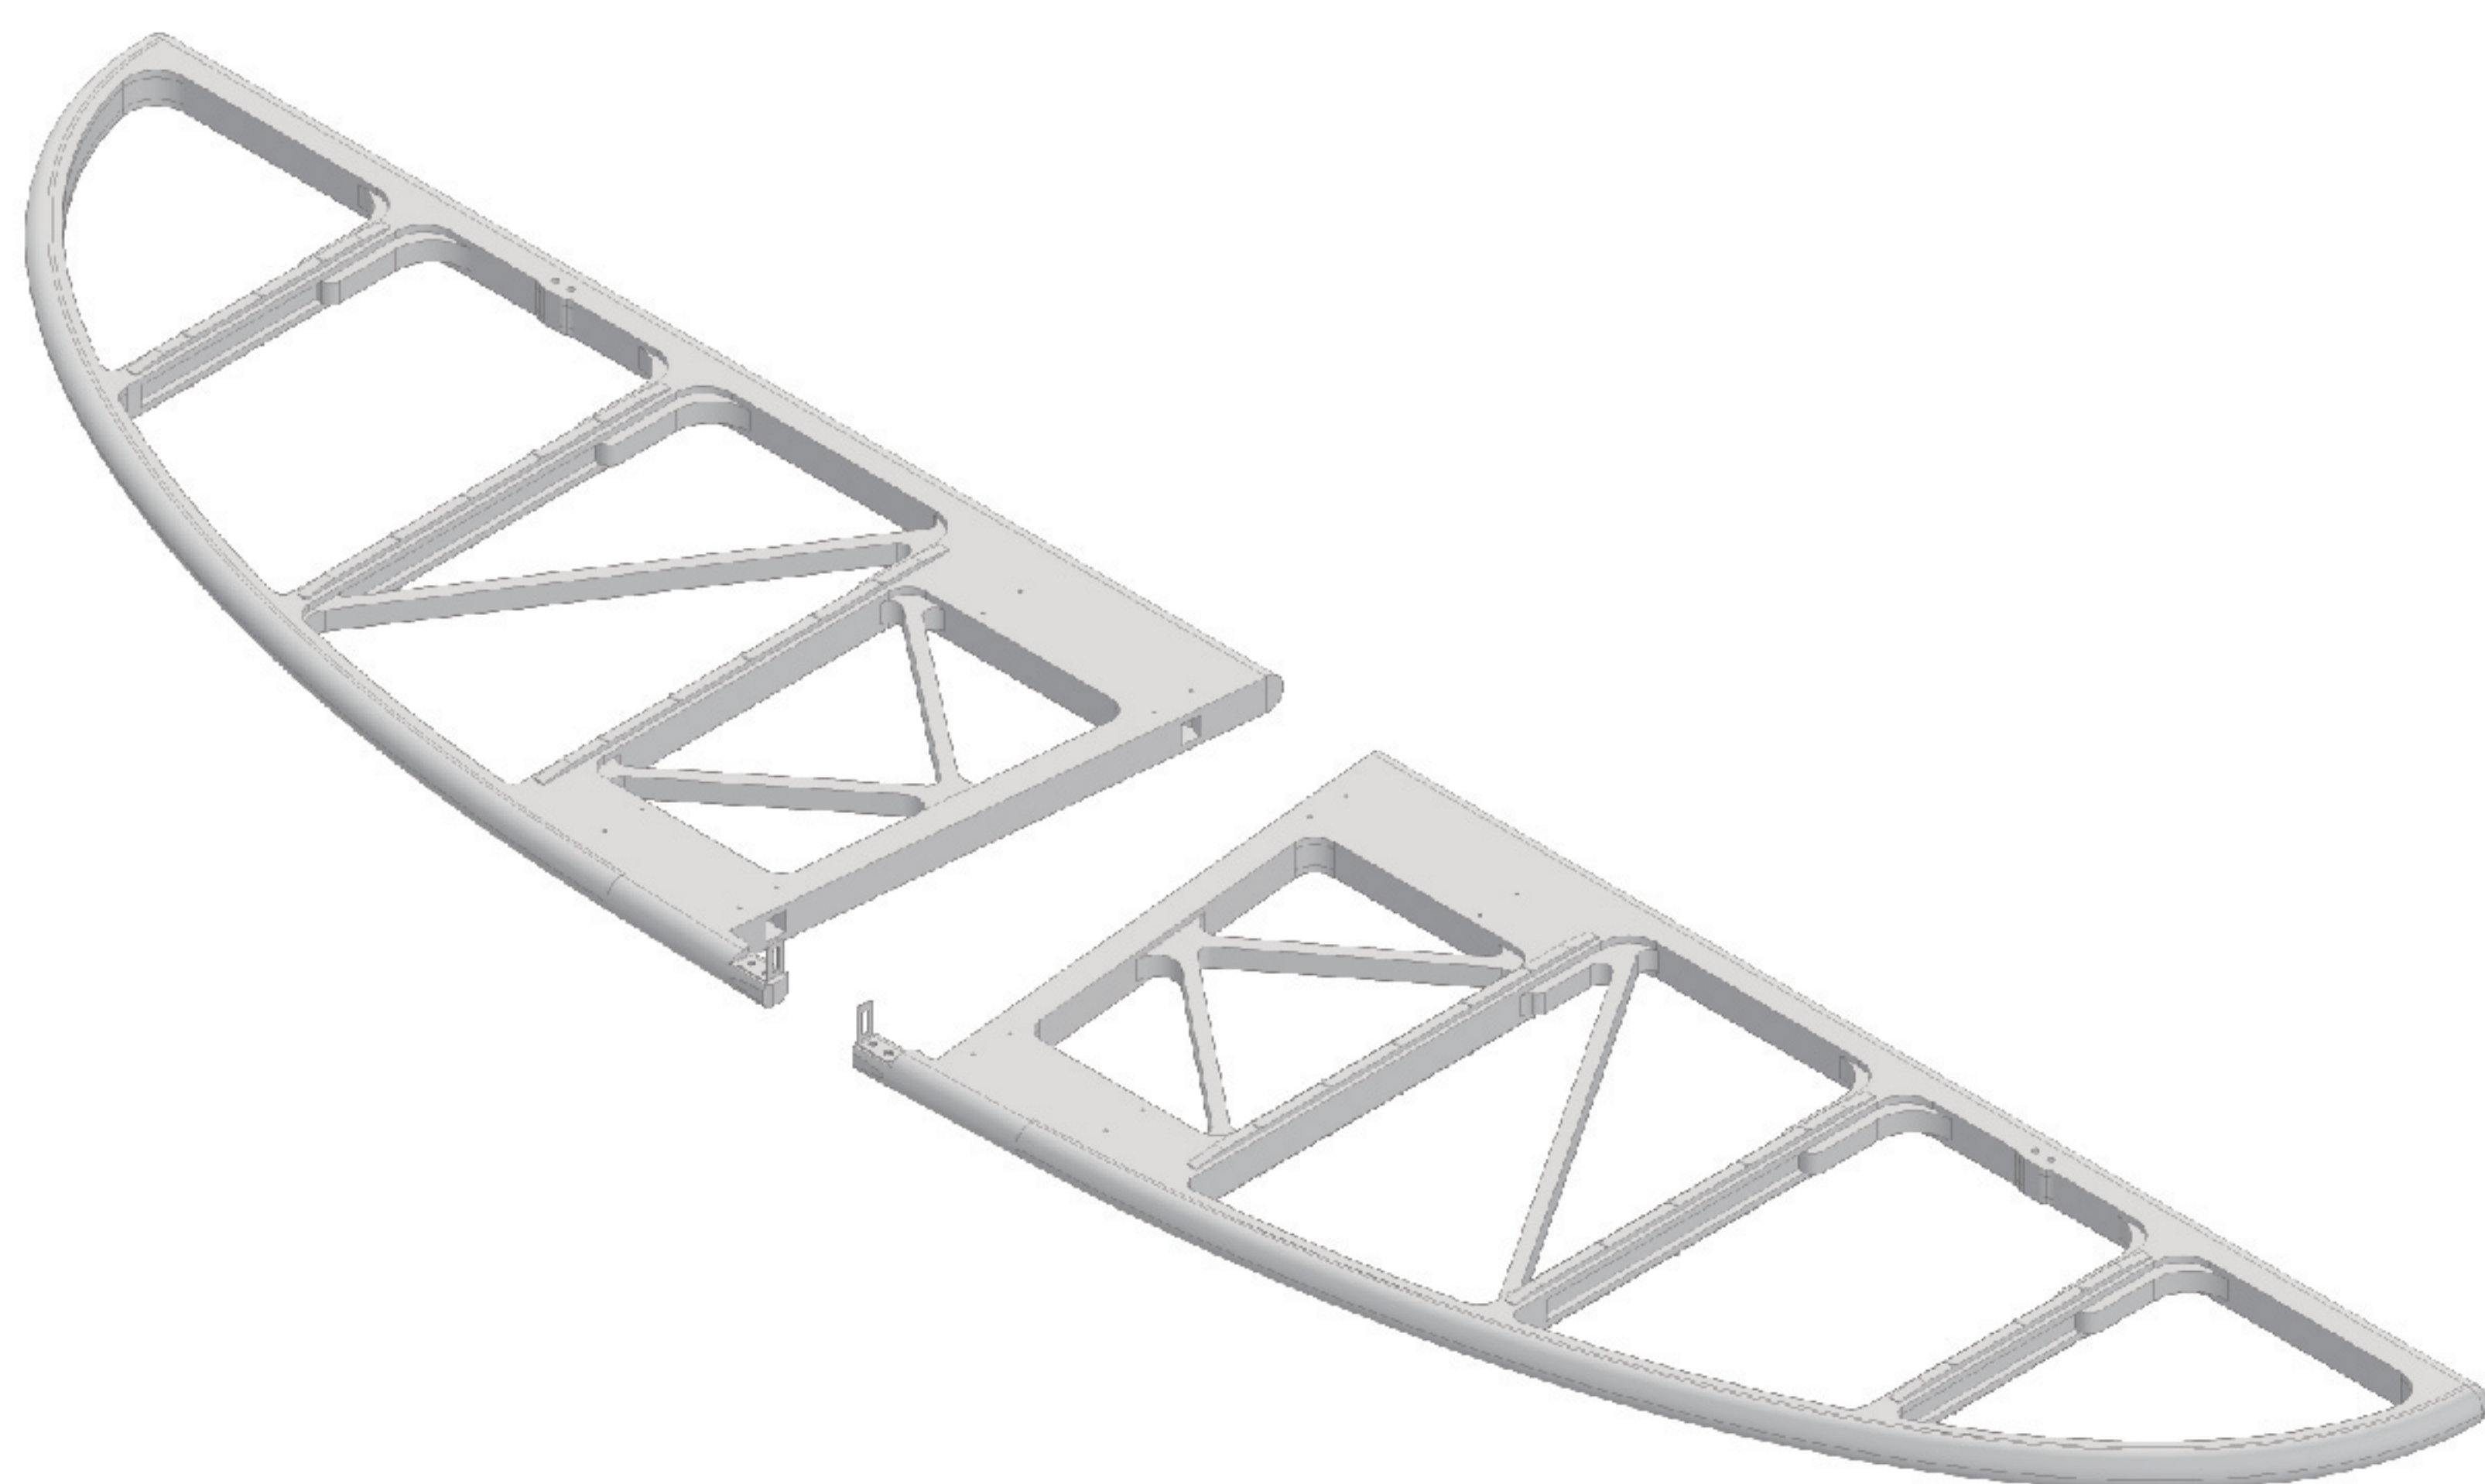

FSL-2-04
WG&FSL-6-03

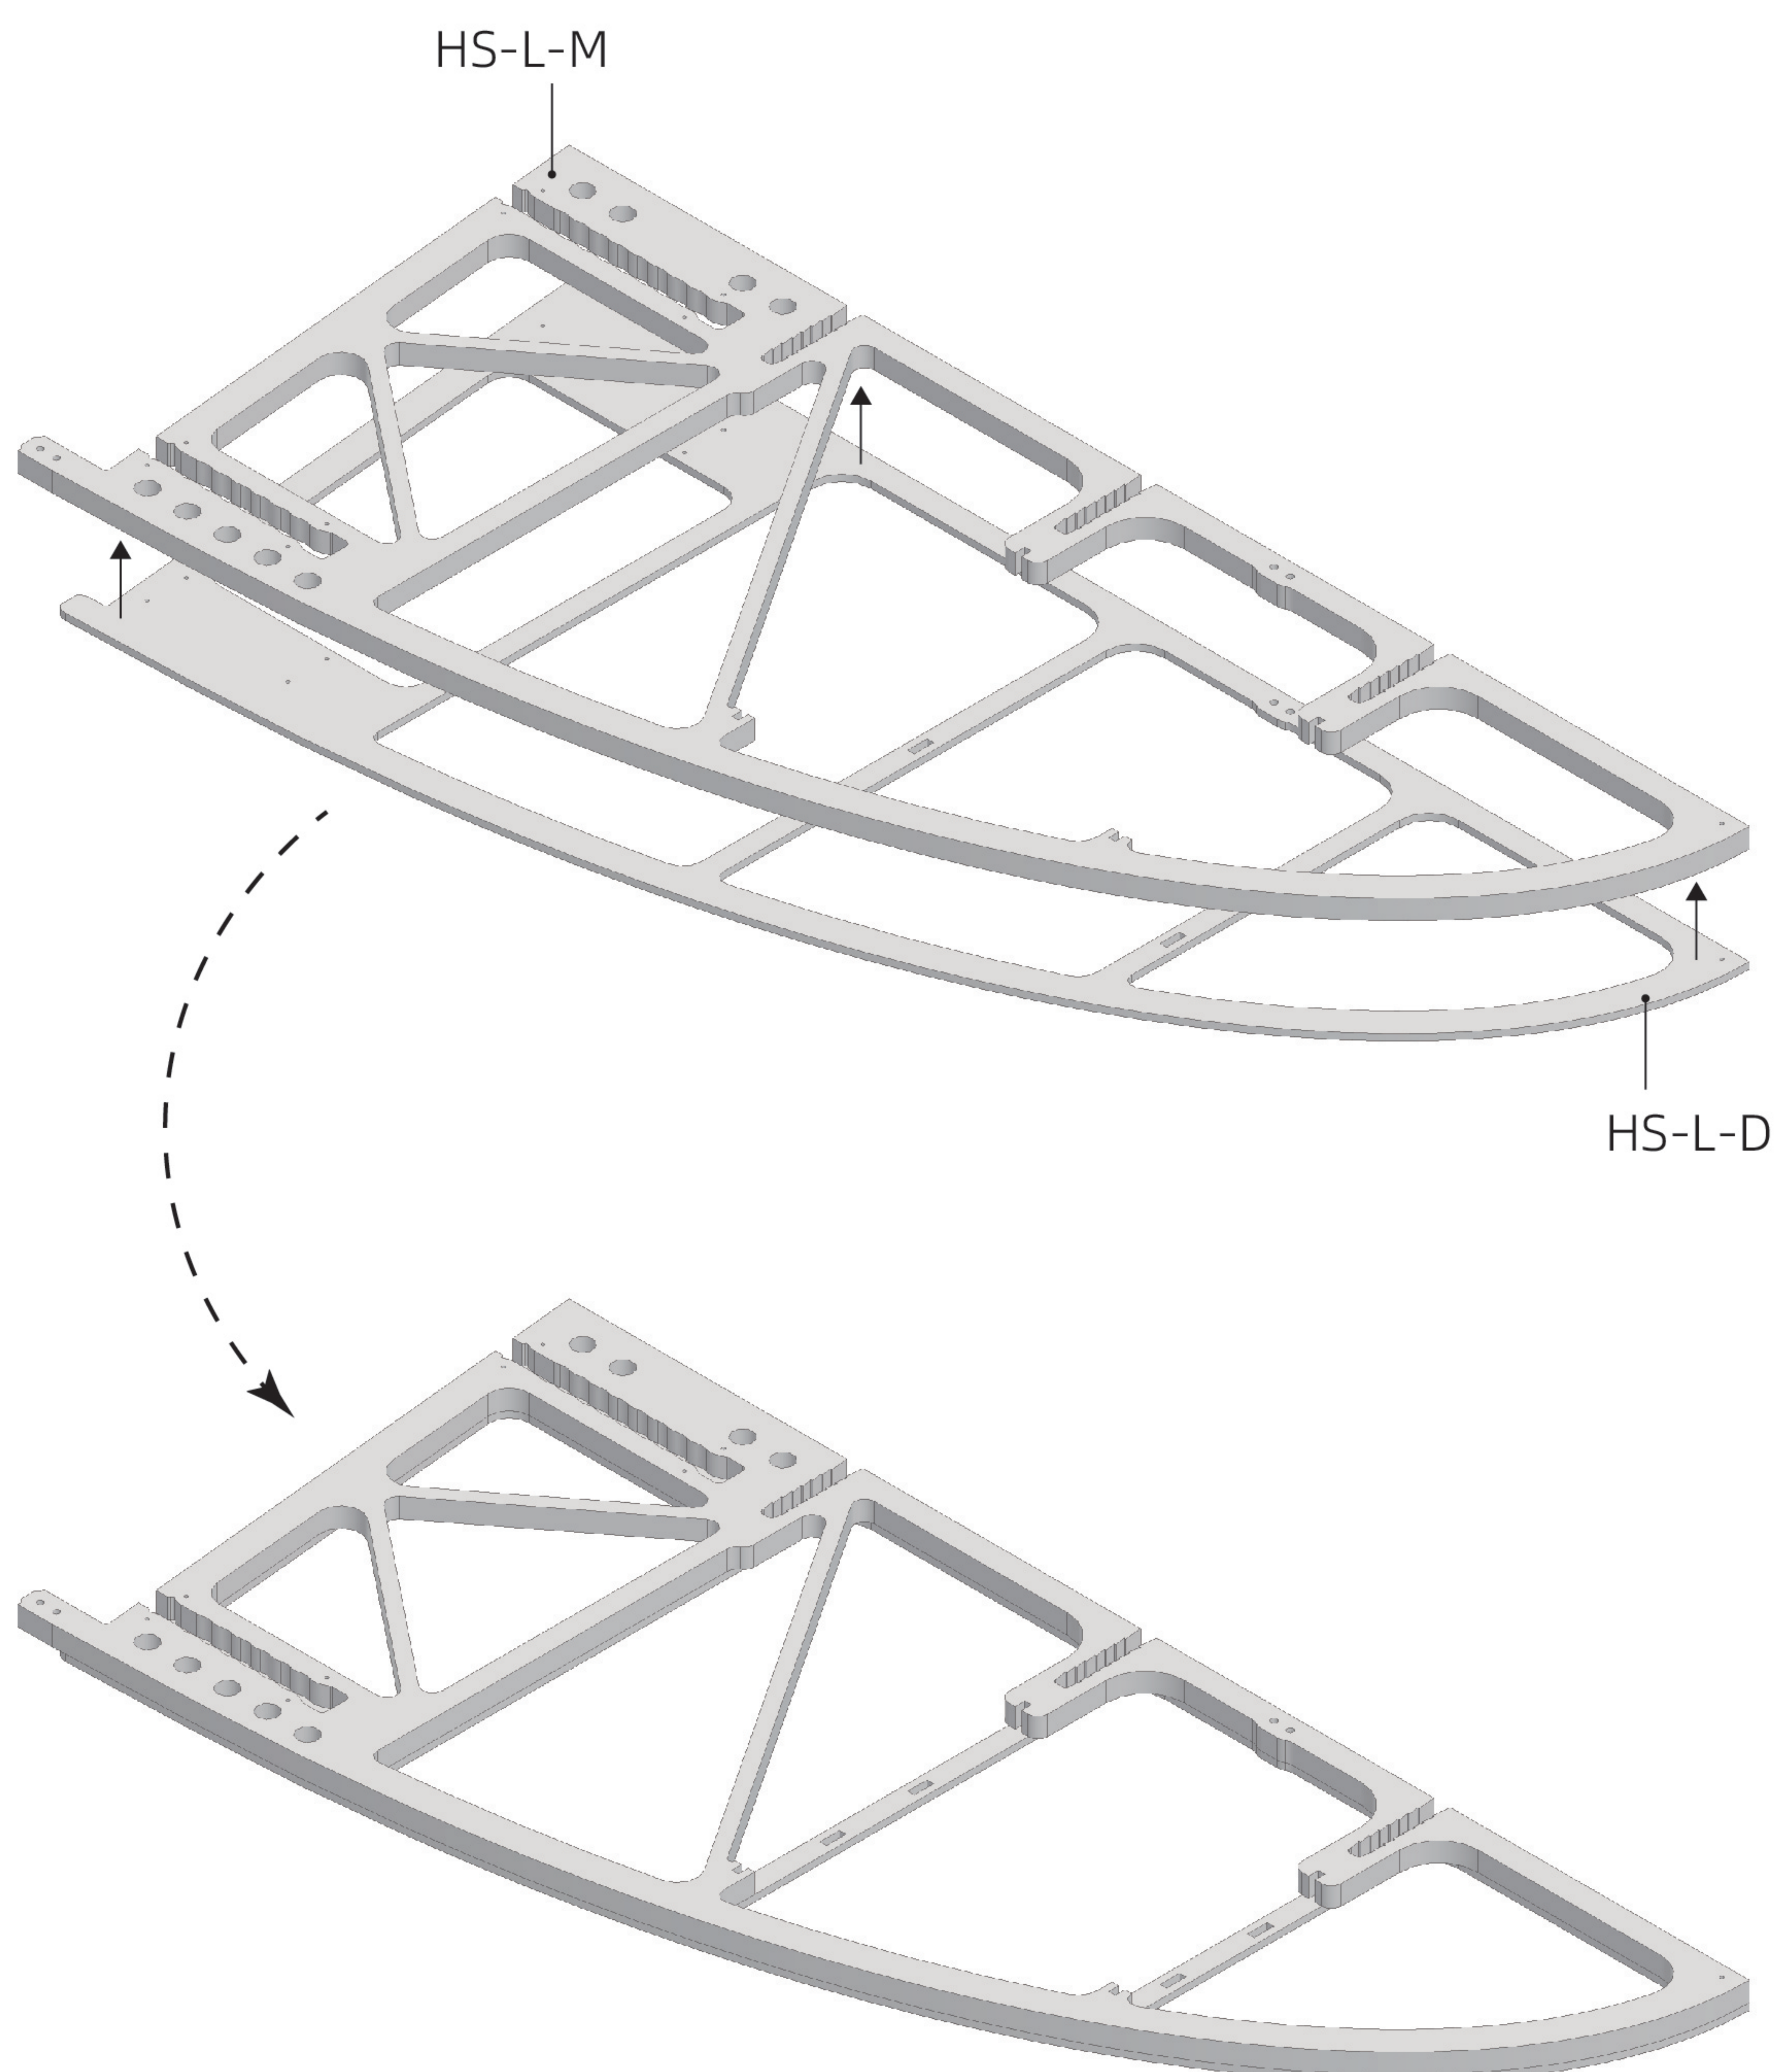


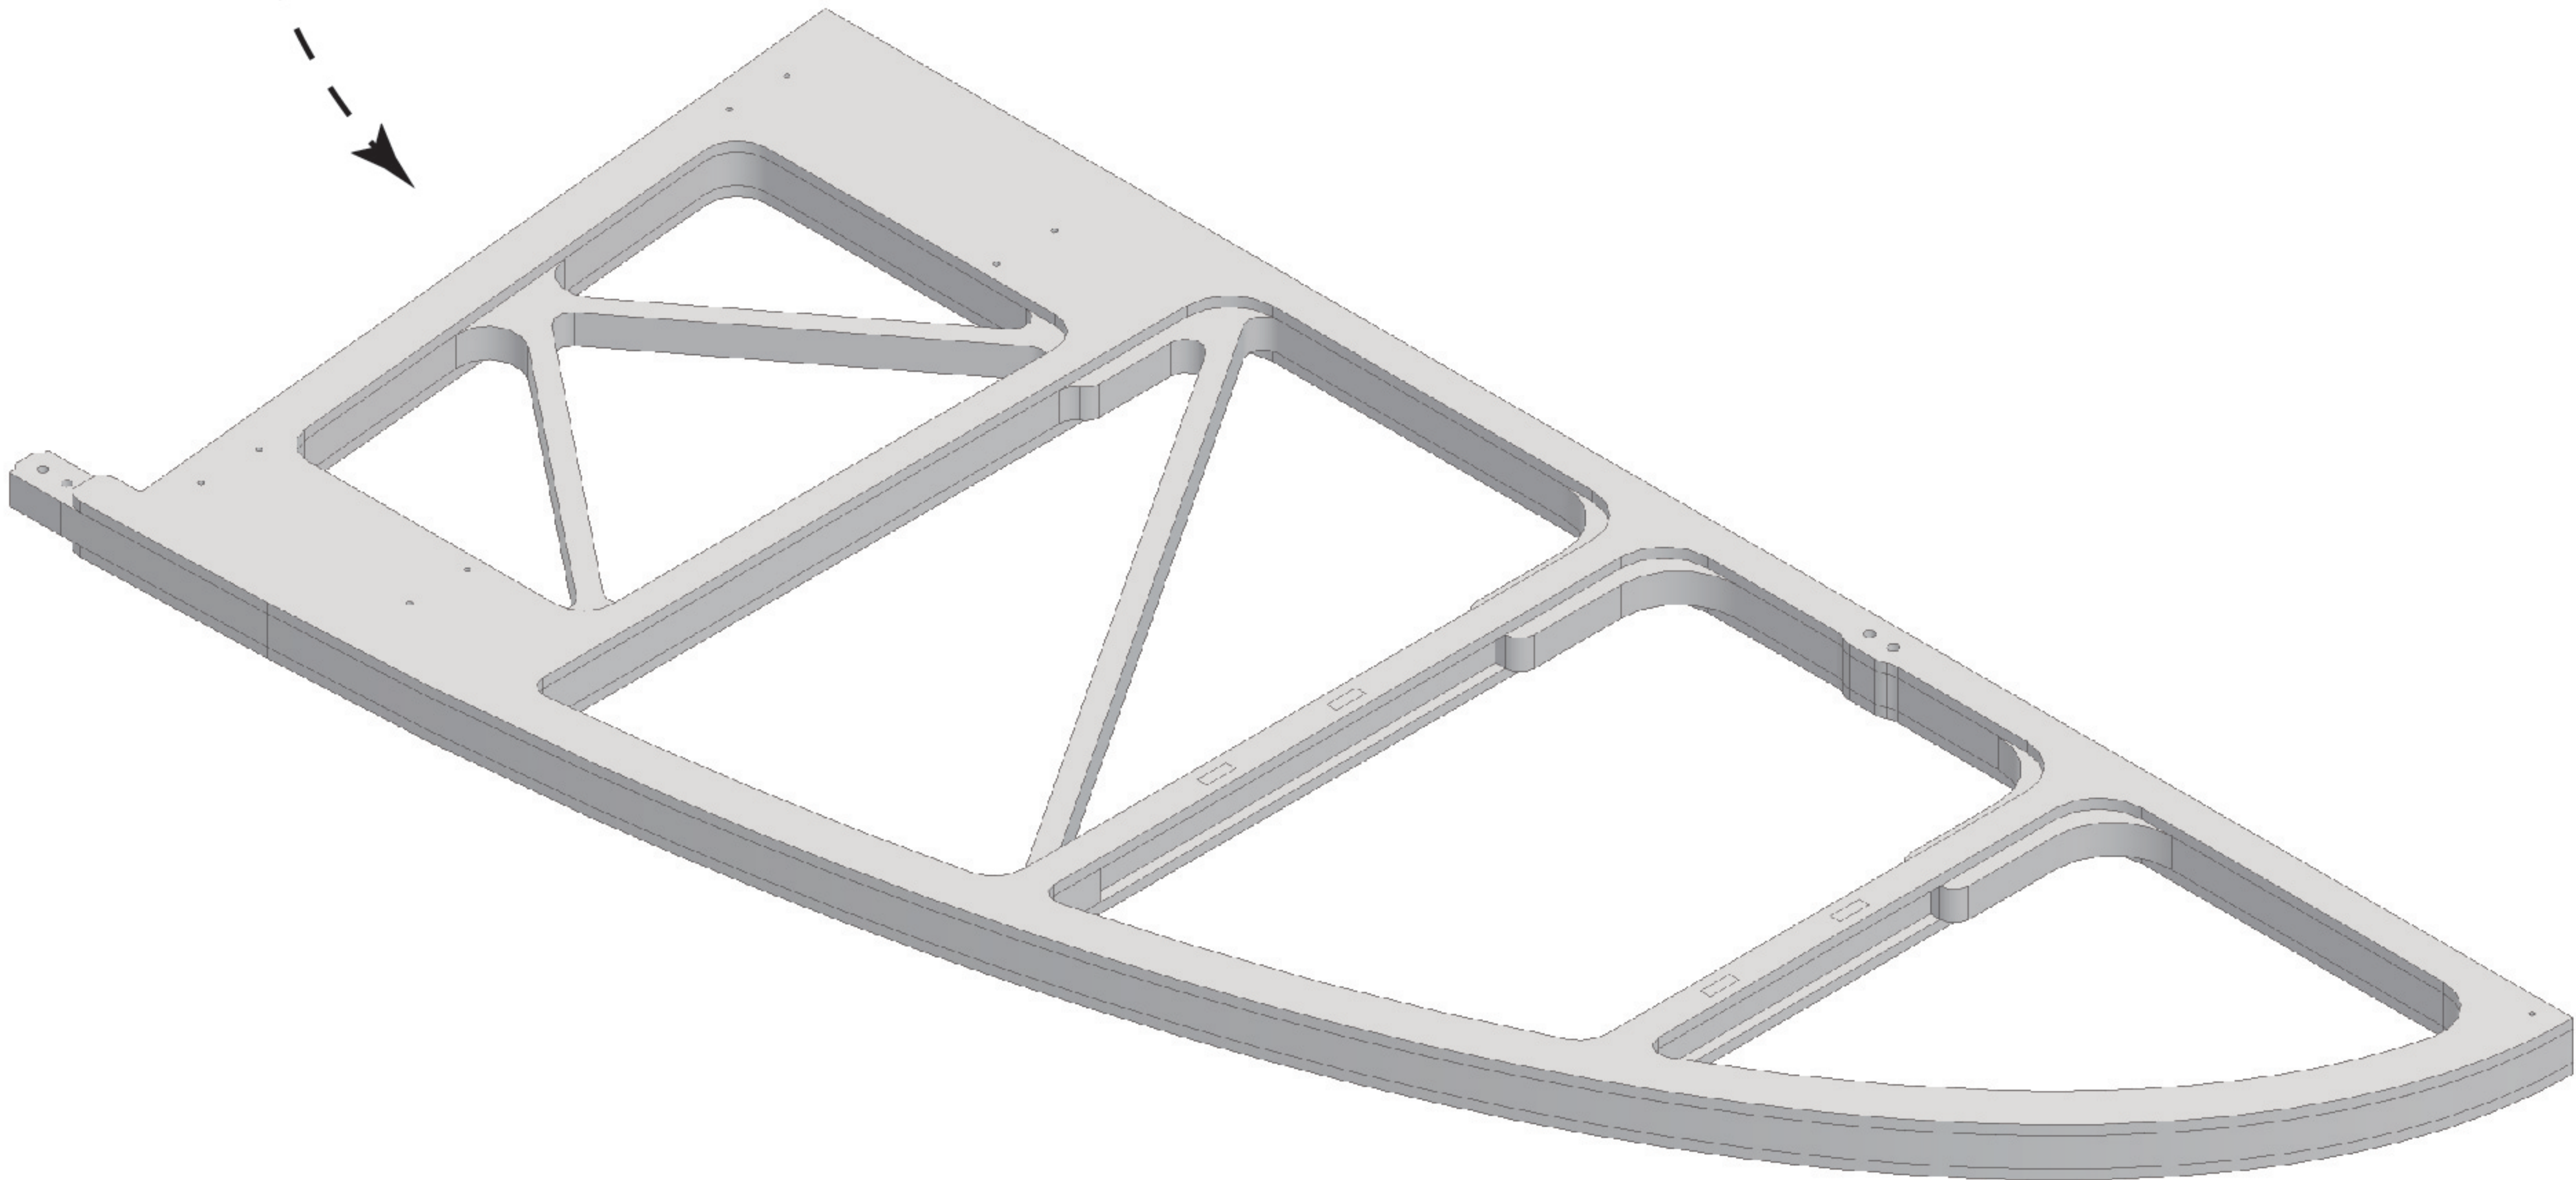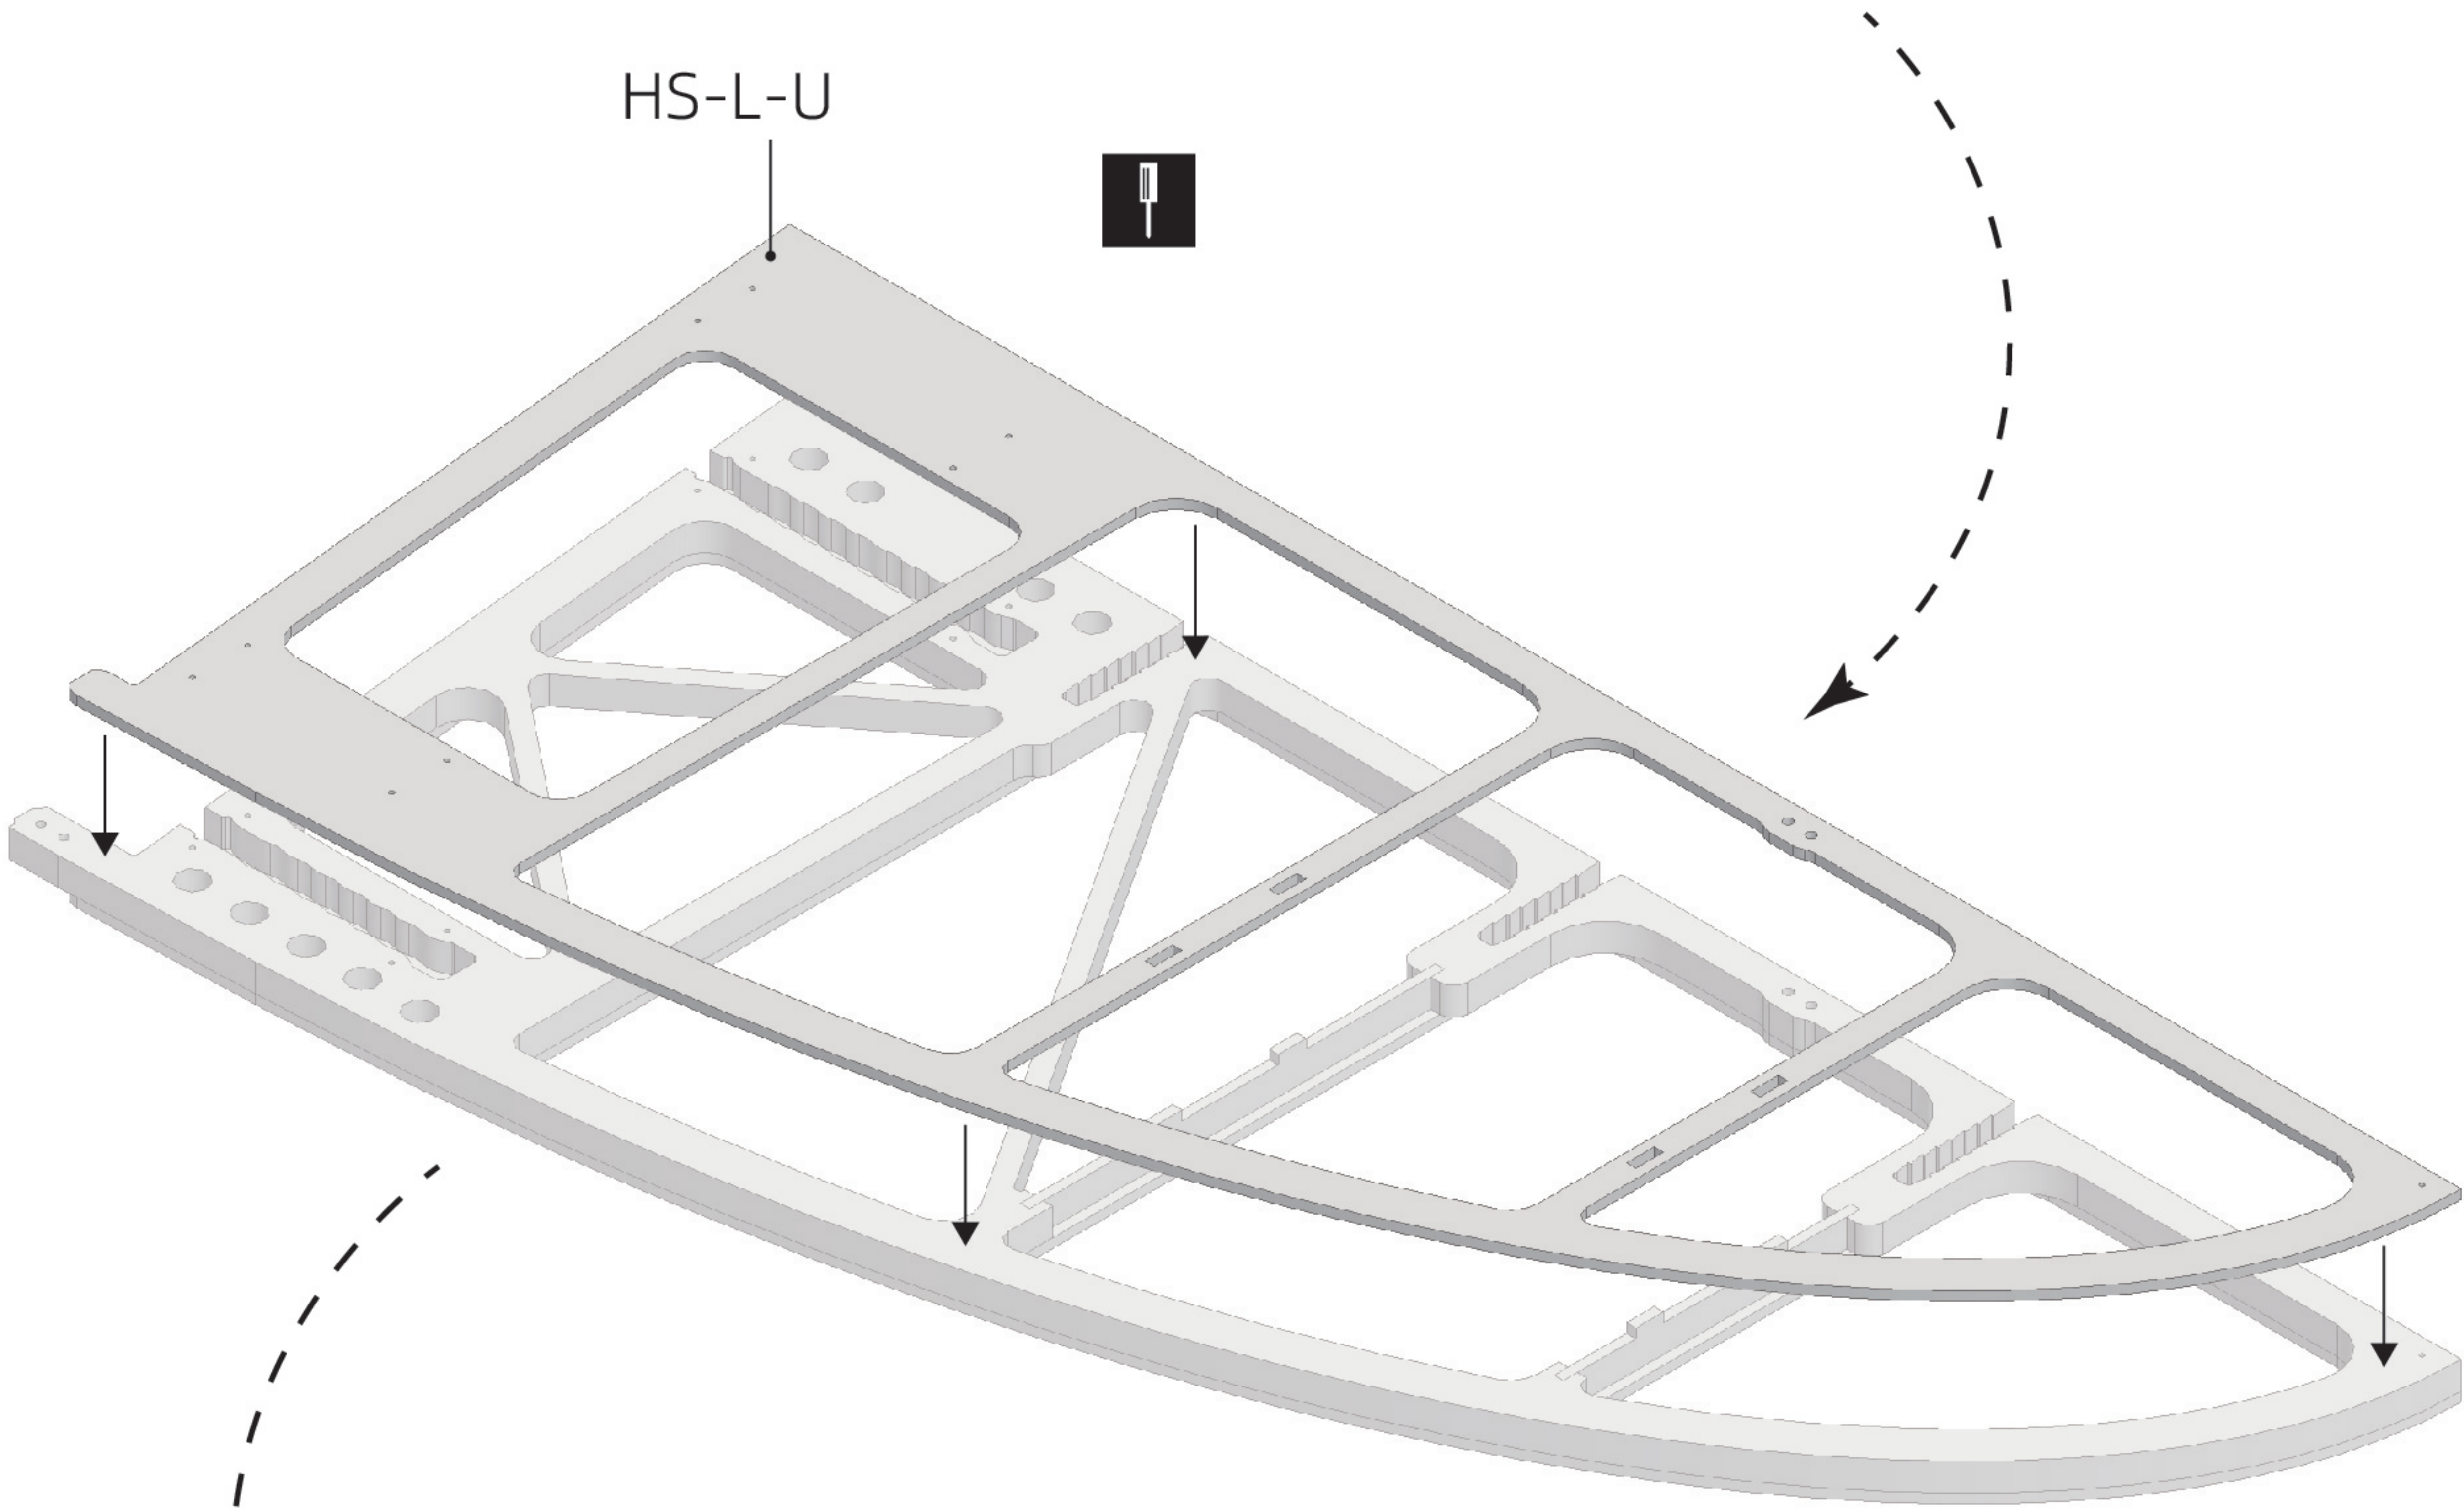
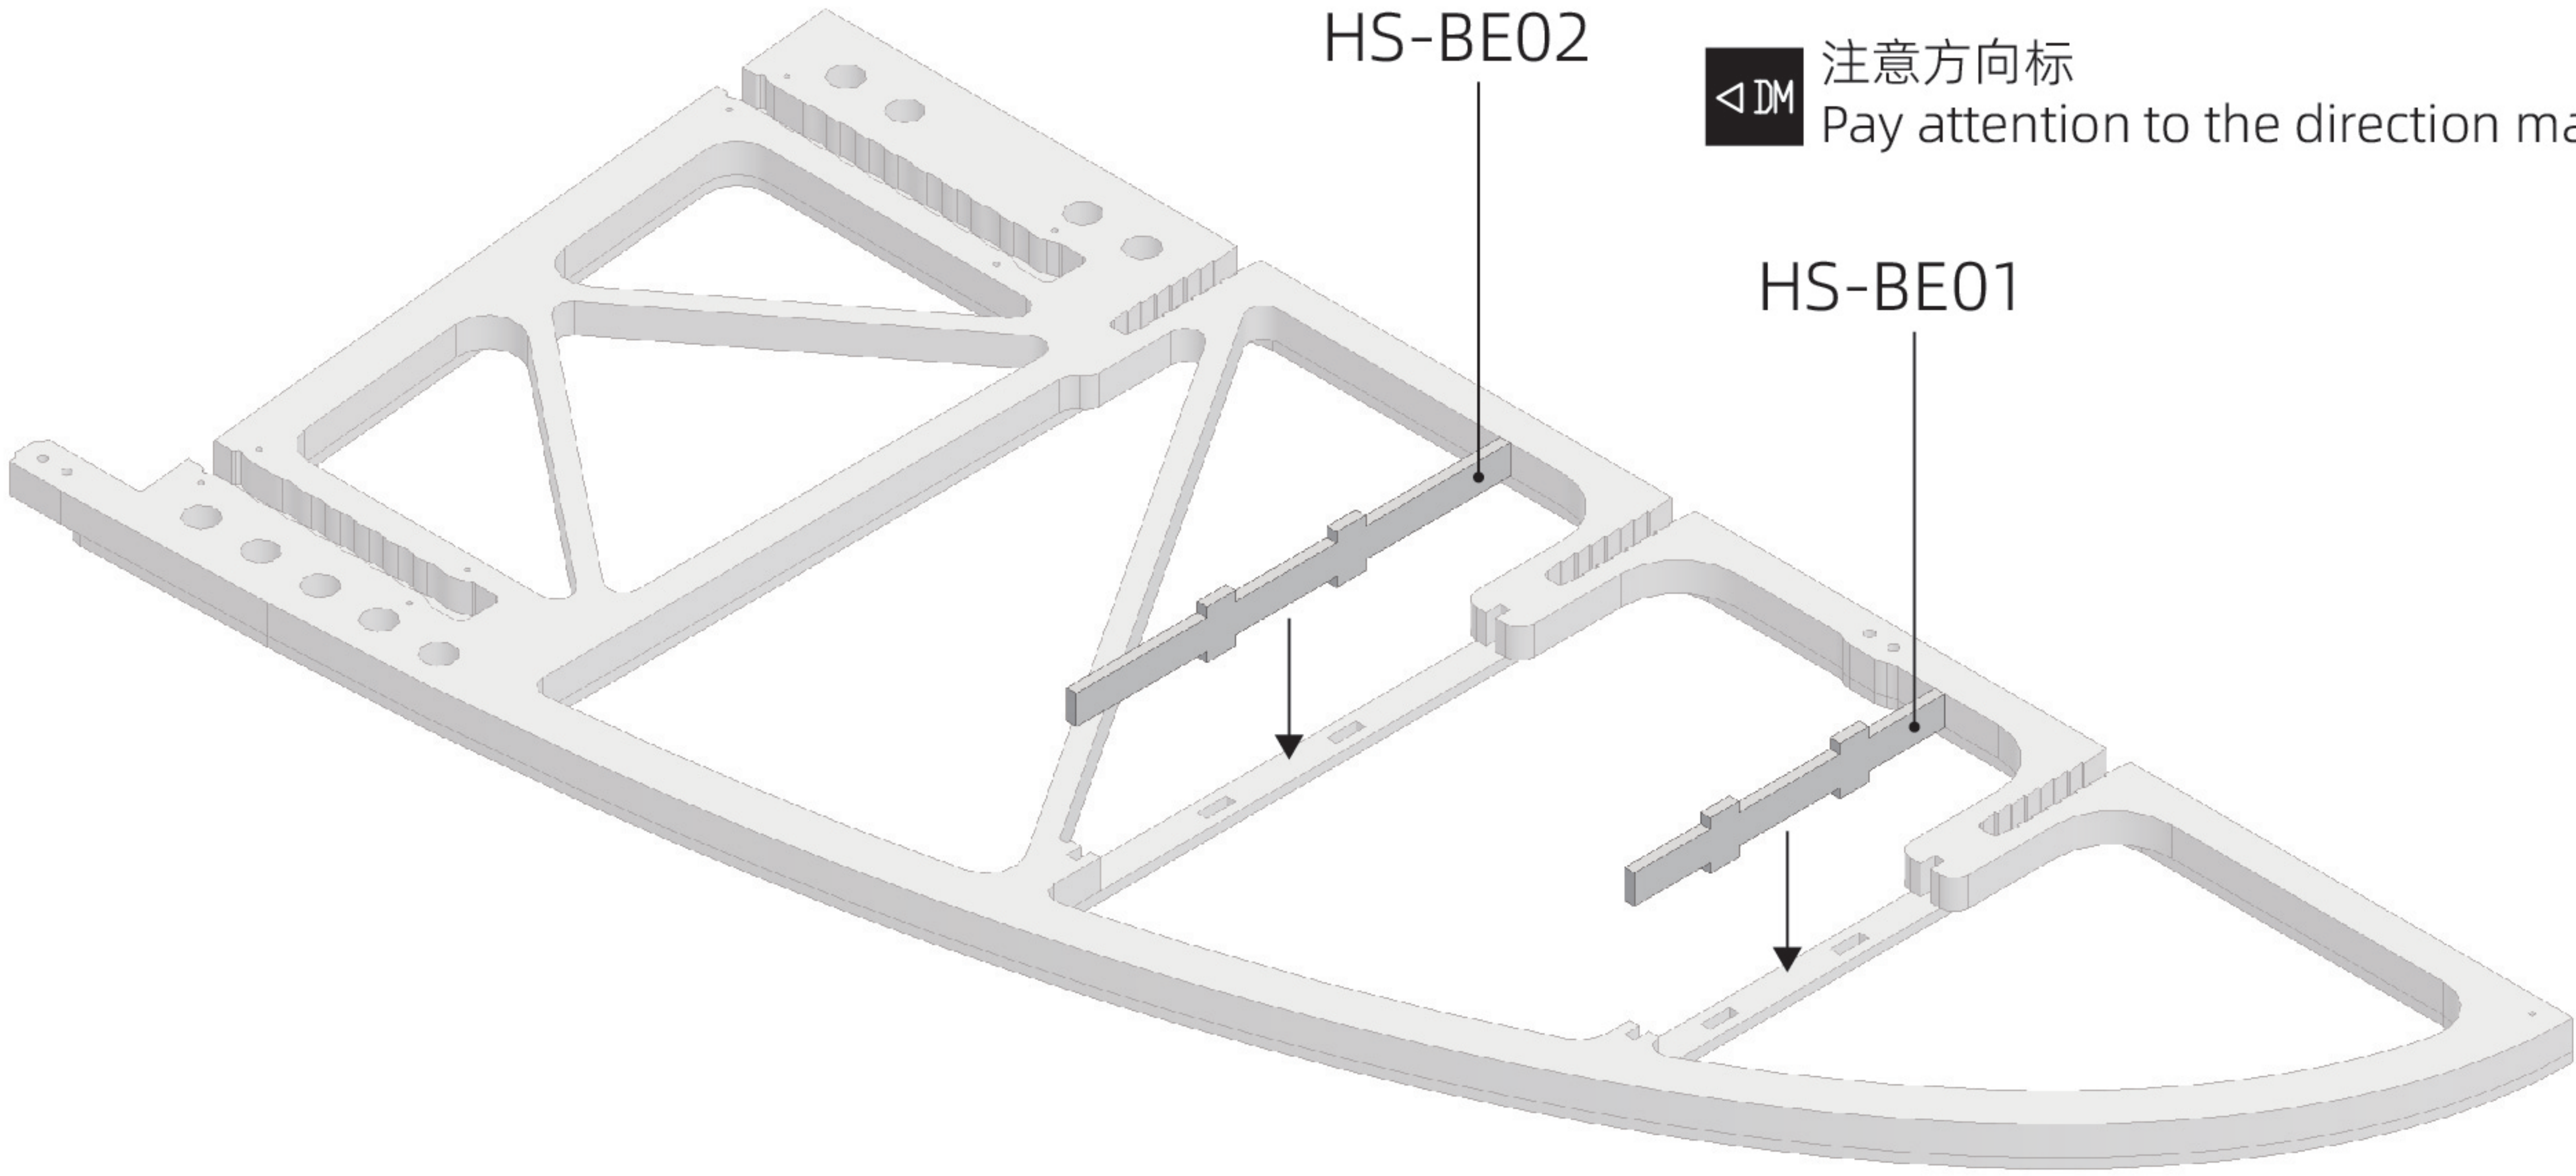


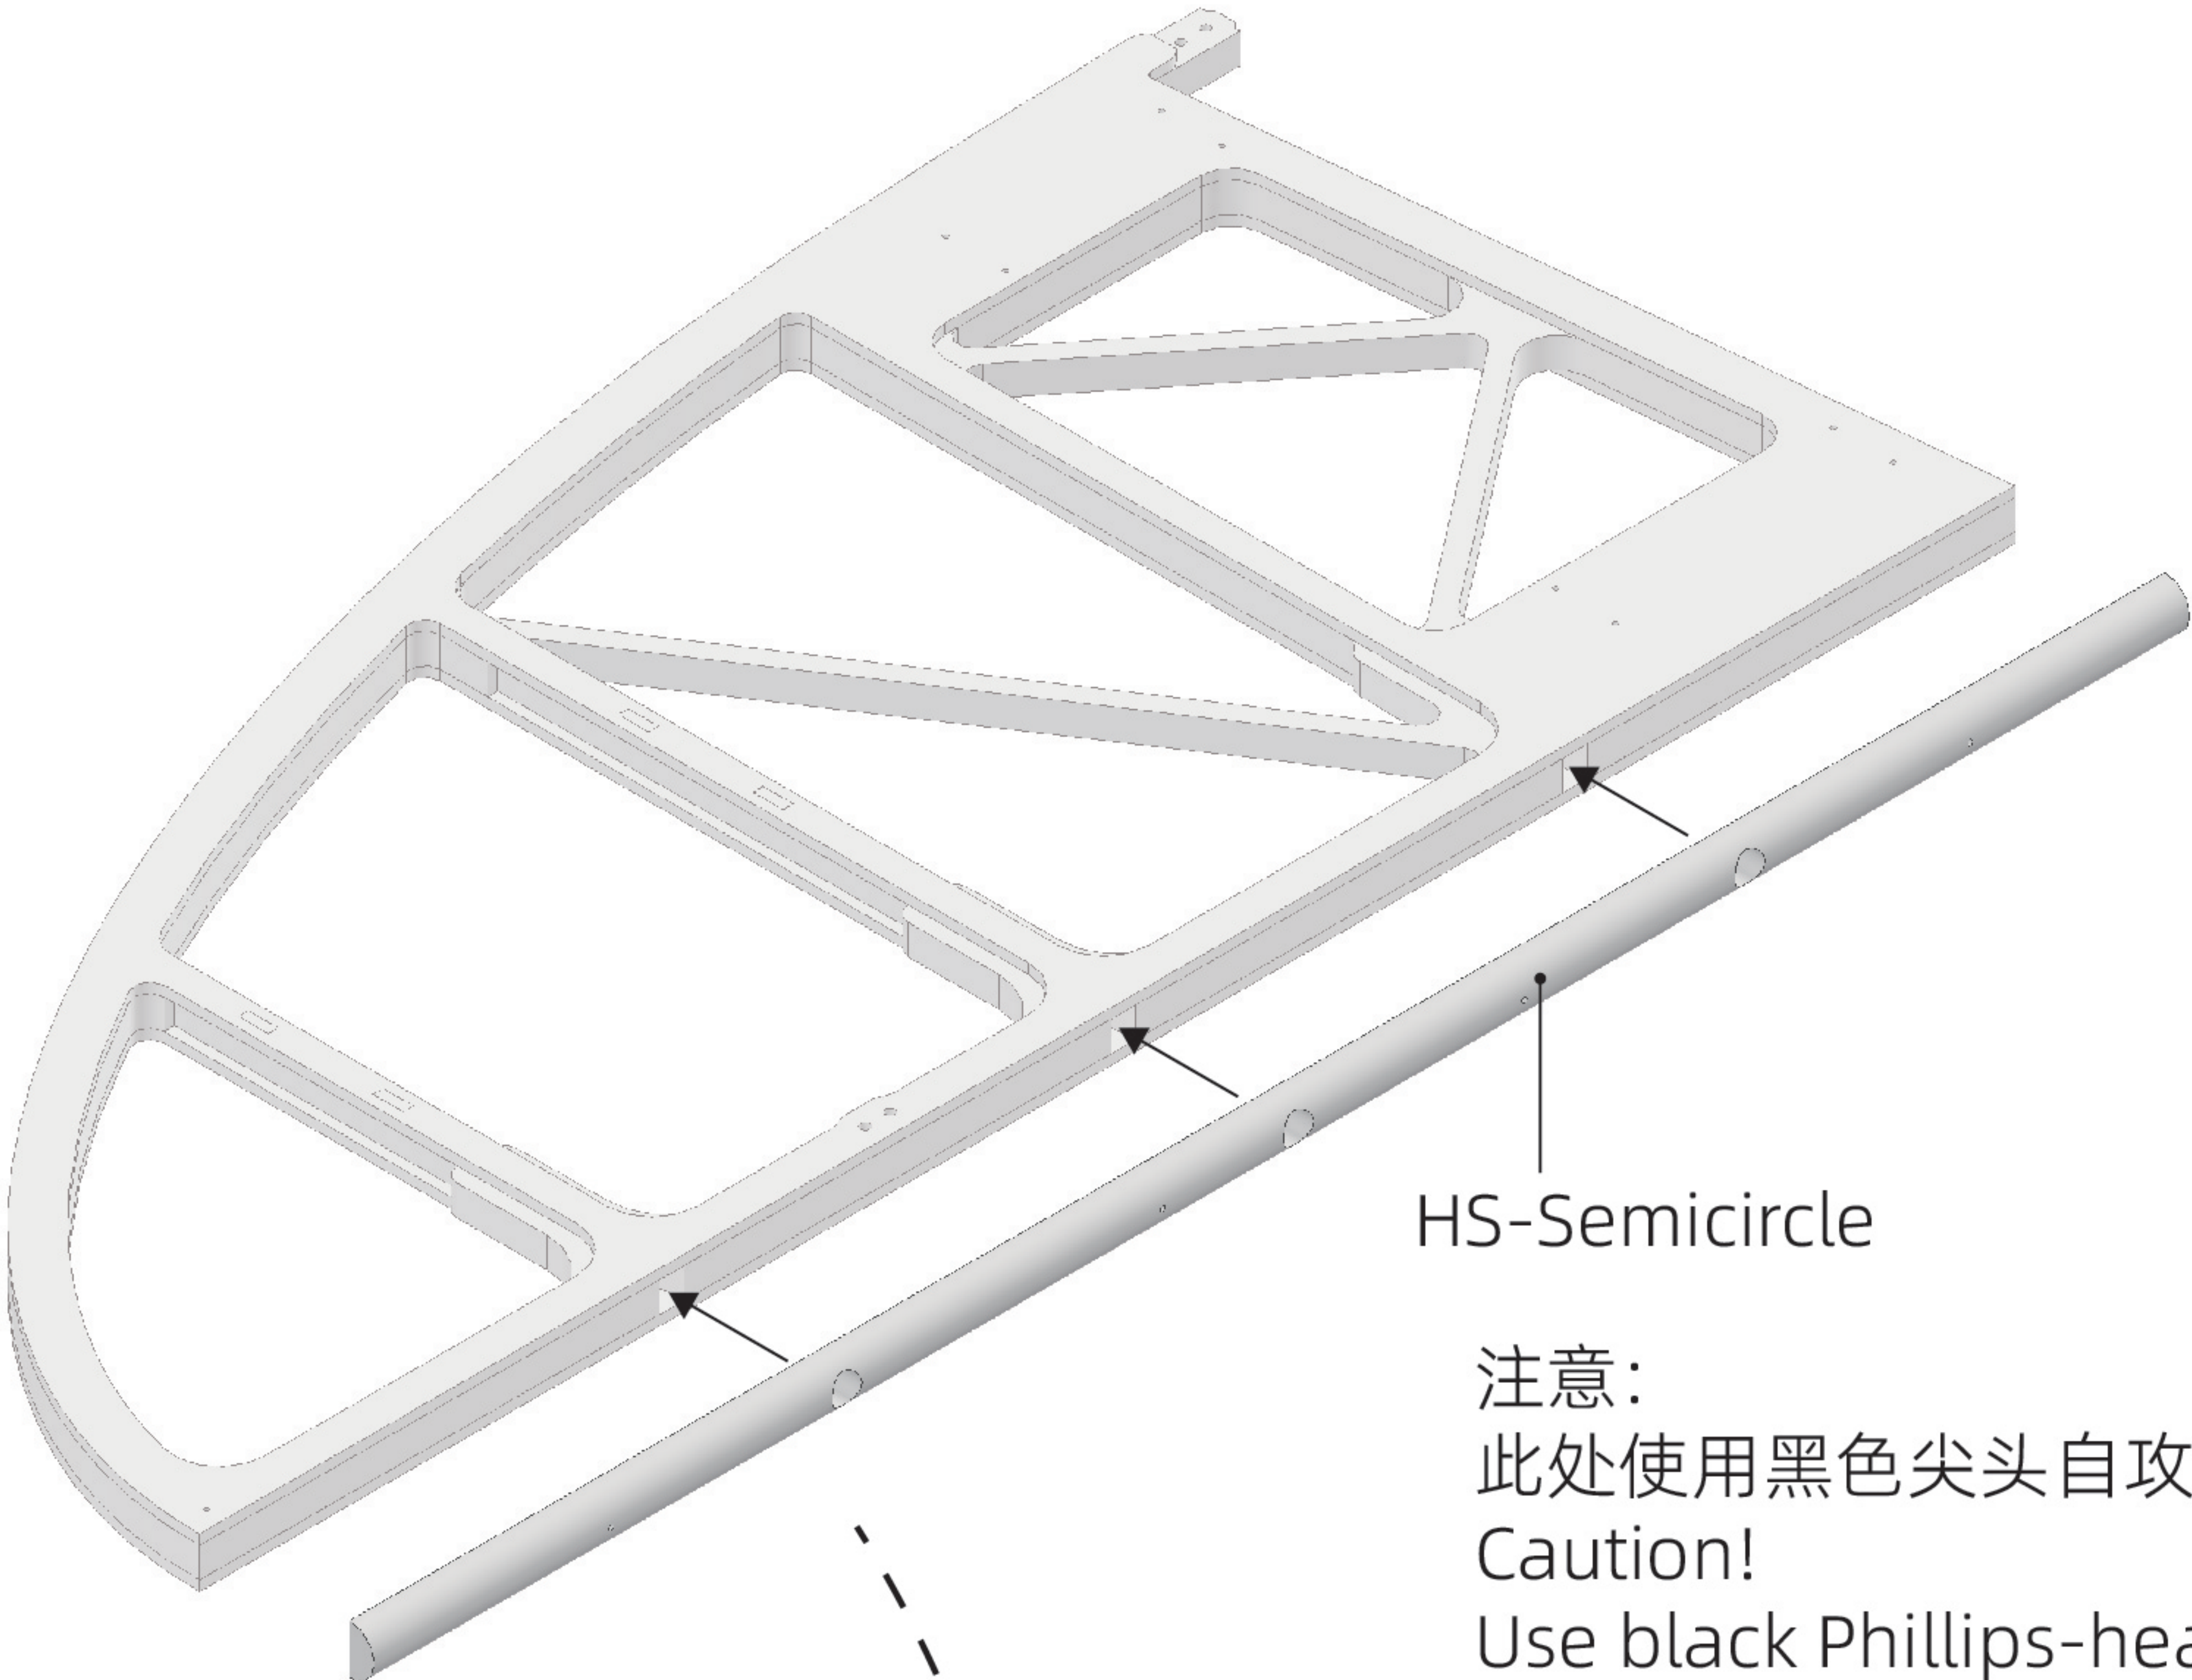



HS-Semicircle


注意：
此处使用黑色尖头自攻螺丝。
Caution!
Use black Phillips-head
self-tapping screws here.

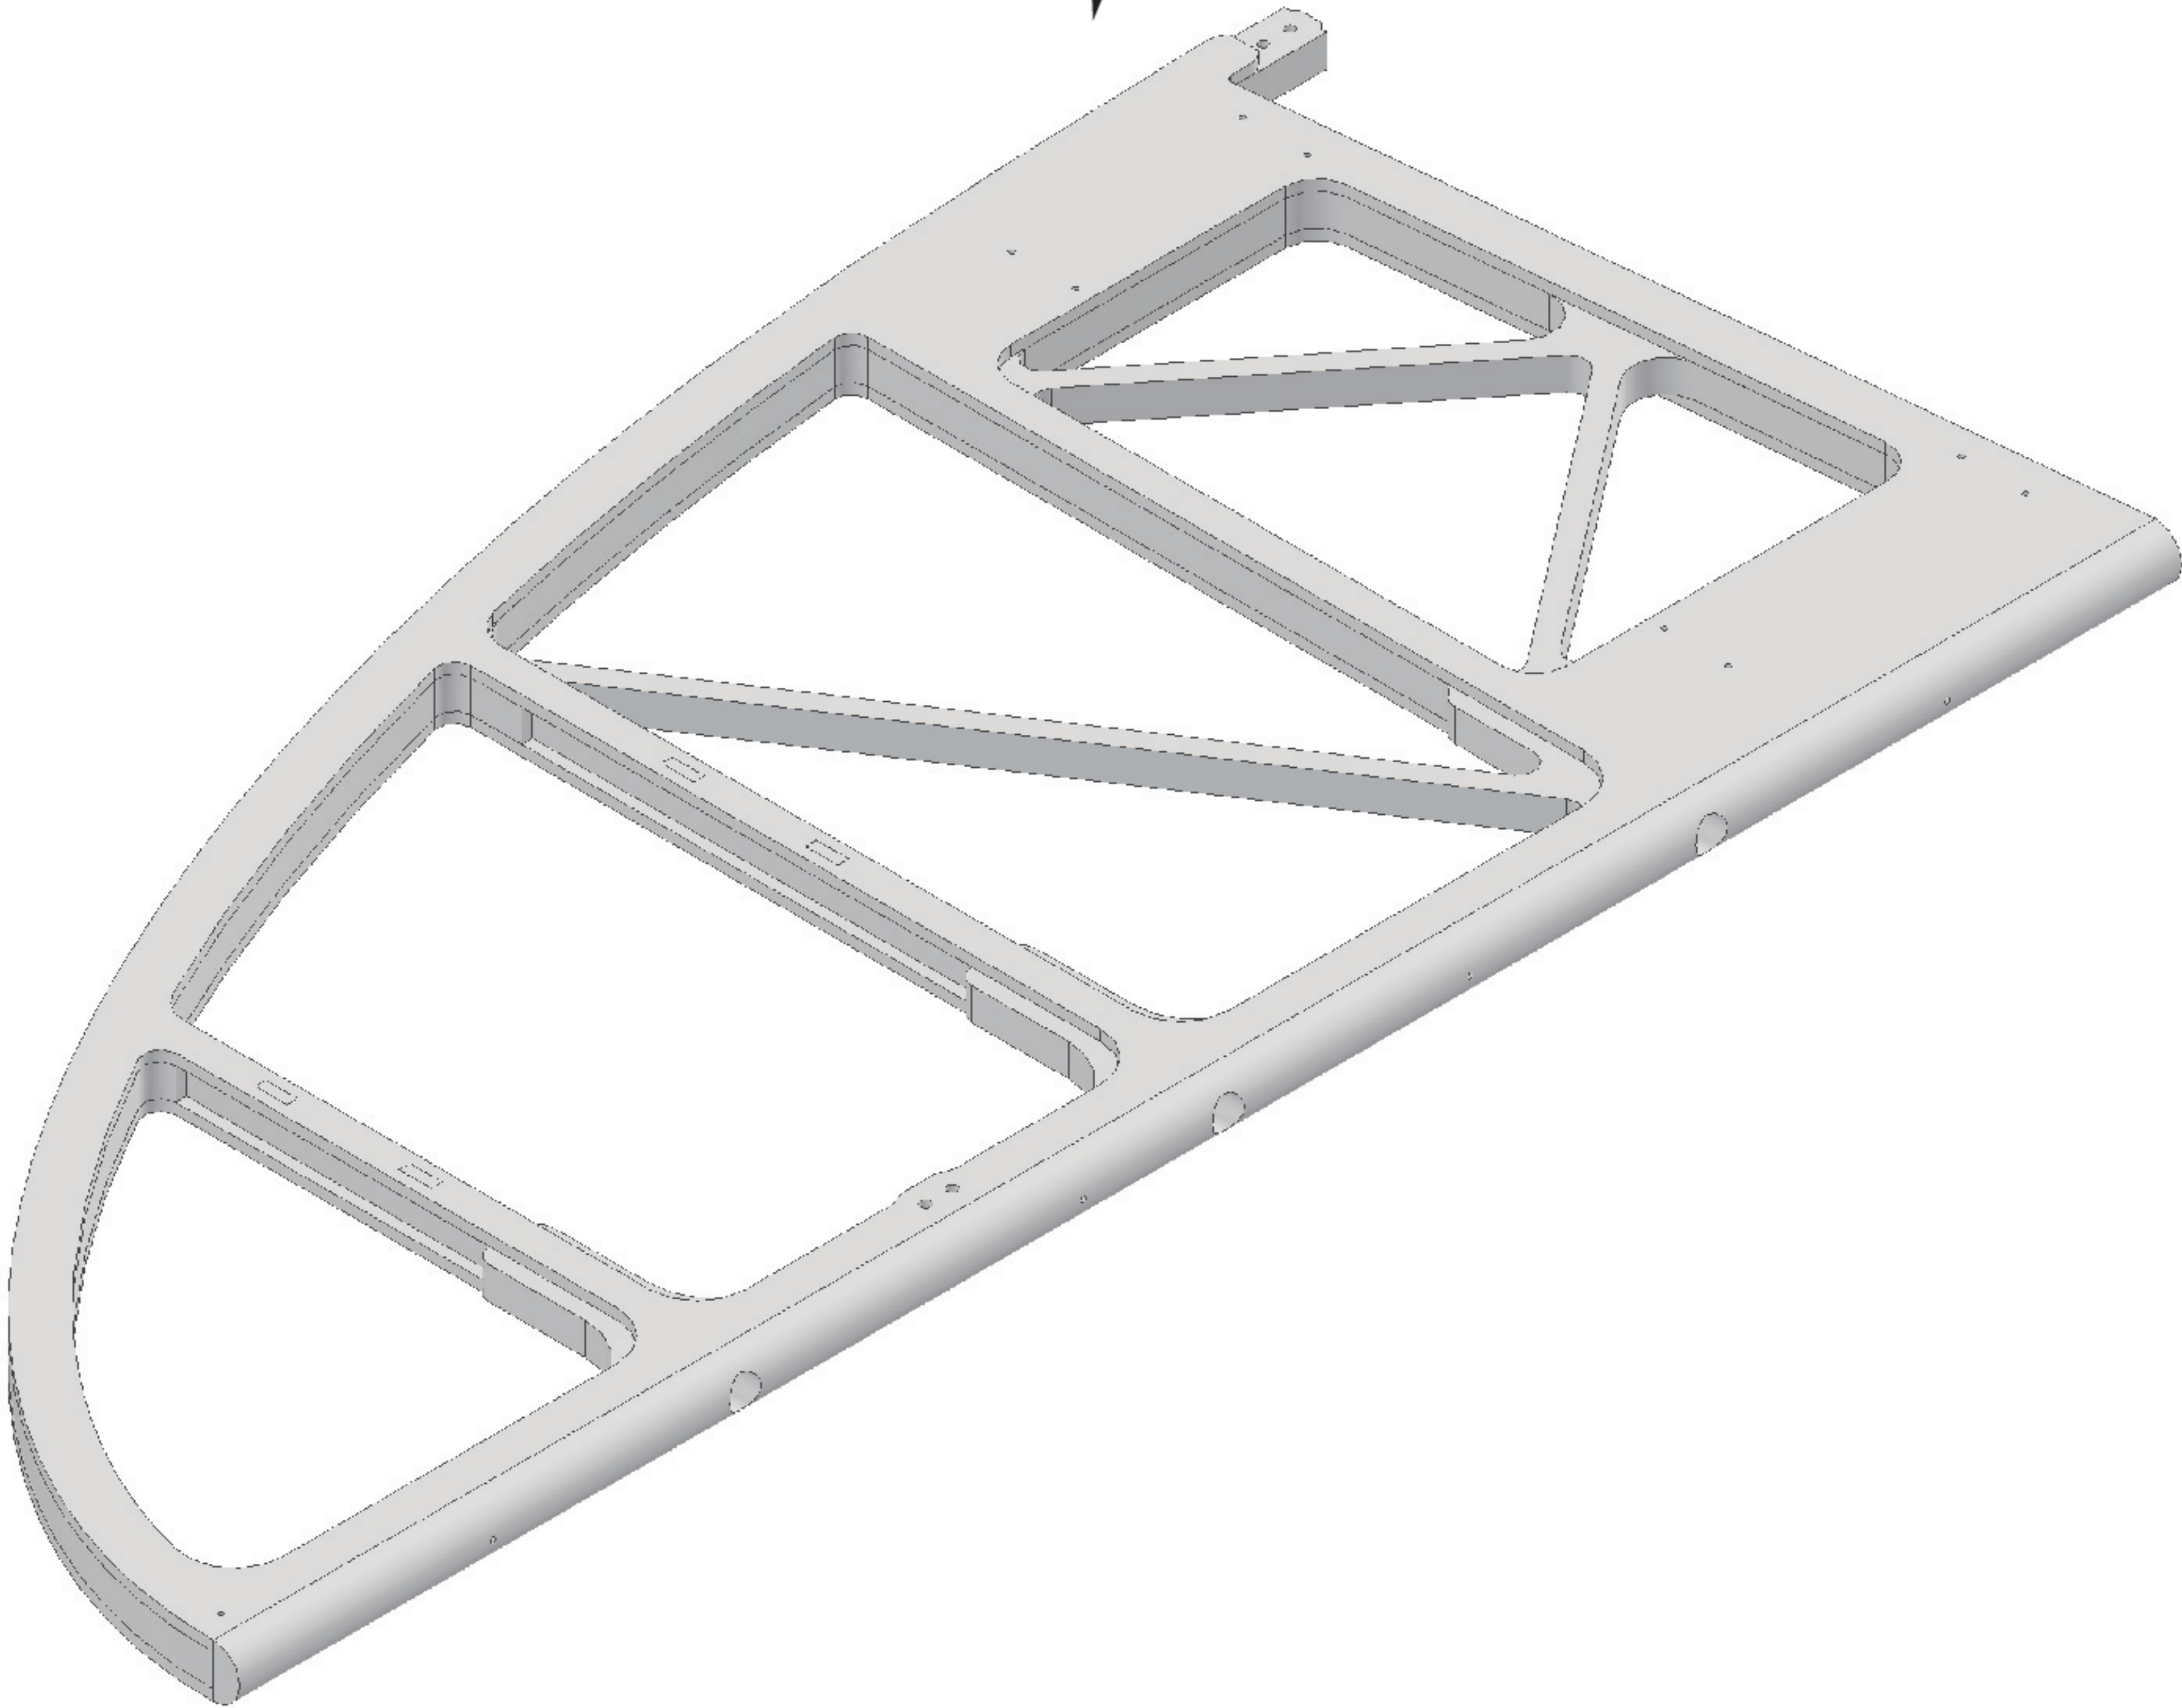


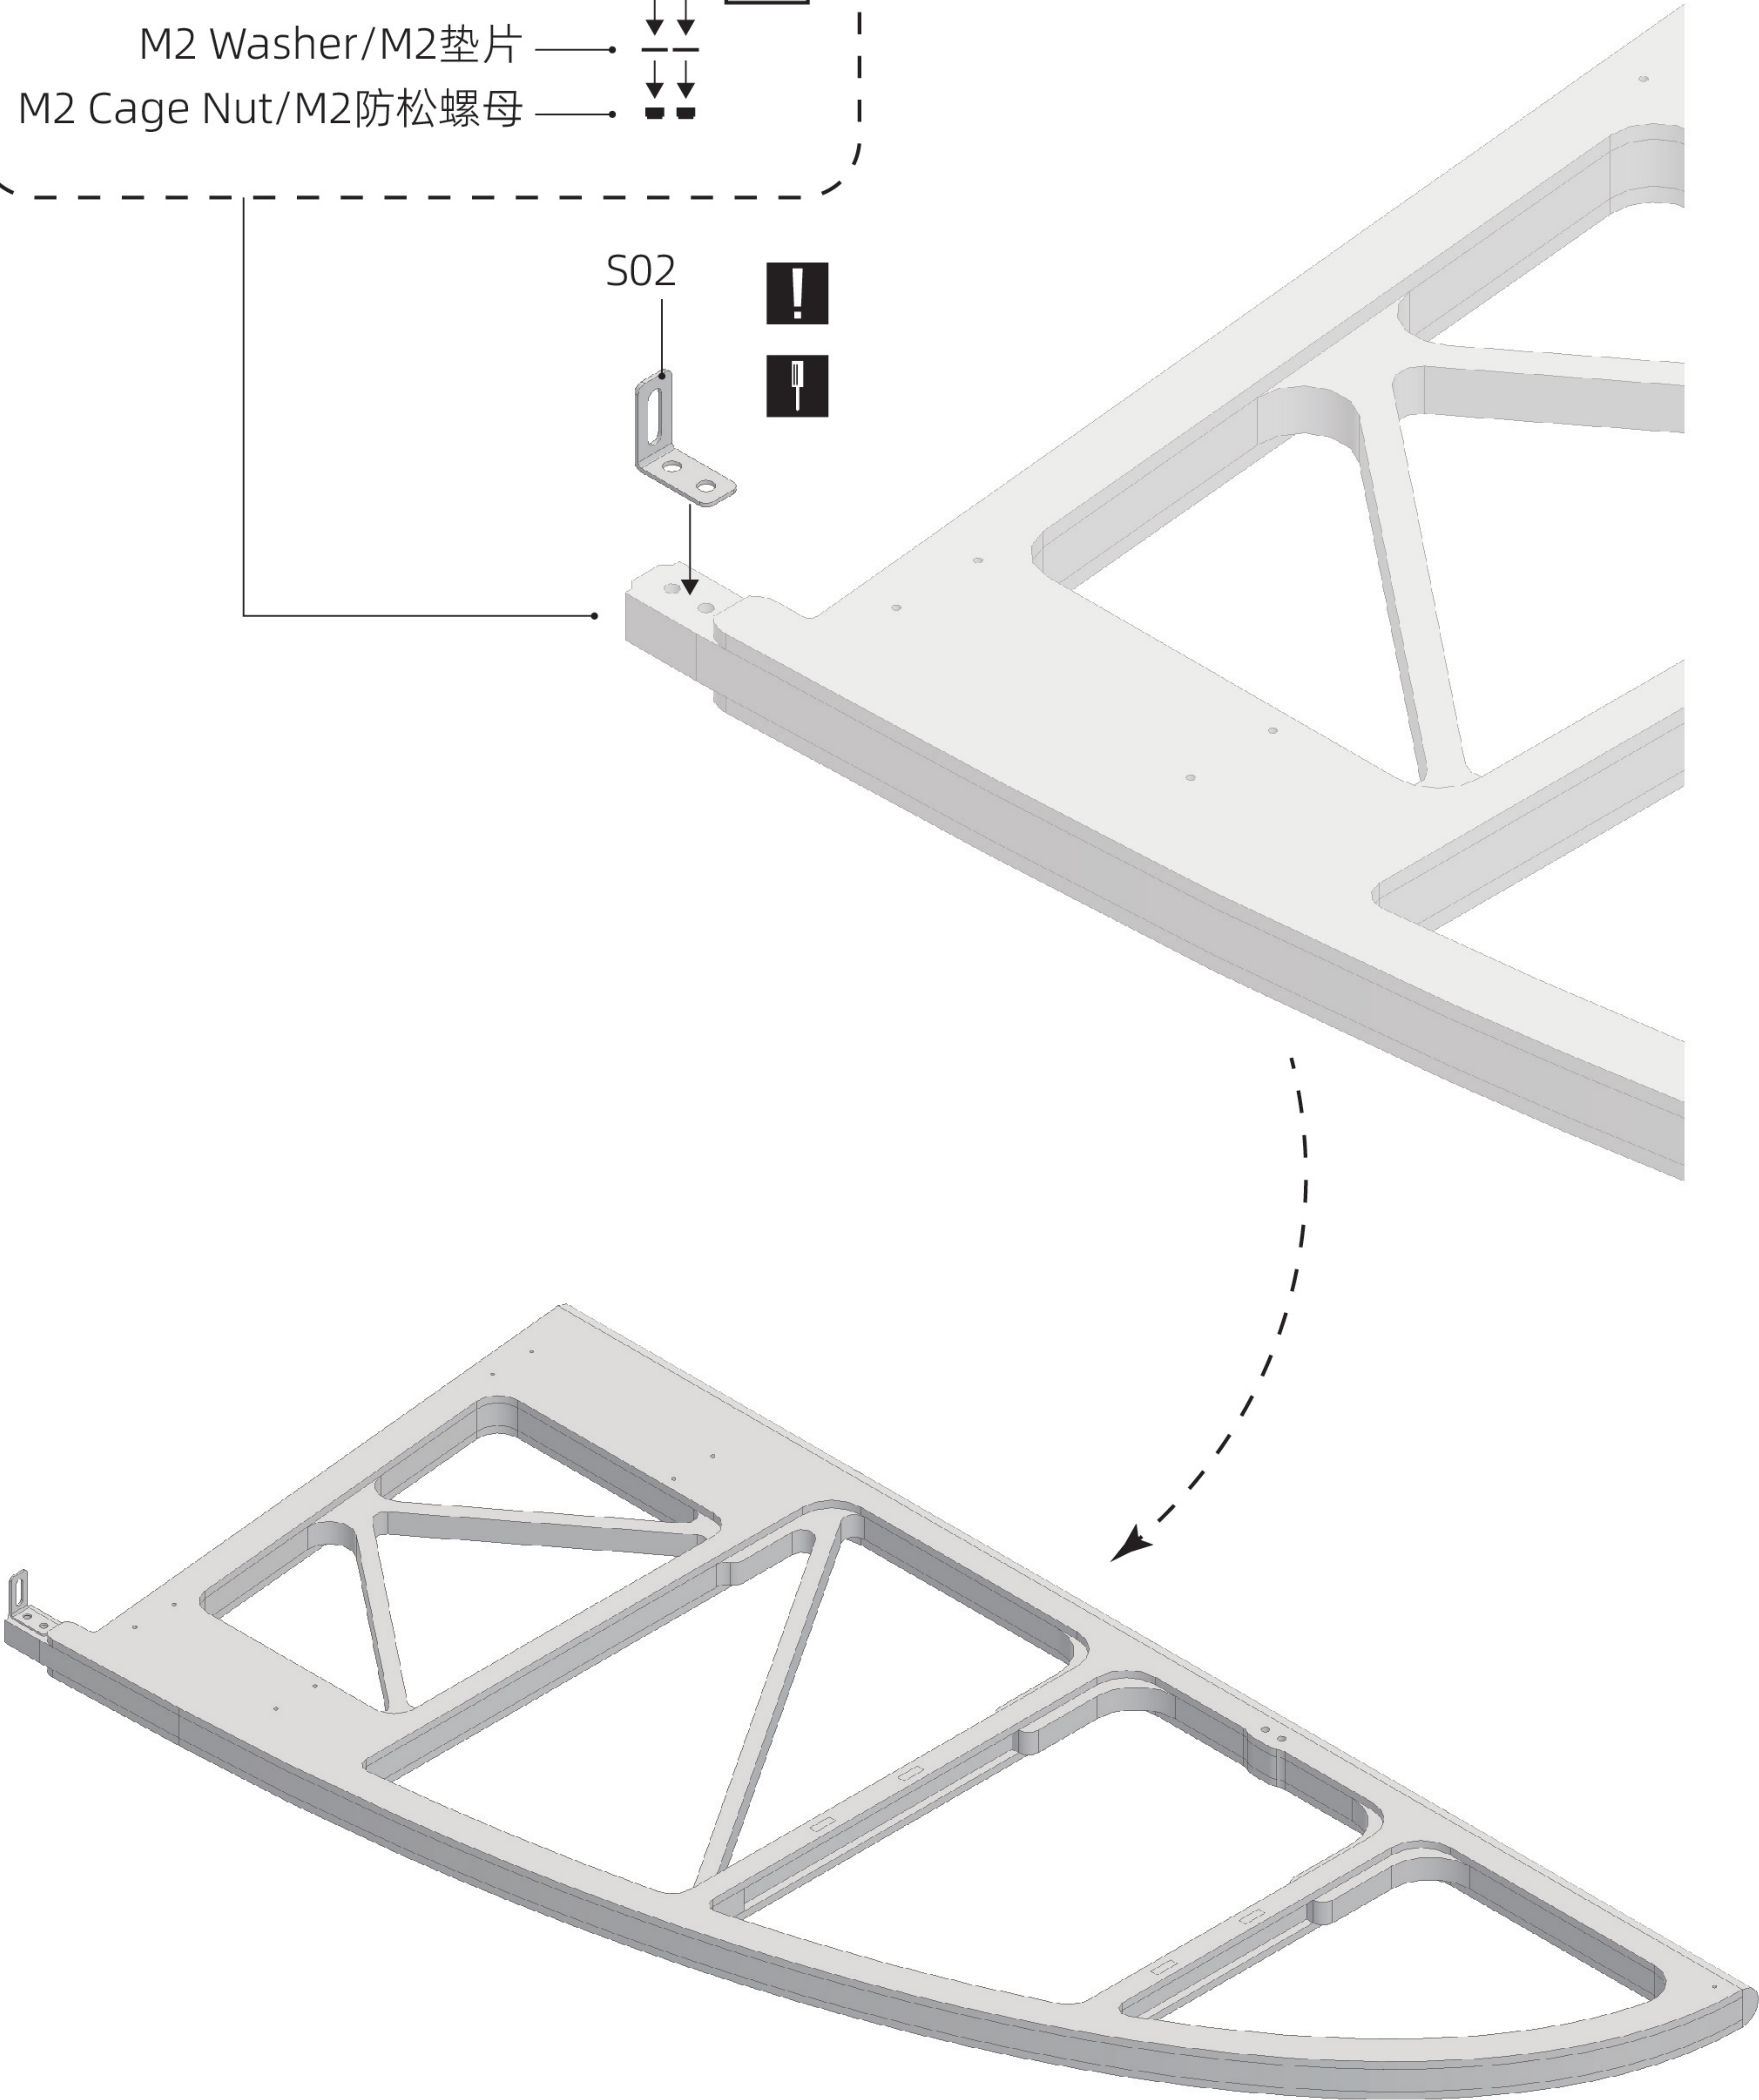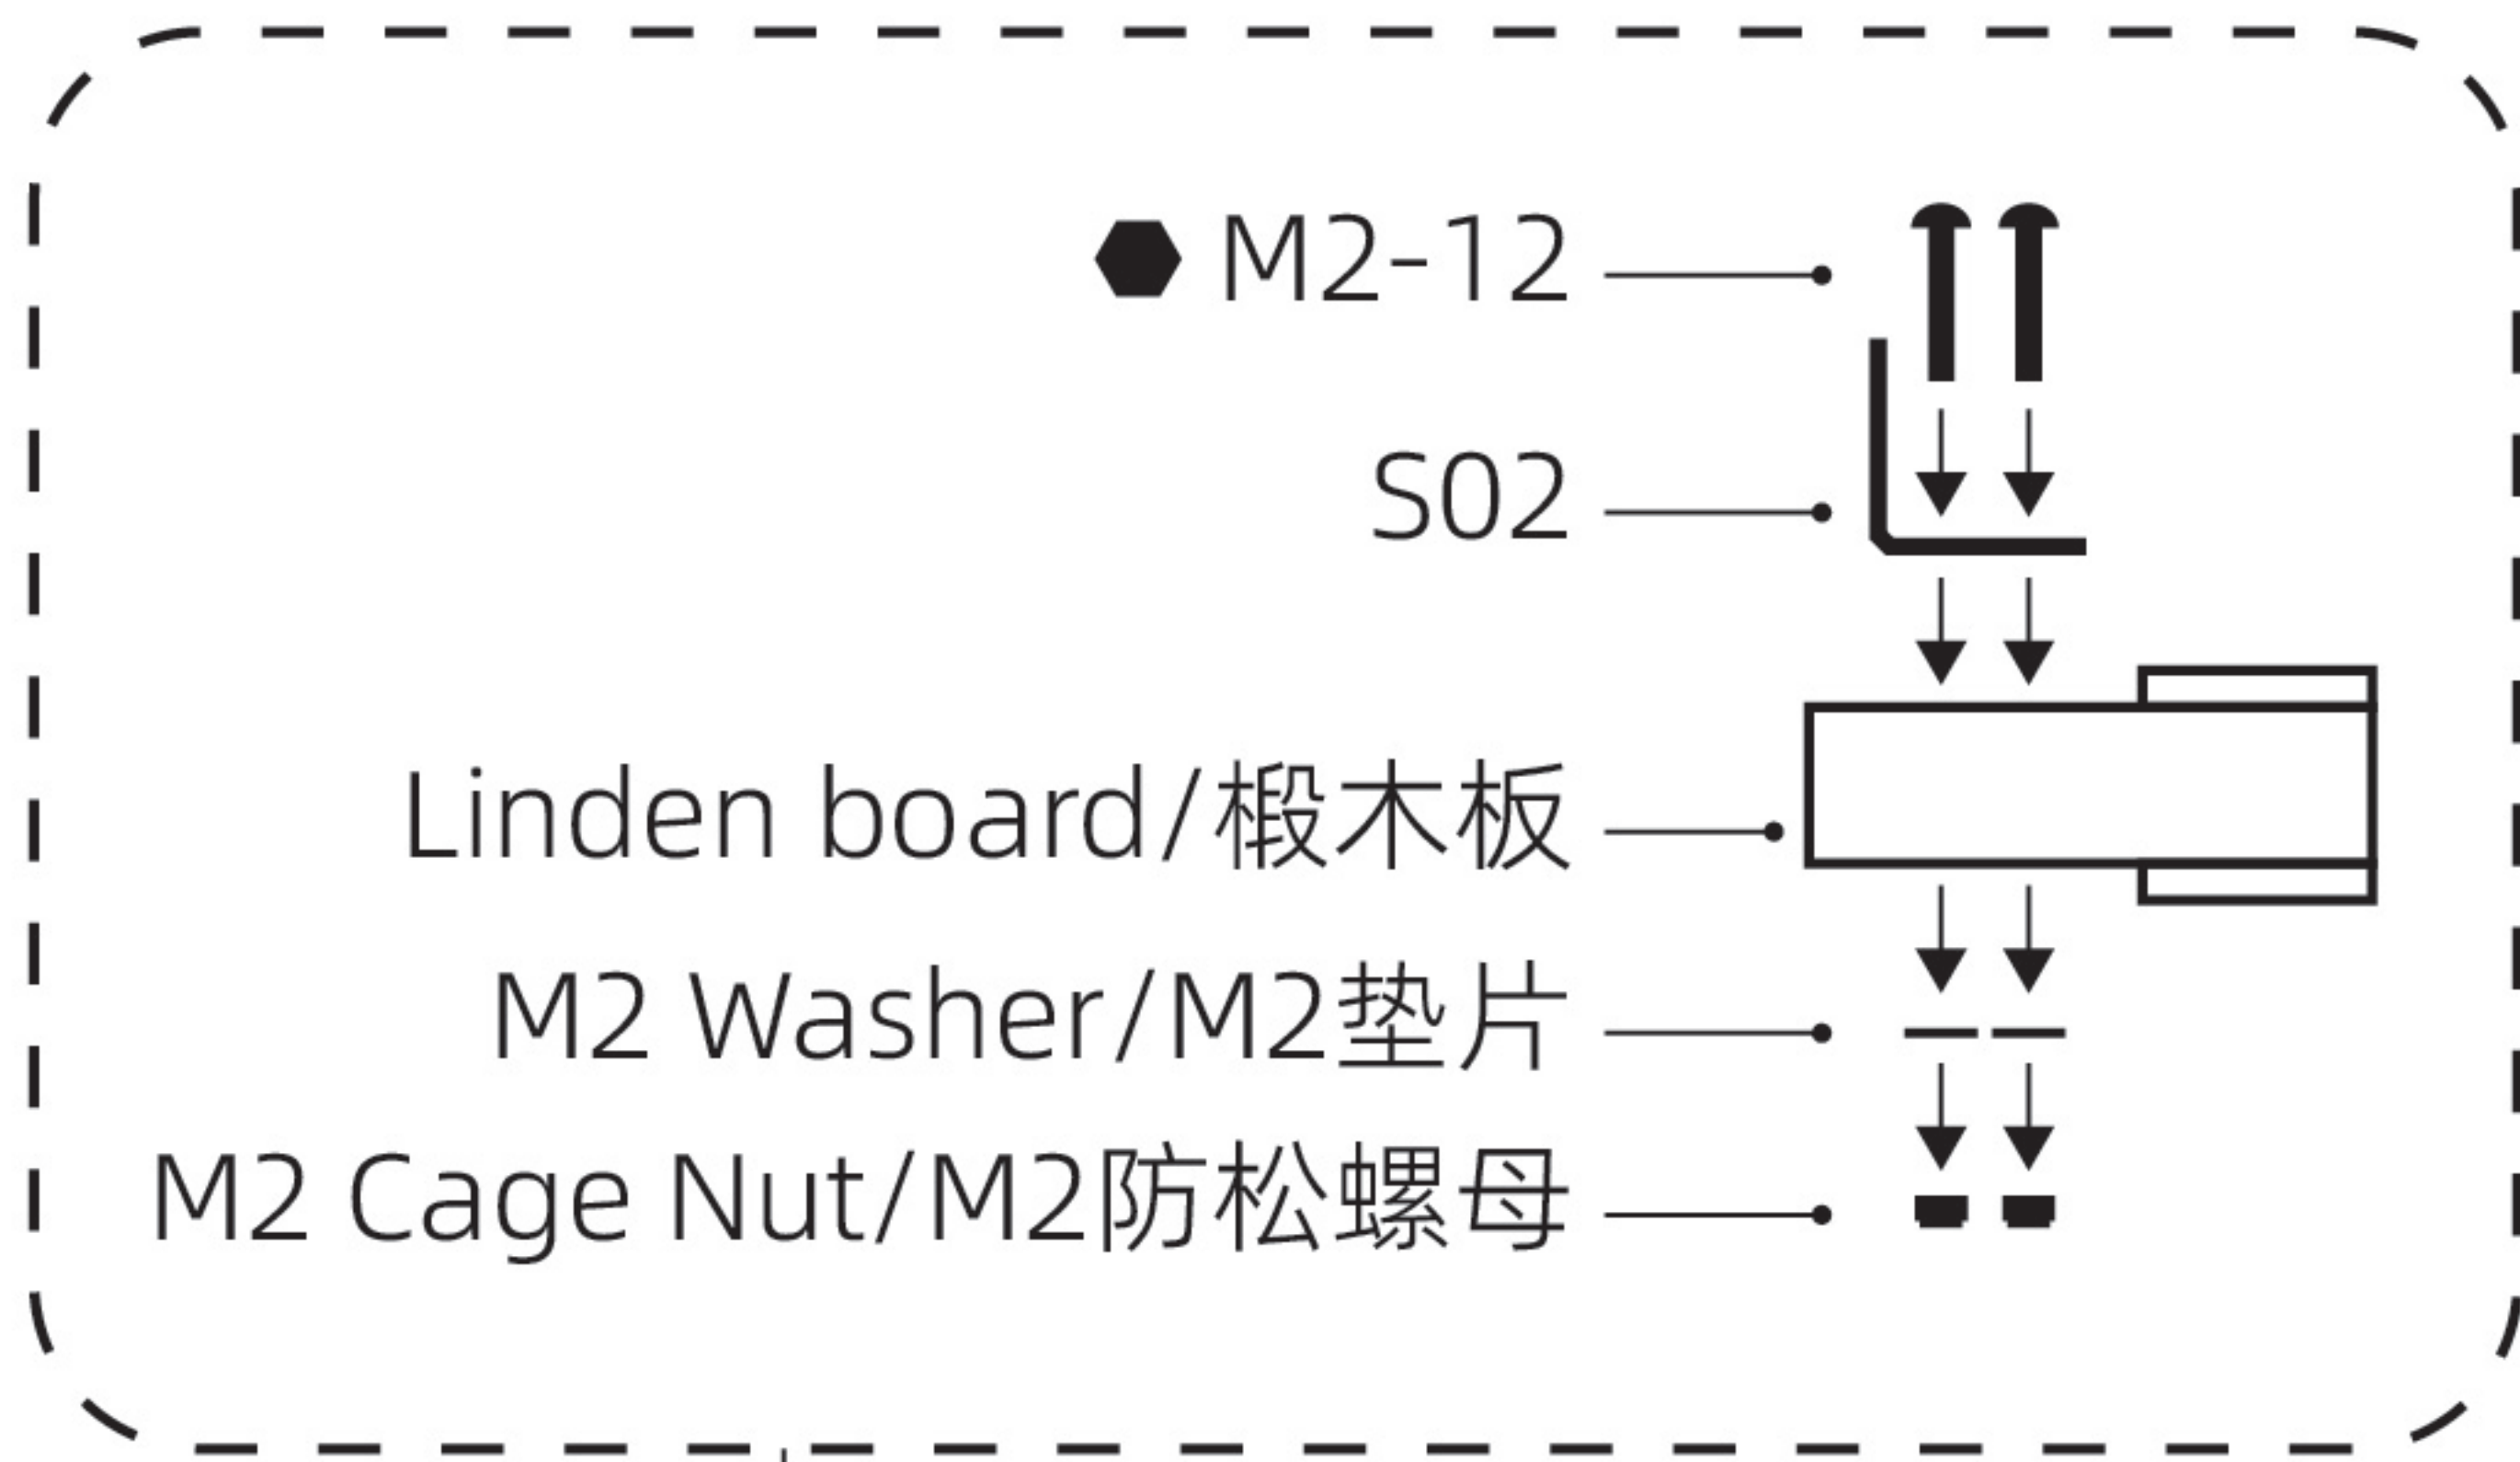

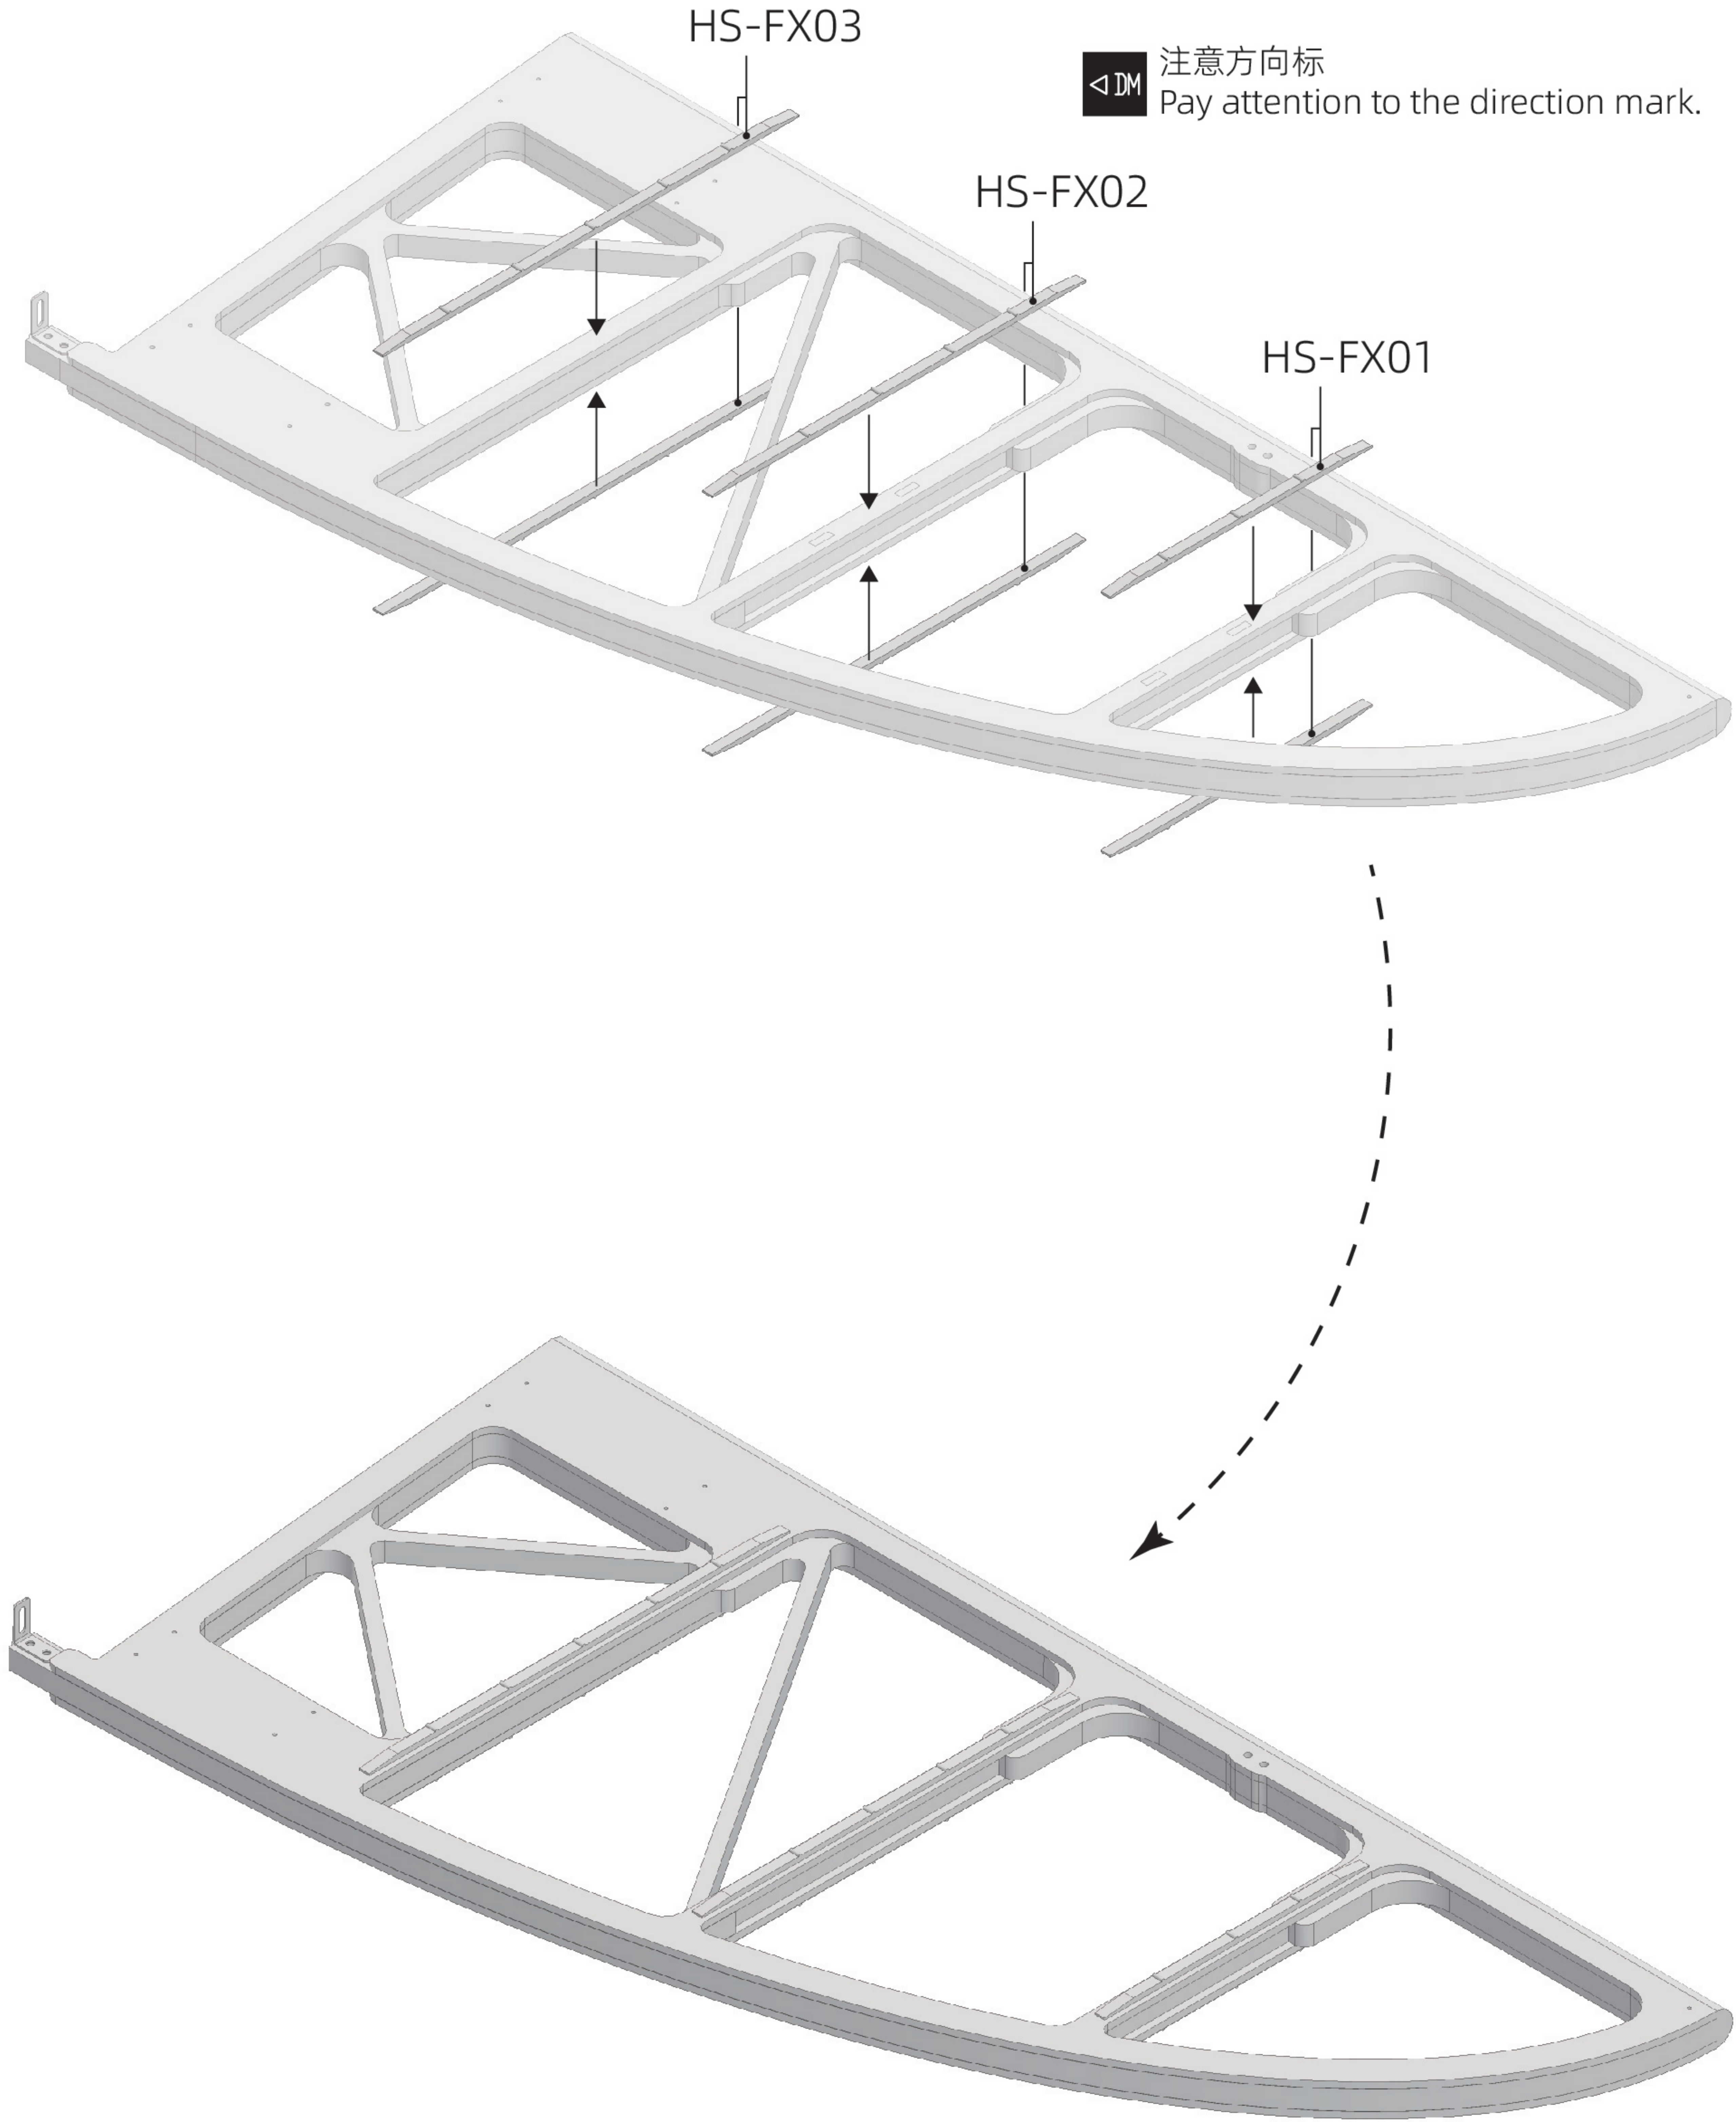

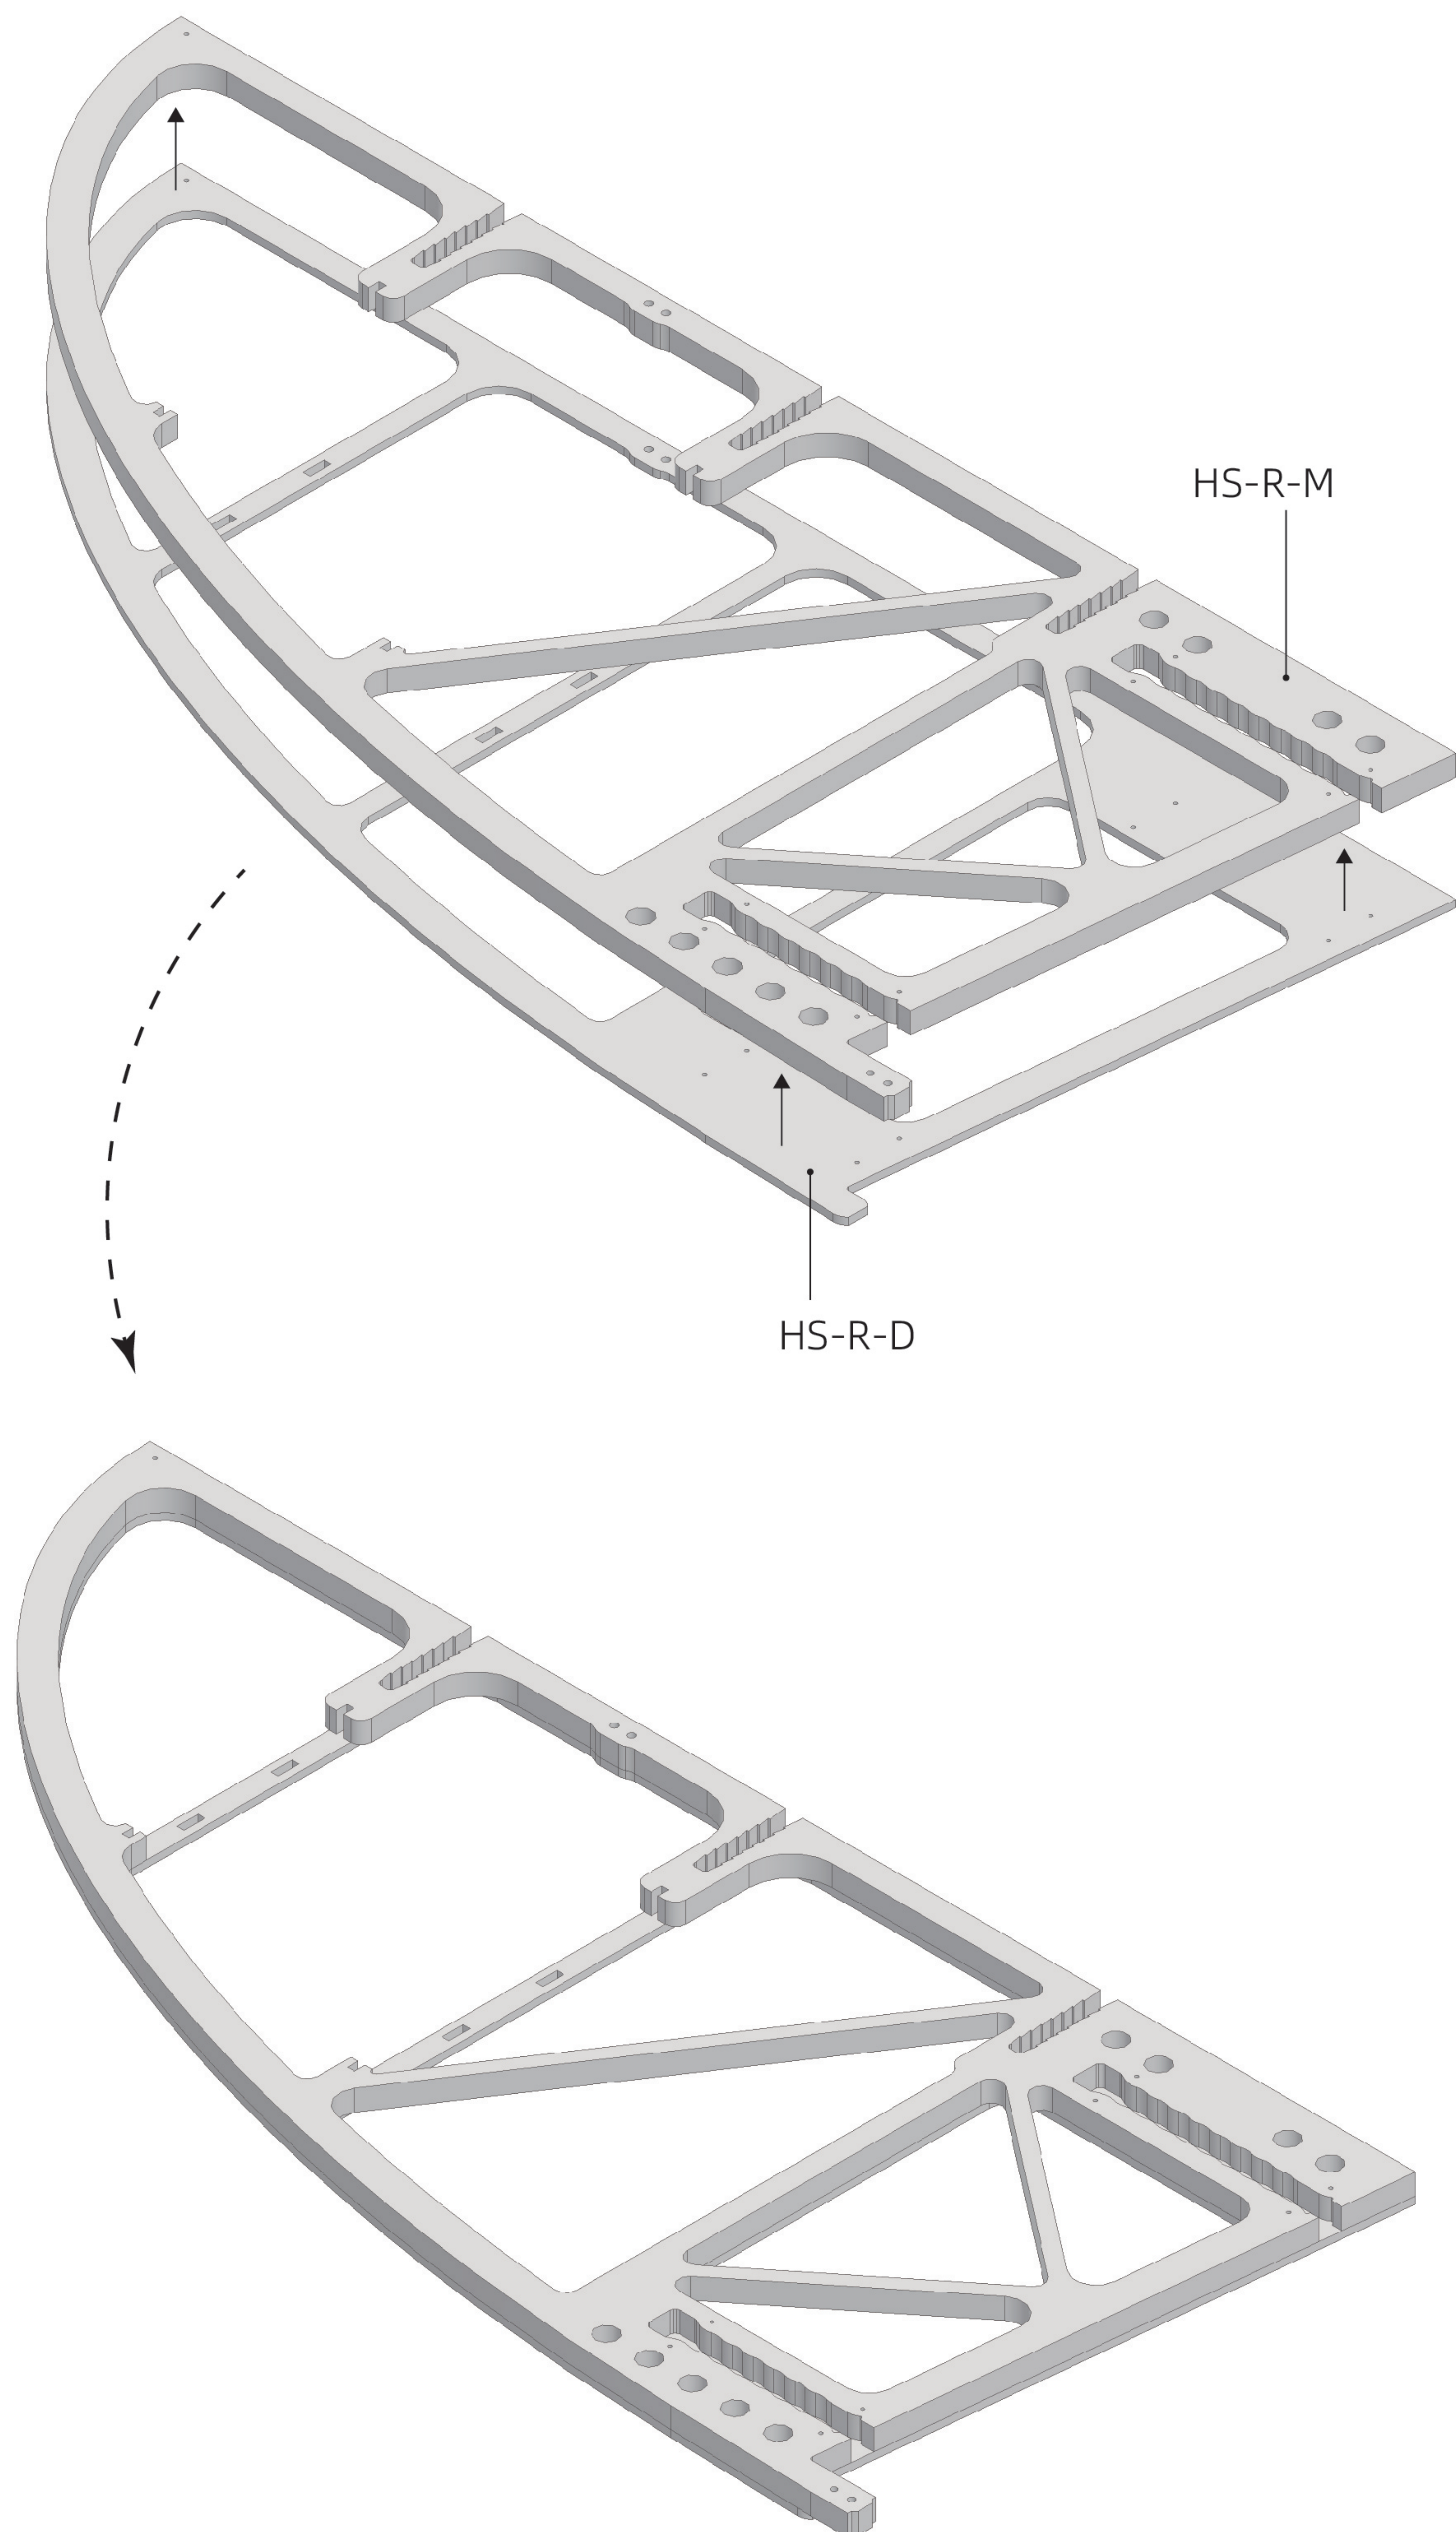

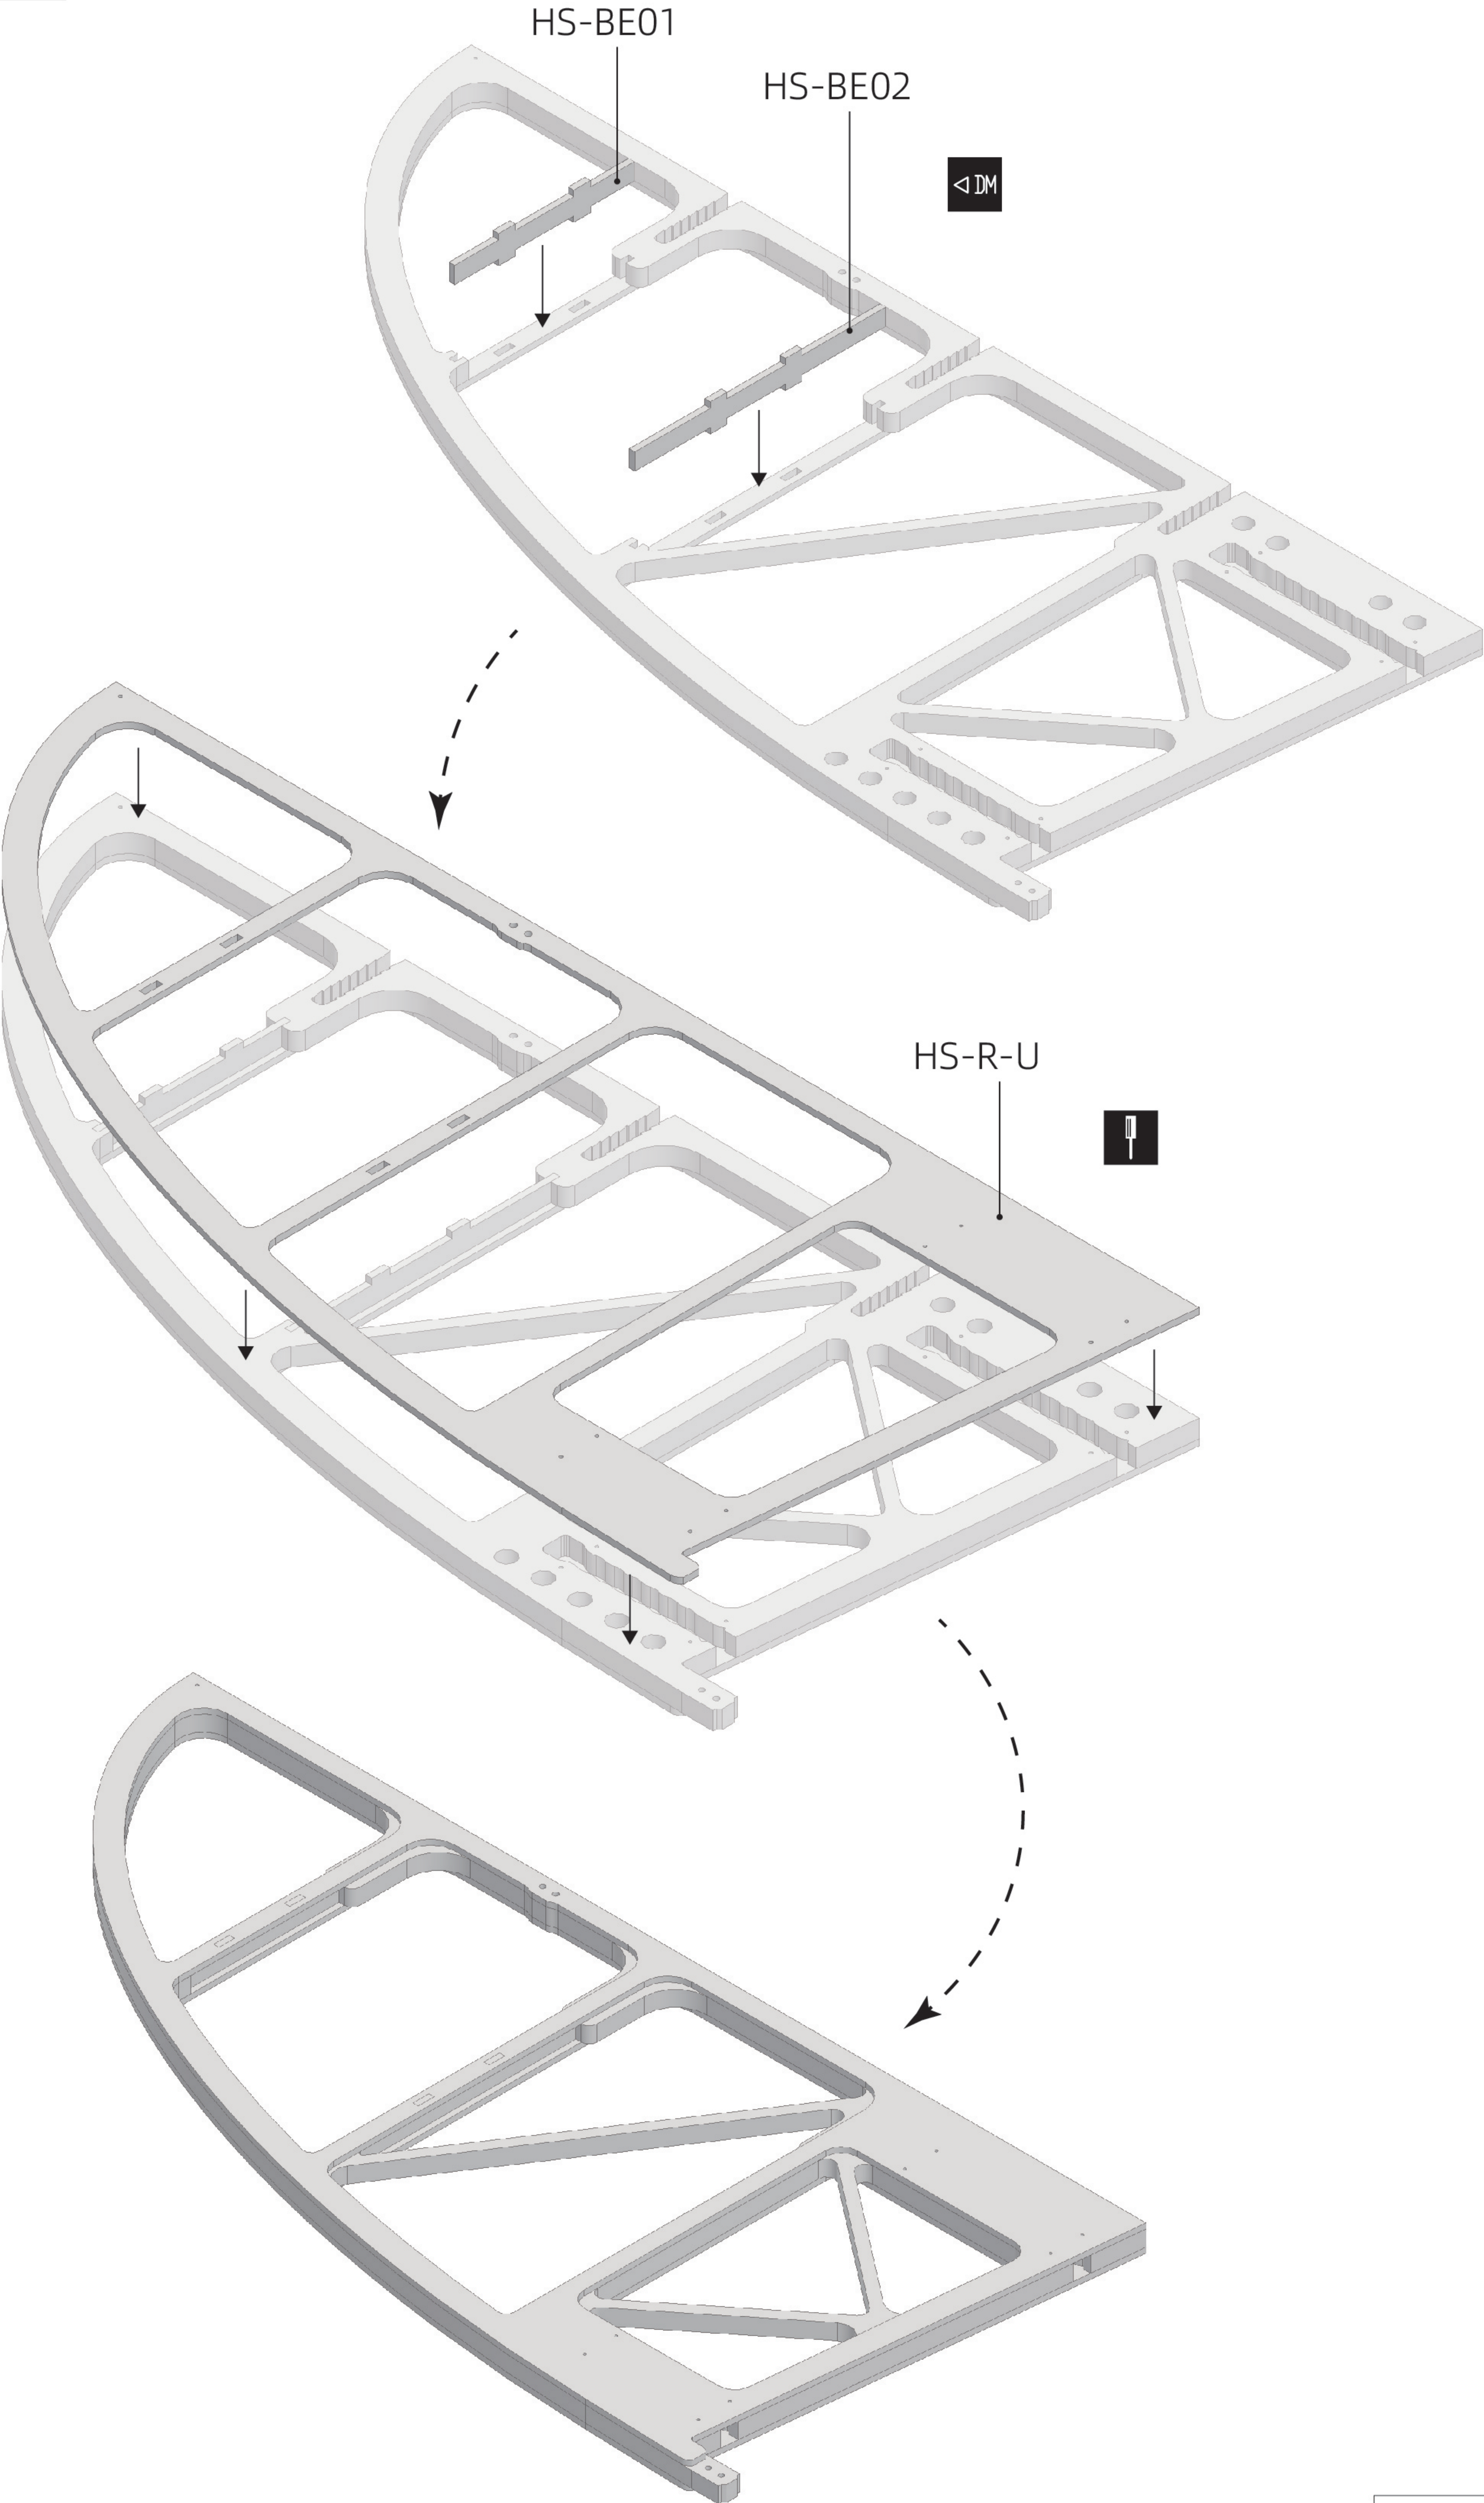


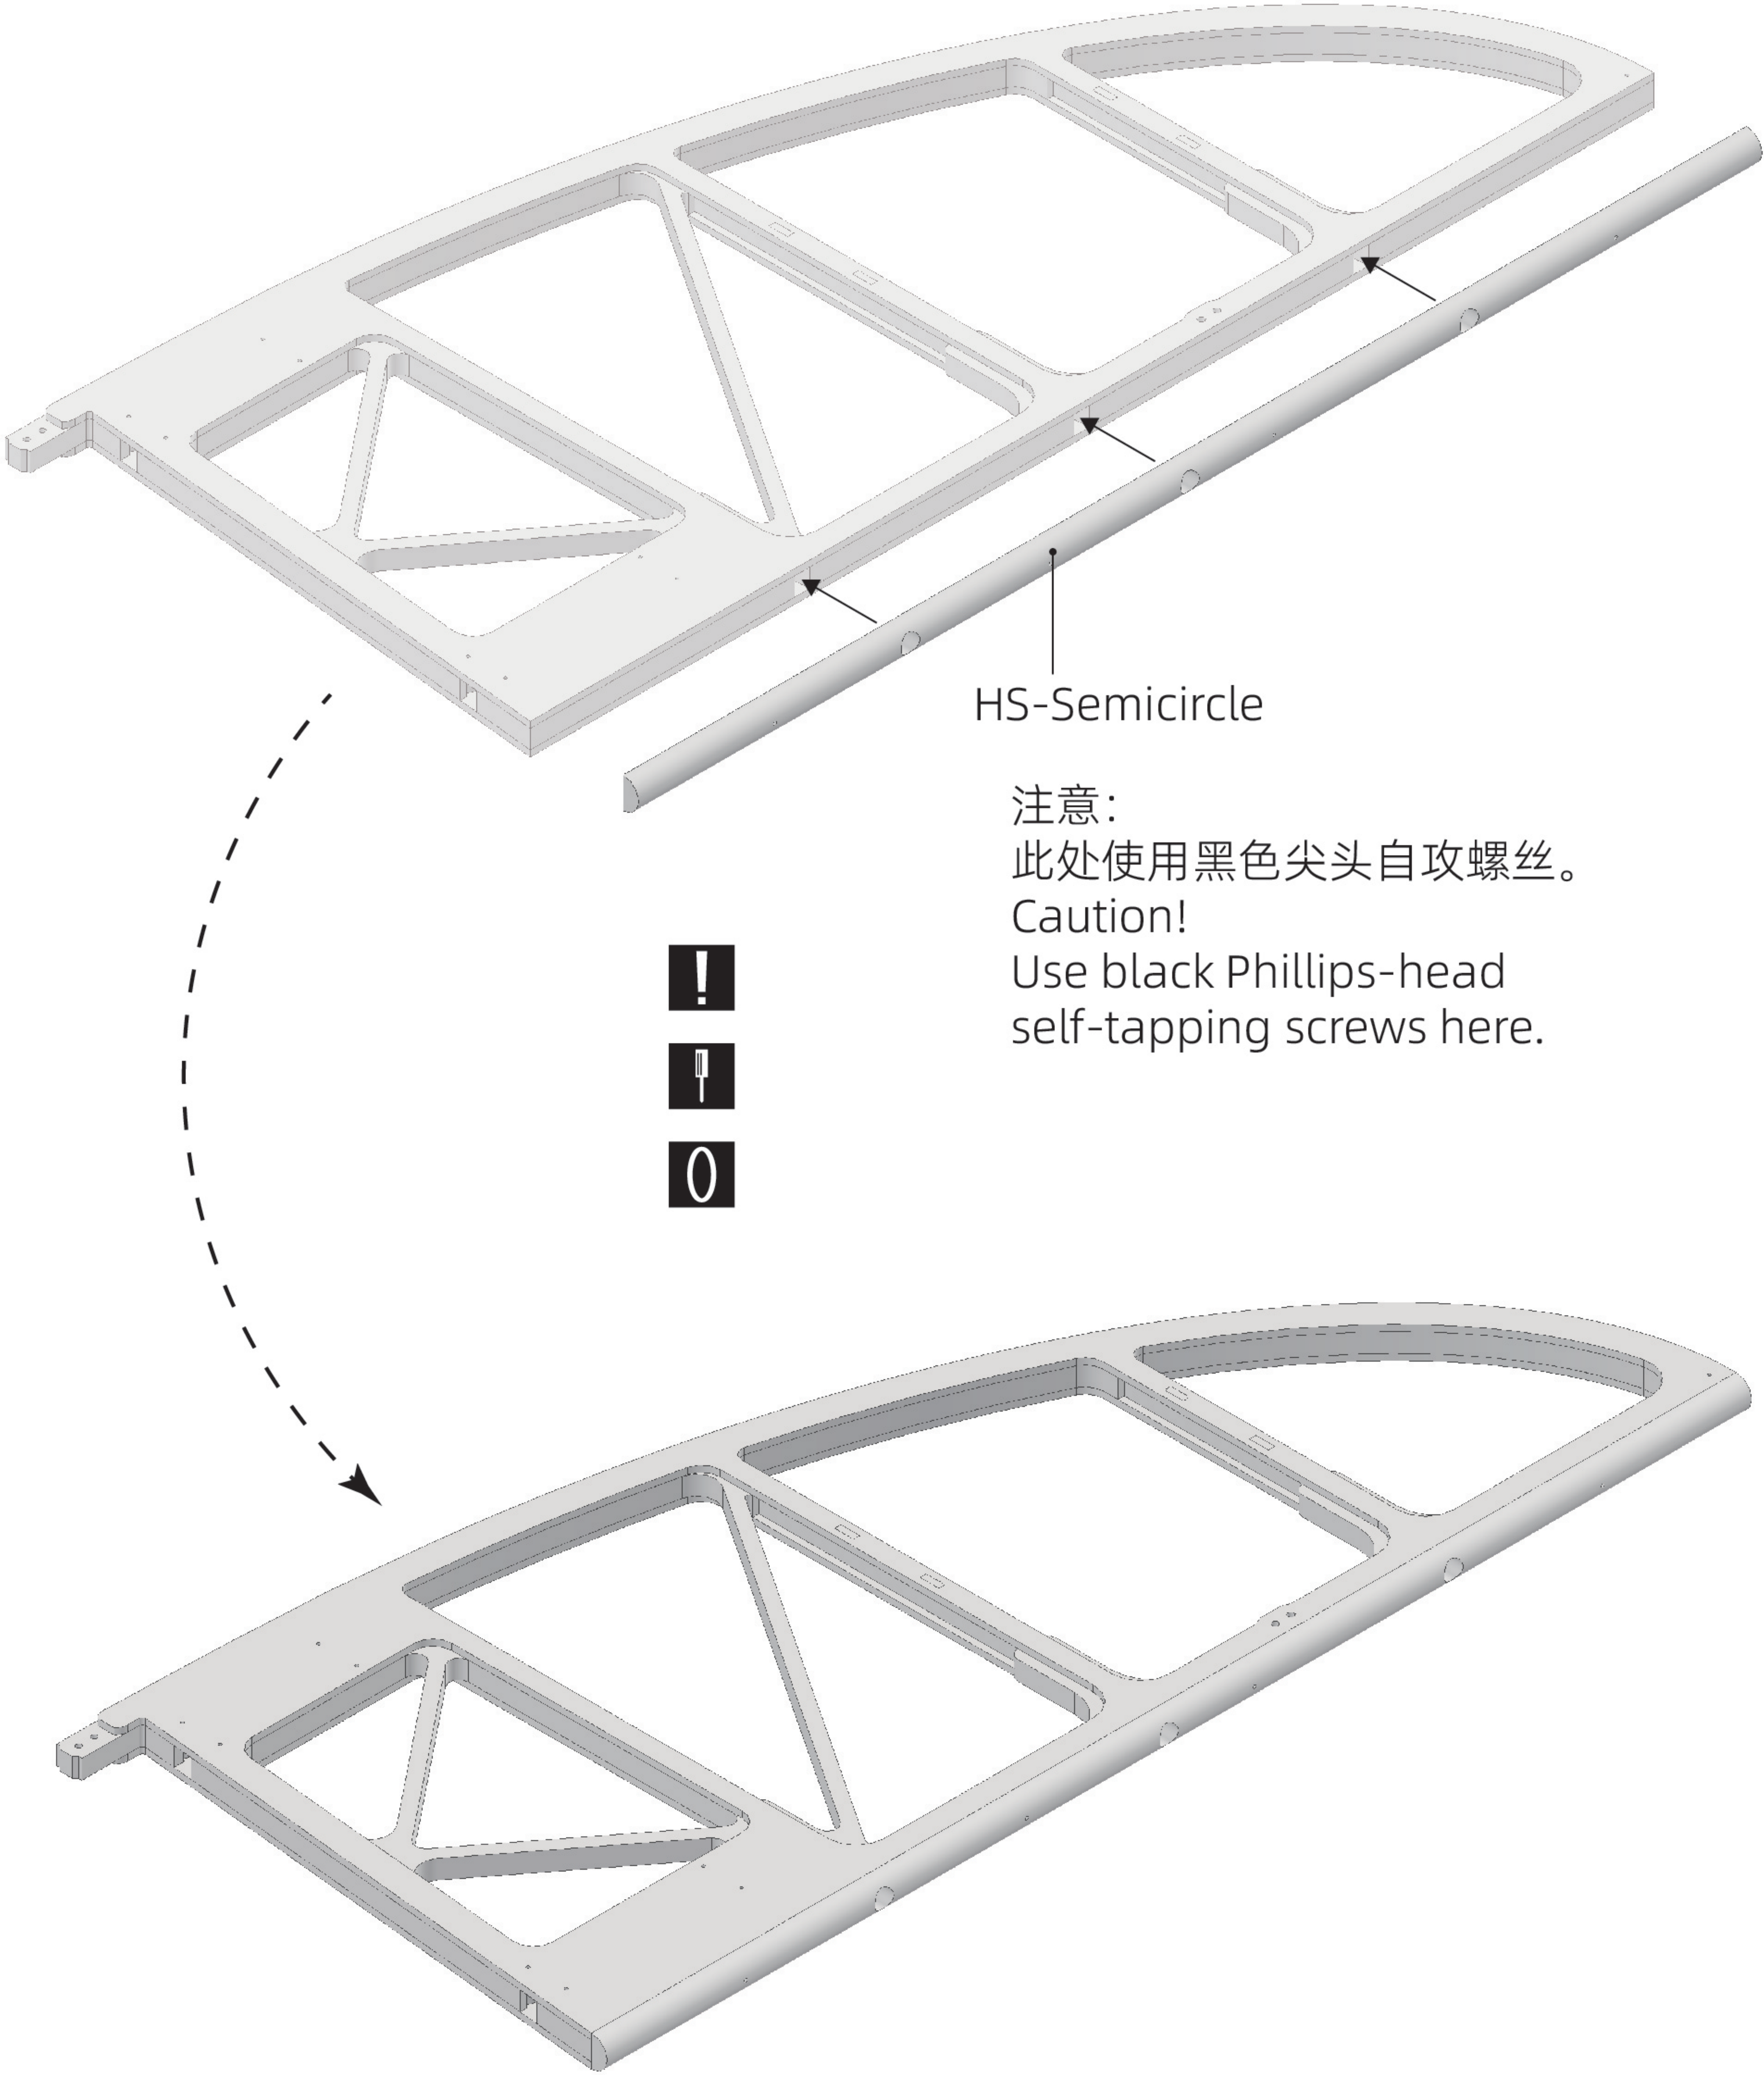


HS-Semicircle

注意：
此处使用黑色尖头自攻螺丝。
Caution!
Use black Phillips-head
self-tapping screws here.



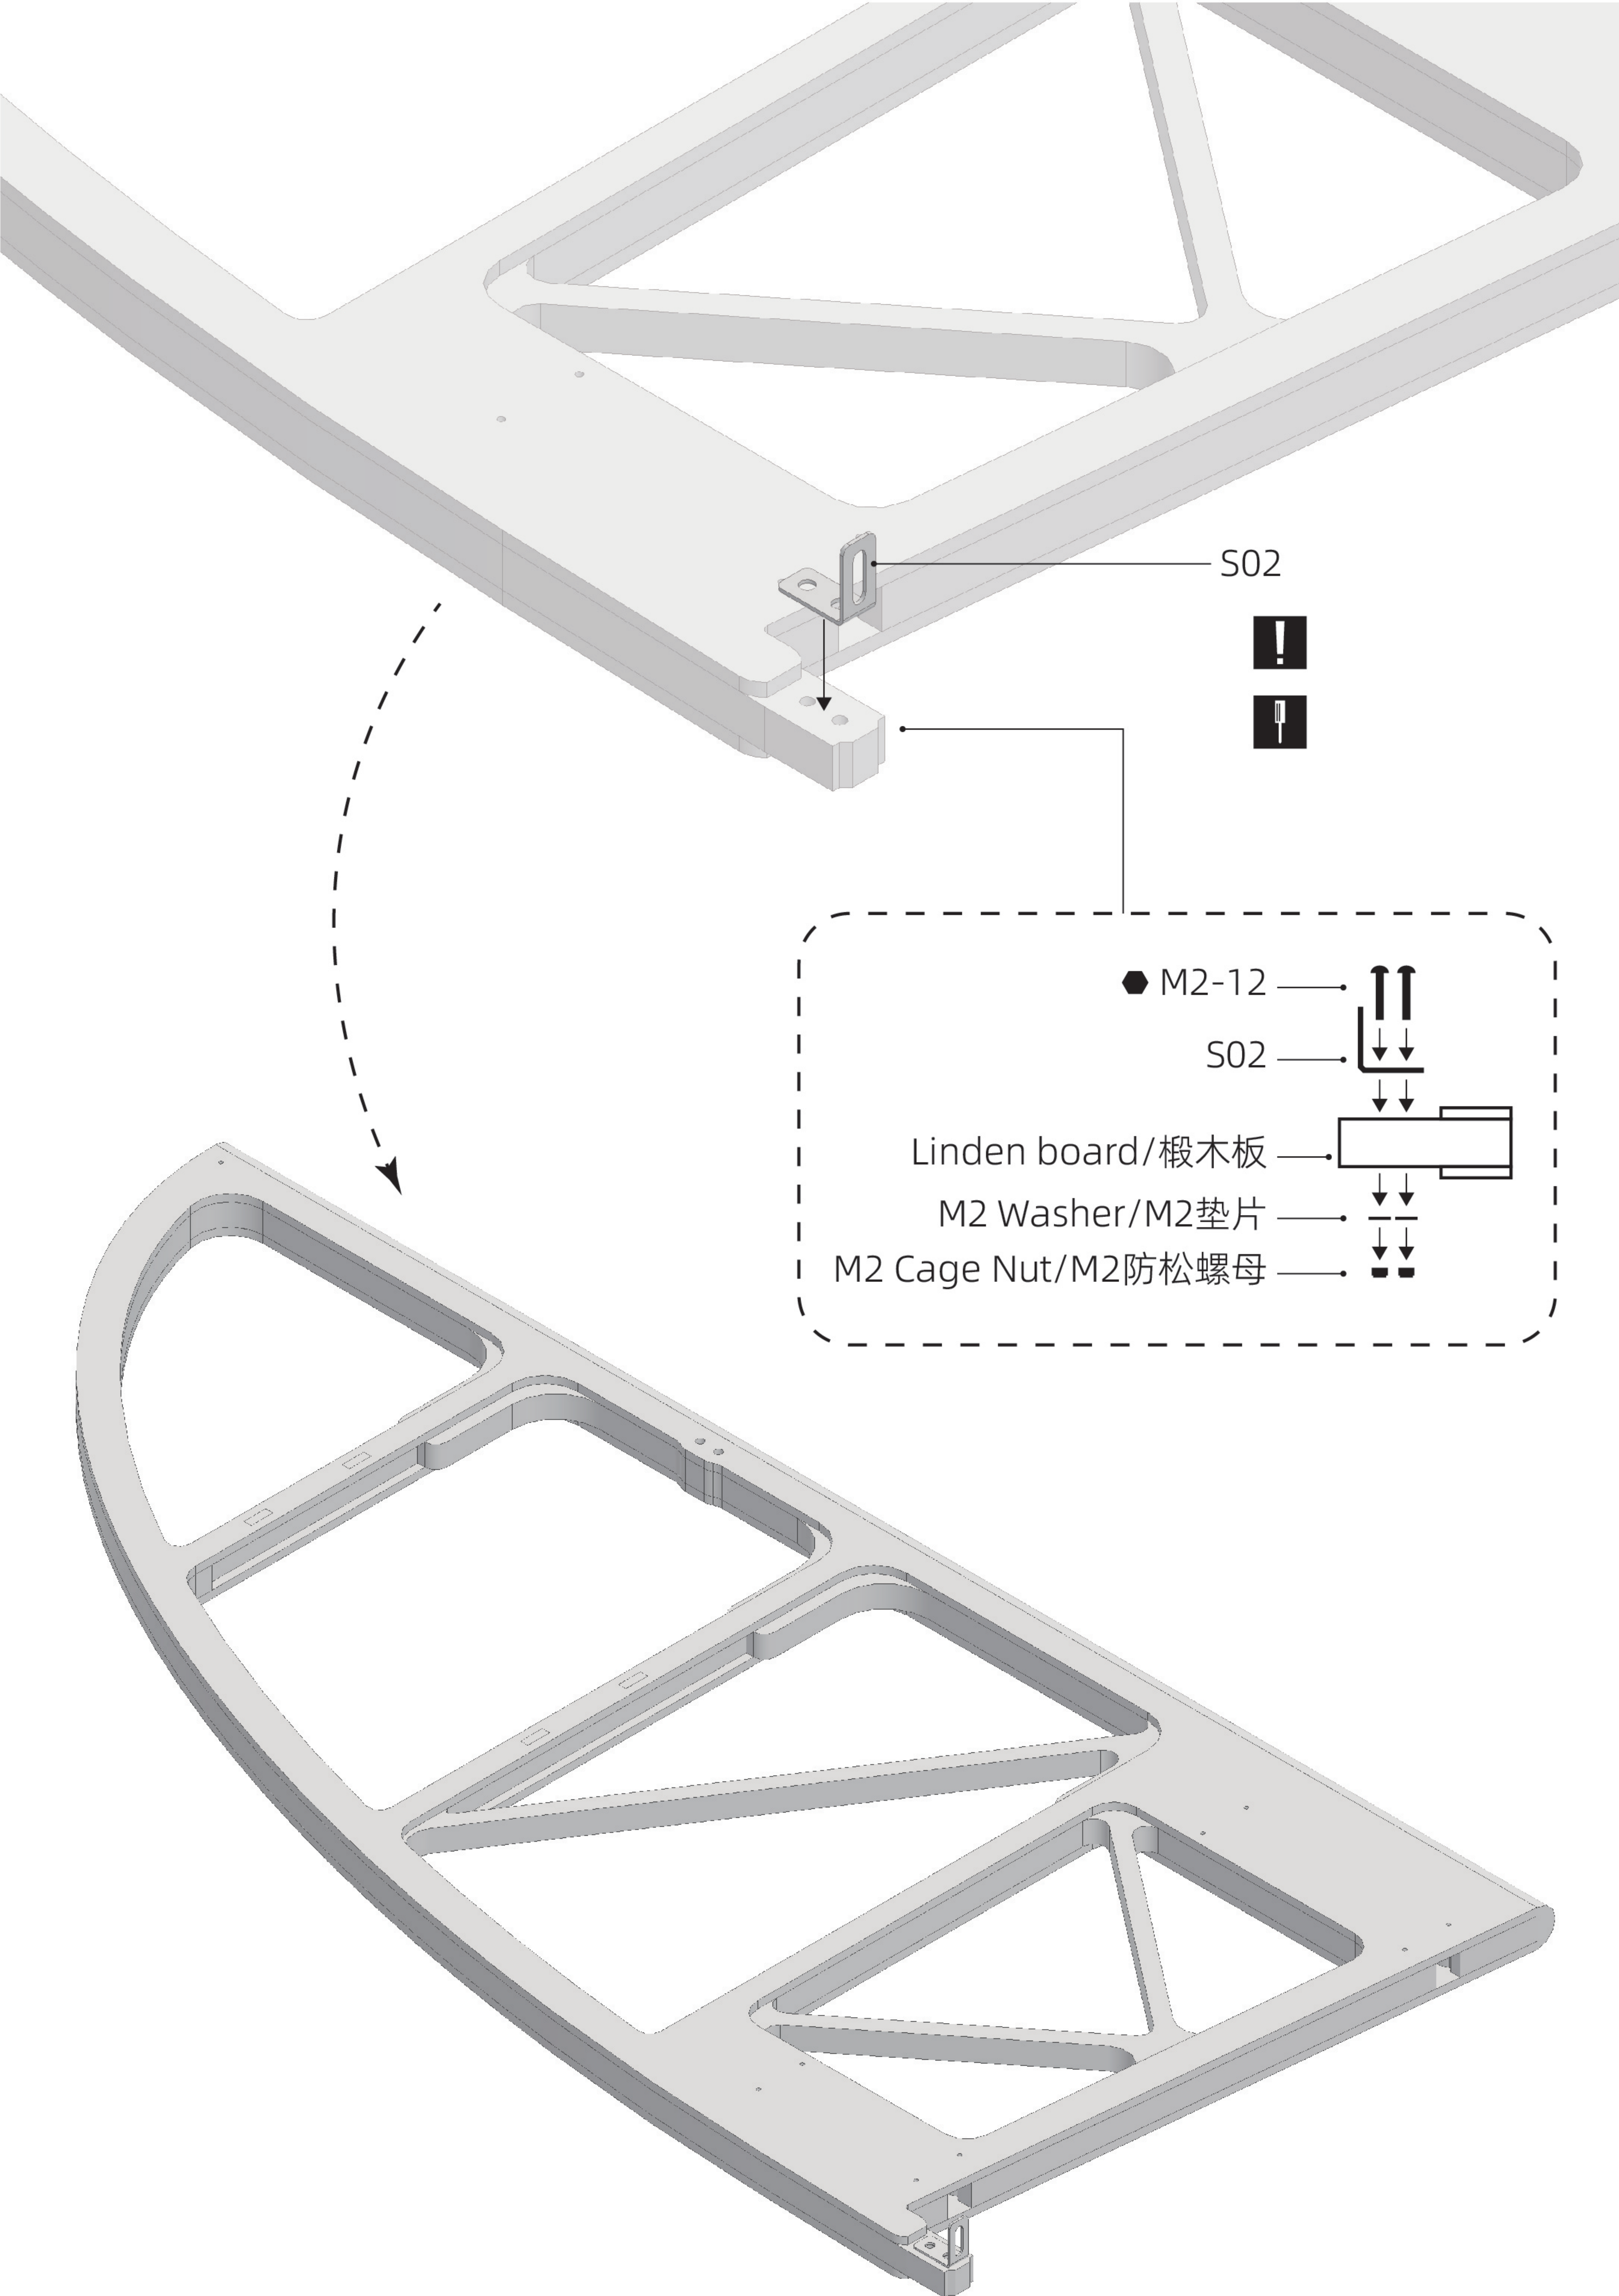


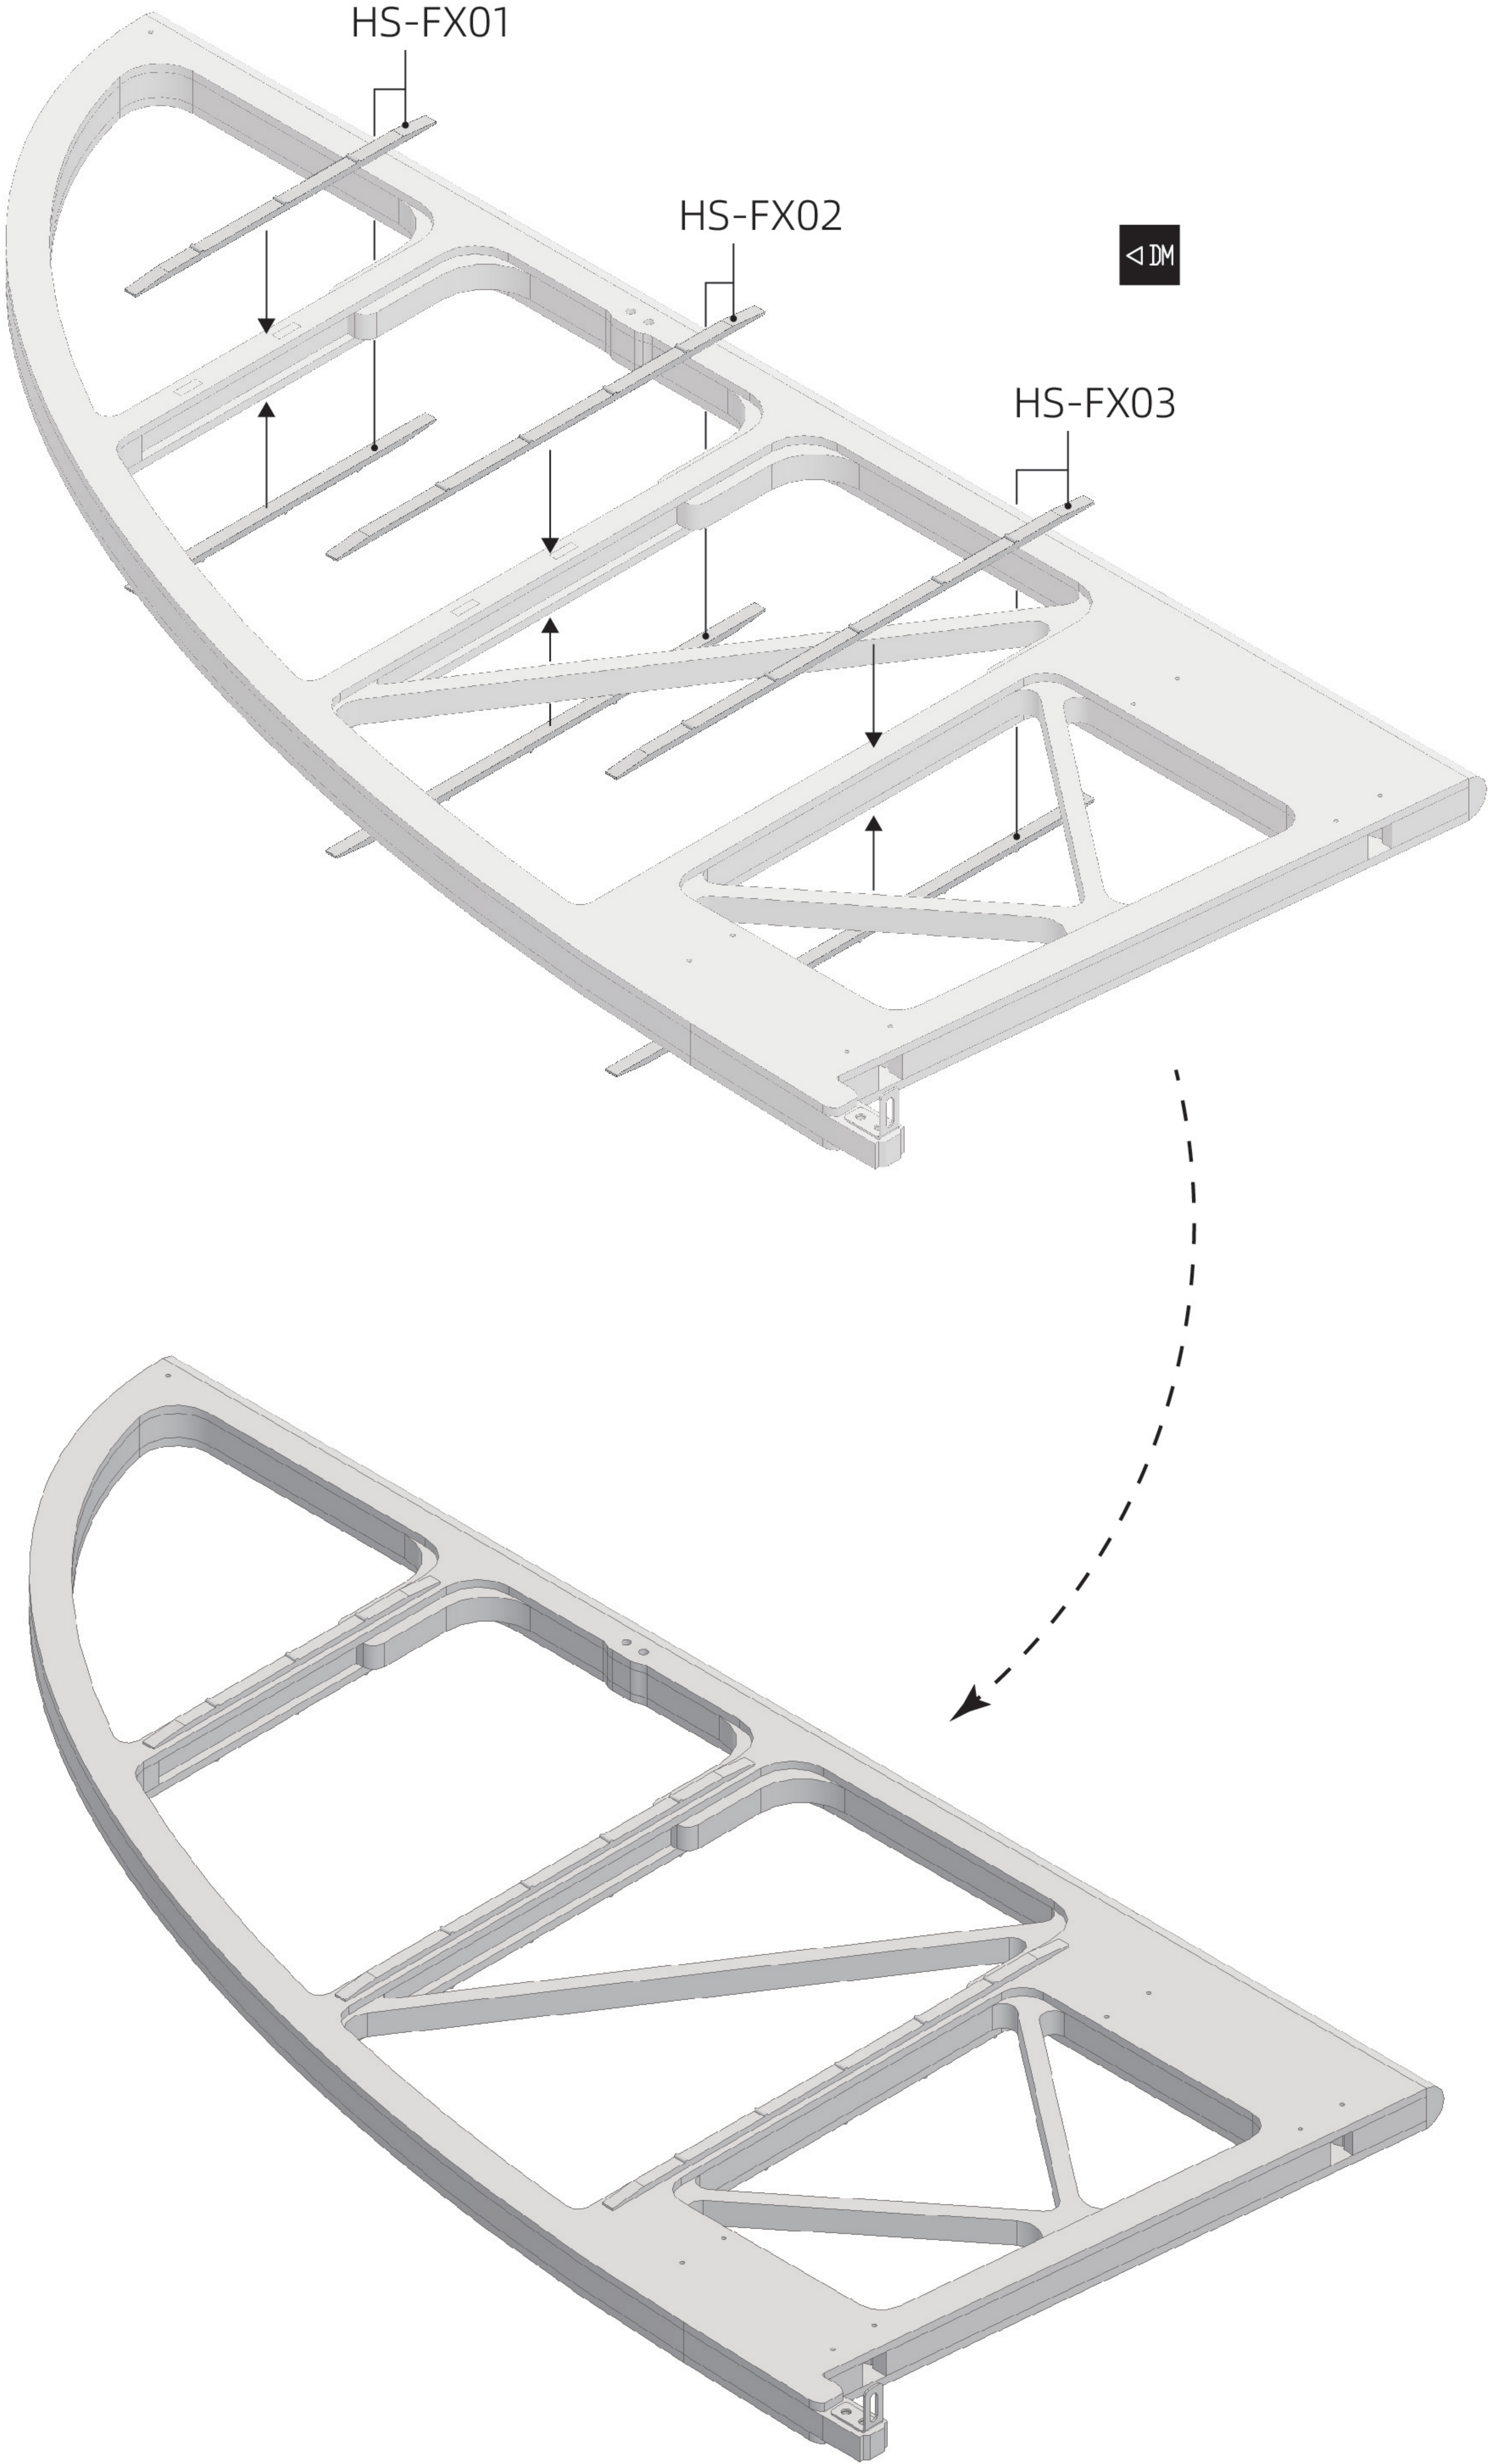

L




虚线边需要打磨成圆角。
The edges marked by dashed lines need to be sanded to rounded corners.

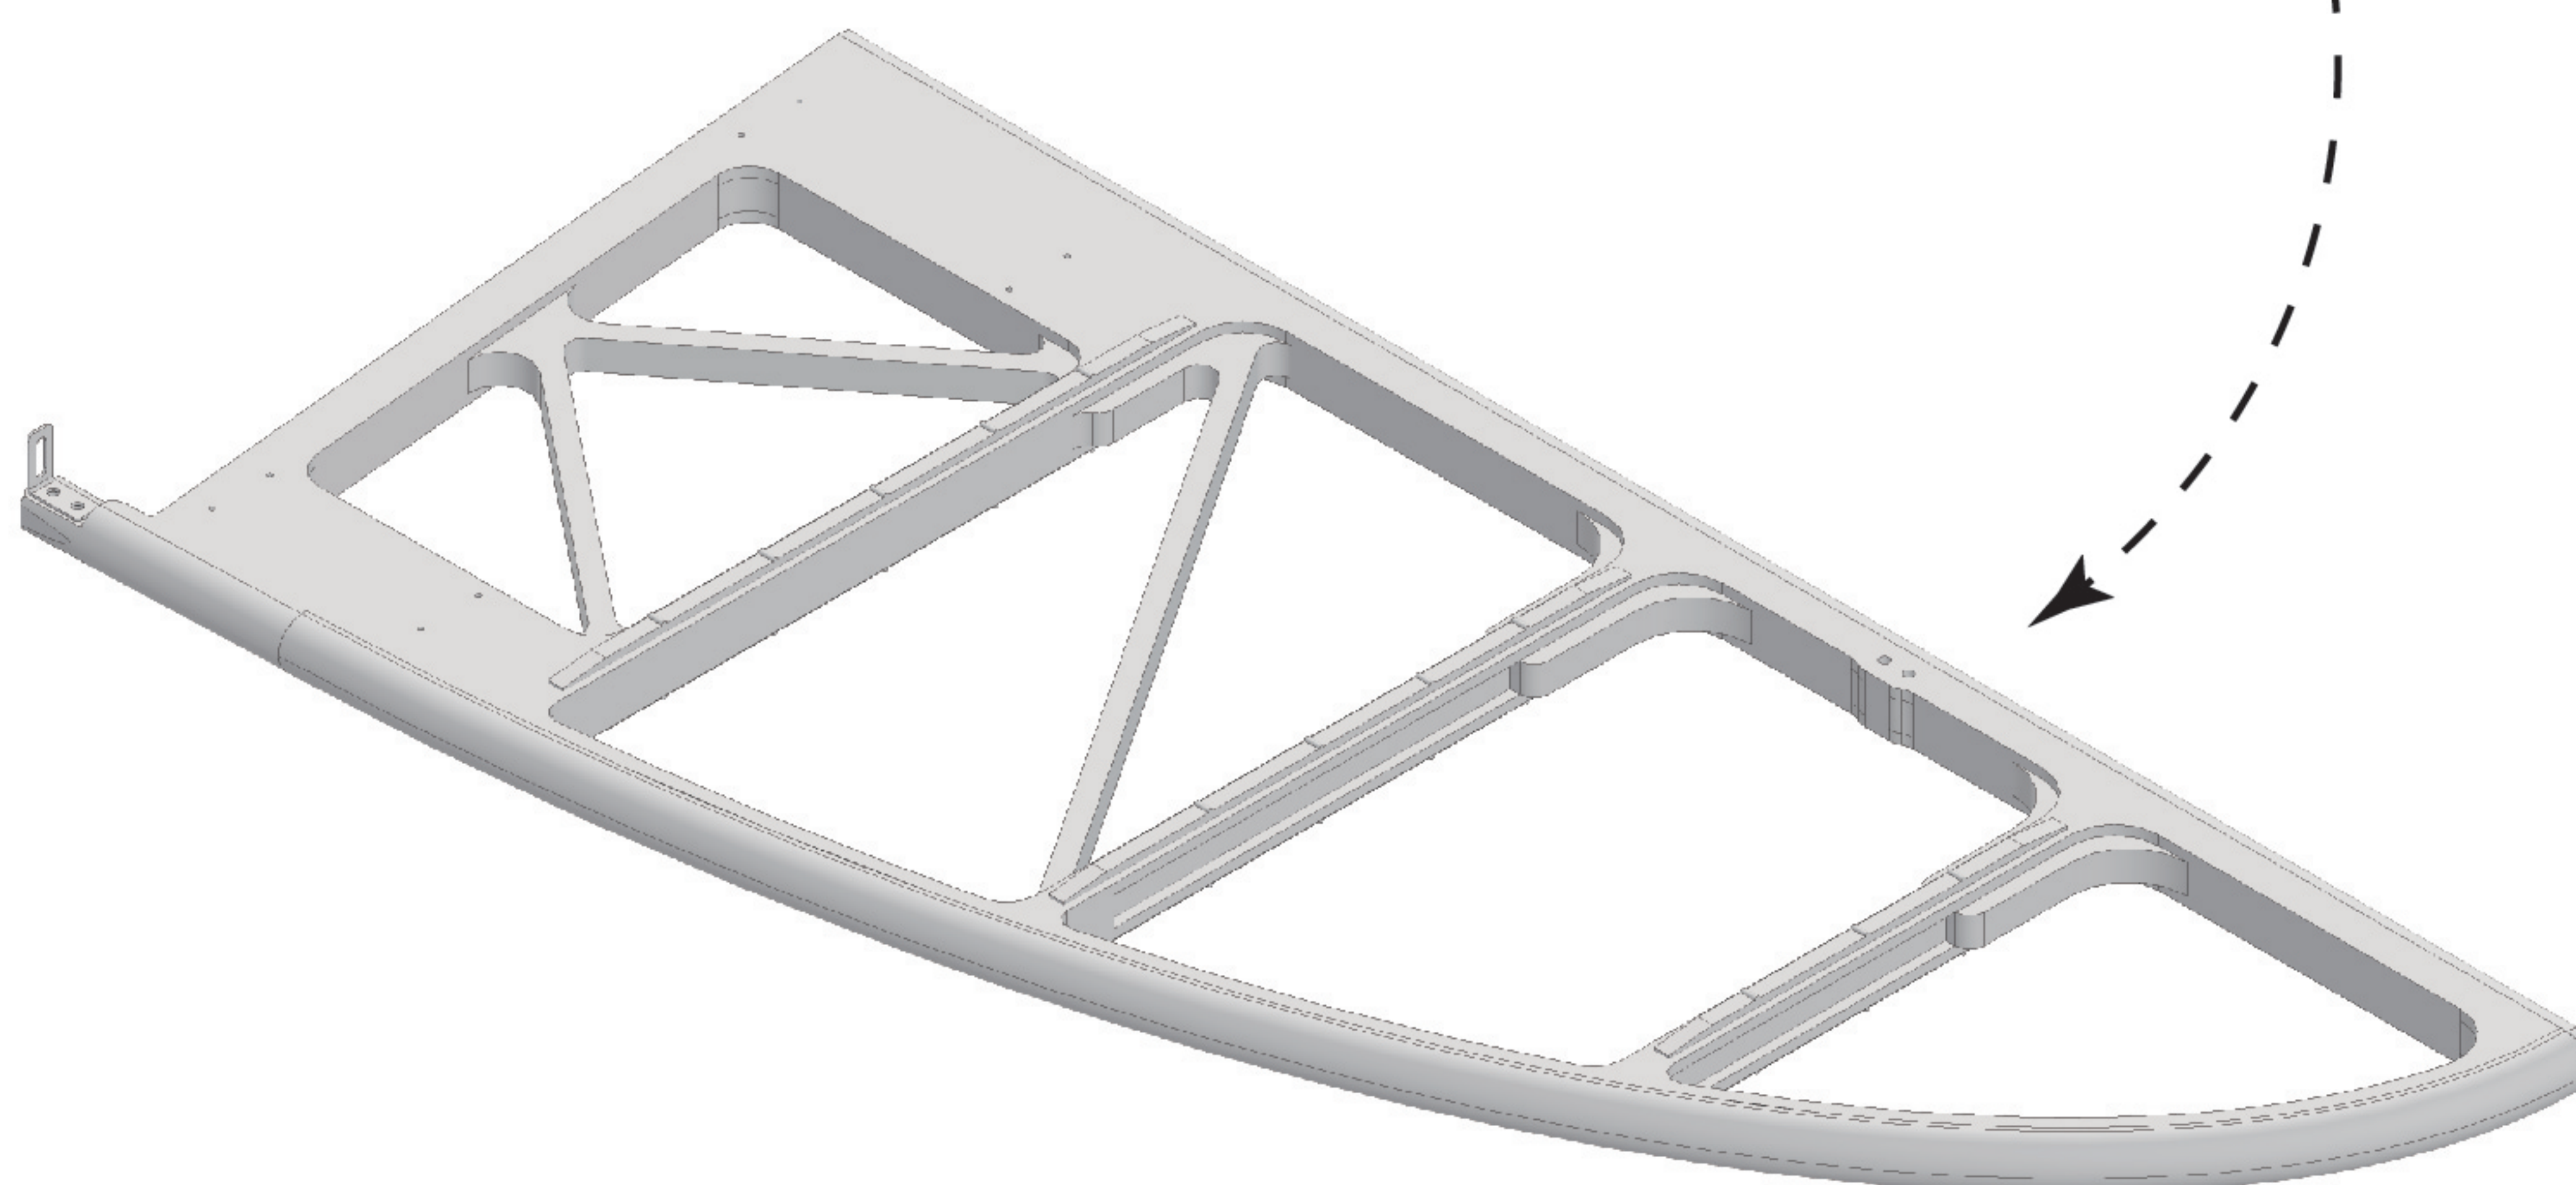

虚线边需要打磨成圆角。
The edges marked by dashed lines need to be sanded to rounded corners.

R

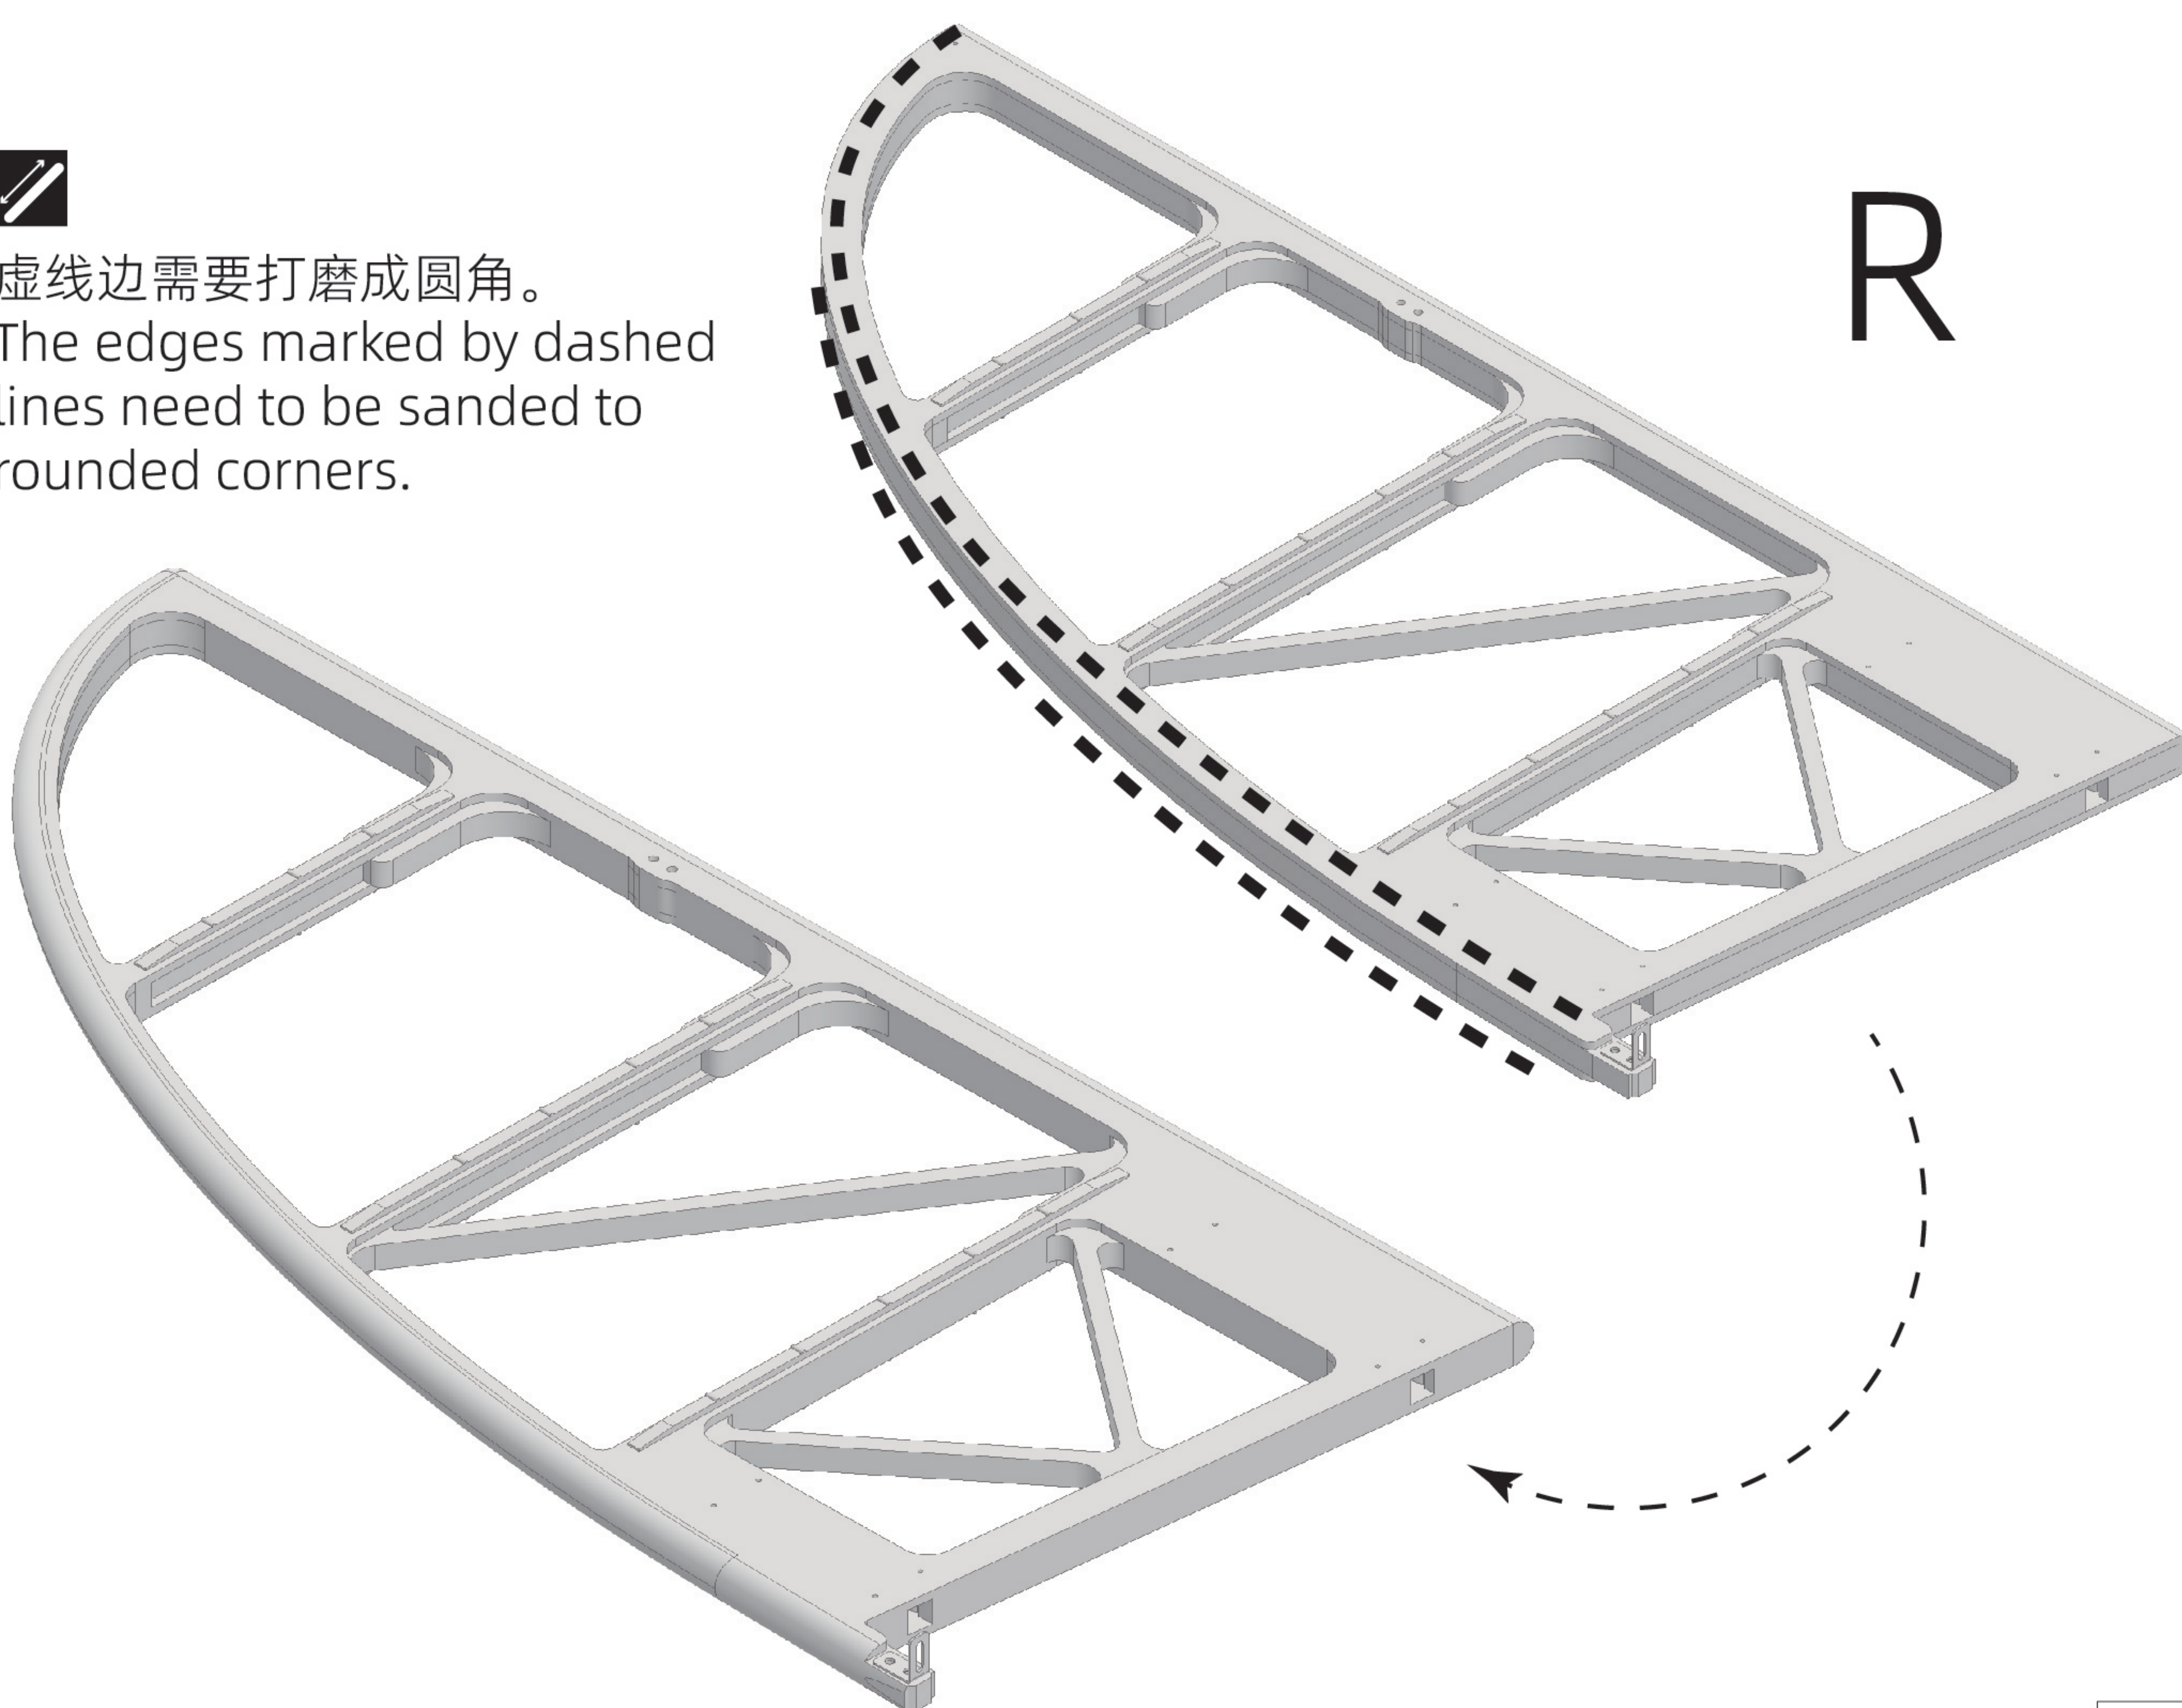



金属管薄，小心割手！
注意安全！

Note: The metal tubes are thin and may cause hand lacerations. Please handle with care and prioritize safety.

金属管插入时可使用润滑膏，
例如固体肥皂。
Lubricating paste may be used
when inserting the metal tube,
e.g., solid soap.

注意！

- 1、请确保金属管插入长度。
- 2、如金属管插入不顺，请打磨内壁，金属管表面涂抹少量润滑膏，待插入顺利后即可。
- 3、建议参考“07-1-1”页。

Caution!

- 1.Ensure the insertion depth of the metal tube.
- 2.If inserting the metal tube is difficult, polish the inner wall and apply a small amount of lubricating grease to the surface of the metal tube. Proceed once insertion can be done smoothly.
- 3.For reference, please refer to page '07-1-1.

